

# Tiffany

## **Herb, Spice & Coffee Bean Grinder**

### **User Manual**

Model Number: CG9101



READ AND SAVE THESE INSTRUCTIONS

## IMPORTANT

---

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience, record the complete model number (located on the product identification plate) and the date you received the product together with your purchase receipt, and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## IMPORTANT SAFEGUARDS

---


**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and keep for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent or a qualified technician in order to avoid a hazard.
- Unplug from power outlet when not in use, before putting on or taking off parts and before cleaning.
- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not immerse the base in any liquid or place in the dishwasher. Damage to the unit will occur if submerged in liquid. Only the transparent lid cover may be immersed.
- Close supervision is necessary when the appliance is being used near children or infirm persons.
- Ensure fingers are kept well away from moving parts.
- Do not remove the transparent lid until the blade has completely stopped.
- Do not attempt operation without the lid being in place.
- The use of accessories not recommended by the manufacturer may cause injuries to persons.
- Check grinding chamber for presence of foreign objects before using.
- This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance other than for its intended use. This appliance is for household use only.
- Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

## FEATURES

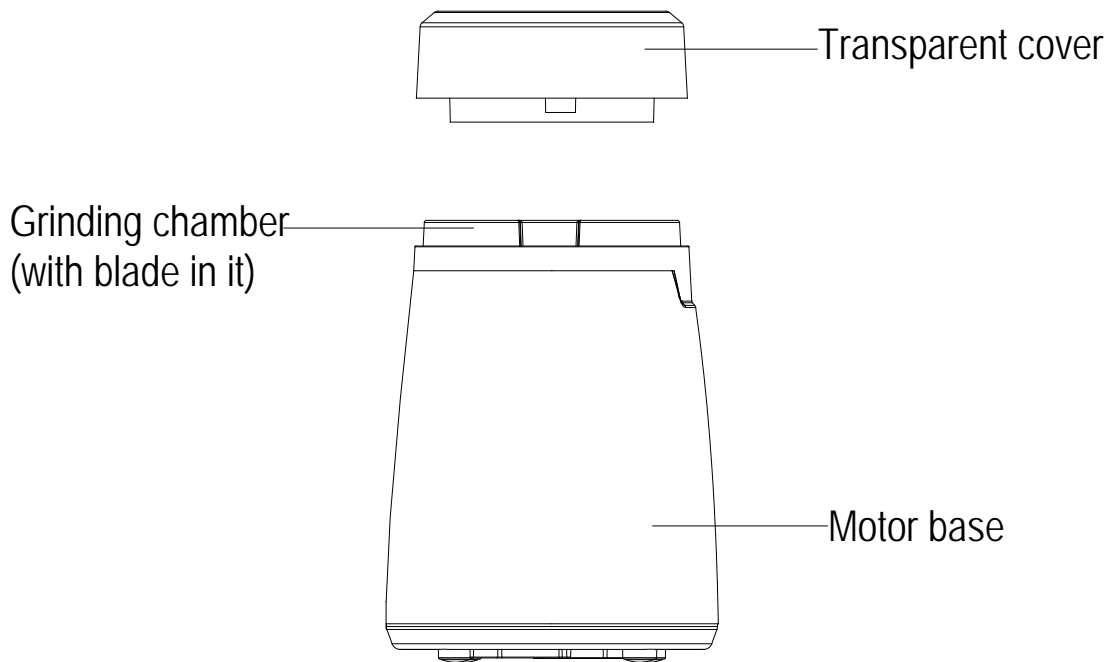


## BEFORE FIRST USE

Remove all packaging materials, including any labels etc. Wash the transparent cover in warm soapy water, and wipe out the grinding chamber with a soft damp cloth. Use extreme care, as the blades are sharp. Ensure all parts are completely dry prior to using.

## INSTRUCTIONS

1. Place the grinder on a flat stable surface.
2. Remove the lid (make sure the grinding chamber is clean & empty).
3. Measure the desired amount of herbs, spices, coffee etc. **QUANTITY MUST NOT EXCEED 30g.**
4. Replace the transparent cover, and align the grooves – refer to Fig.1
5. Plug into an appropriate power outlet.
6. Hold the motor base with one hand, while turning the cover clockwise with your free hand. The appliance will operate for as long as you hold it in this position.
7. To stop grinding, release the cover. If you want to begin grinding again, repeat step 6.

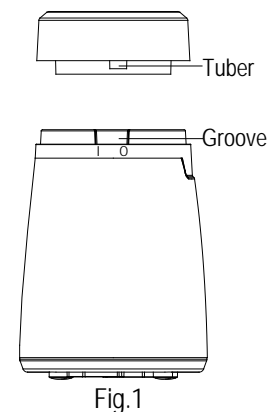

**NOTE:** Do not operate this appliance for longer than 30 seconds at a time. Allow the appliance to cool down for 3 minutes before starting up again.

**NOTE:** You can view the consistency of the grounded substance by looking through the transparent cover.

**WARNING:** If you want to remove the cover to check the consistency of the substance, please ensure the blades come to a complete stop before doing so.

8. Once the desired grain has been achieved, unplug from the power outlet.
9. Remove the transparent cover and remove the ground substance.

## CLEANING AND STORING

---

1. **CAUTION:** Be sure to switch off at power outlet and unplug this appliance before commencing any cleaning. To protect against electrical shock, do not immerse the cord, plug or motor base in water or any other liquid. After each use, always make sure the plug is removed from the power outlet.
2. **Please note:** the cover is not dishwasher safe. Rinse and dry thoroughly. Never immerse motor base or grinding chamber in water. Wash the cover in warm soapy water.
3. Wipe the grinding chamber and blades with a lint-free cloth. Extreme care should be exercised as the blade is sharp.

## PLEASE NOTE

---

- This appliance will not grind anything that is sticky or extremely hard.
- This appliance will not make pastes of any kind.

## CUSTOMER SERVICE

---

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

\*This product may vary slightly to the product illustrated due to ongoing product development.