

HELLER

500W Food Processor

User Manual

Model Number: FP9042



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience, record the complete model number (located on the product identification plate) and the date you received the product together with your purchase receipt, and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and keep handy for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Before using, check that the voltage of the wall outlet corresponds to that shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Always ensure the appliance is switched OFF, prior to plugging into the power outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent or a qualified technician in order to avoid a hazard.
- To protect against risk of electrical shock, do not put the motor base into water or any other liquid. To disconnect, turn the control to "Off", then remove plug from power outlet by grasping the plug, not the cord.
- Close supervision is necessary when any appliance is used by or near children.
- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor. A scraper or spatula may be used, but must be used only when the Food Processor is not running.
- Avoid making contact with moving parts.
- Never feed food by hand. Always use the food pusher.
- Before removing the lid from the jar, switch off the unit and wait until the blades have come to a complete stop.
- Do not use fingers to scrape food away from the disc while the appliance is operating.
- Be certain the lid is securely locked into place before operating the appliance.

- Always remove the blade assembly before pouring contents from jar.
- Be sure to switch off the appliance after each use. Make sure the motor stops completely before disassembling.
- Do not put your fingers or other objects into the unit opening while it is in operating. If food becomes lodged in the opening, use the food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble to remove the remaining food.
- The metal blades and disc is extremely sharp, handle with care. Always hold the blade assembly by the finger grip or stem, away from the cutting edge, both when handling and cleaning.
- To reduce the risk of injury, never place processing blade or circle blade assembly on drive shaft without the processing jar locked properly in place.
- Do not leave this appliance unattended during use.
- If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water.
- To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
- Do not use outdoors.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- **CAUTION:** Never immerse in water, unplug before inserting or removing parts.
- **CAUTION:** DO NOT OPEN LID UNTIL BLADES STOP.
- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not operate product with damp or wet hands.
- Close supervision is necessary when the appliance is being used near children or infirm persons.
- The use of accessories not recommended by the manufacturer may cause injuries to persons.
- This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance other than for its intended use. This appliance is for household use only.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

FEATURES



CONTROL PANEL:



OFF: When you want to stop the appliance during operation or when the machine finishes processing or when the unit is not in use, always press the “OFF” button.

PULSE: Press and hold the button for short or delicate processing tasks. PULSE is used most frequently, as it gives greater control over food processing and fineness.

LO: Low speed, it is suitable for kneading or mixing.

HI: High speed, it is suitable for chopping or slicing/chipping.

BEFORE FIRST USE

Before first use, carefully unpack the food processor and its attachments and remove any packaging material, labels or stickers. Clean all parts except the motor base. Handle the “S” blade or circle blade assembly with extreme care as they are very sharp.

INSTRUCTIONS

CHOPPING:

1. First, assemble the driving shaft onto the motor base, ensuring it is clipped into position.
2. Place the jar on the motor base and turn it clockwise until it locks into position. Ensure it is assembled correctly; otherwise the appliance will not operate.
3. Insert the “S” blade into the driving shaft in the jar securely.
4. Place the prepared food into the jar. The food must be cut into small sizes. During chopping, you can add food through the feeding funnel with the pusher. Never use food or your fingers to push the food into the feeding funnel.
5. Place the lid onto the jar and turn it clockwise until the tab of the lid clicks into the slot on the jar handle. Make sure it is locked into position correctly - otherwise the appliance will not operate.
6. Connect the appliance to the power supply. Press the corresponding speed button according to your task. You can chop up to 400g of the following foodstuff:
 - **Hard foods:** Cheese, dried fruits, carrots, celery etc.
 - **Soft foods:** Onions, spinach, herbs, garlic etc.
 - **Meat:** Raw and cooked – must be boned and sliced.

CAUTION: The total operating time should not be more than 30 seconds at a time.

7. Press the “OFF” button and unplug the appliance after chopping is complete. Grasp blade by its hub and remove. Unlock jar by turning it in anti-clockwise away from its base, and lift it off. Empty the processed food.

CAUTION: The “S” blade is extremely sharp, handle with care.

CLEANING:

1. Disconnect the power supply before cleaning.
2. Empty the jar, dismantle all detachable parts and rinse them in warm soapy water. Extreme caution must be taken when handling the blade as it is very sharp. All the accessories except motor base are dishwasher safe; however the temperature setting must not exceed 70 degrees. Dry thoroughly.
3. Wipe the outside of the base with a damp cloth. Never immerse it in water. Dry thoroughly. Ensure the interlock area is free of any food particles.

QUICK WASH UP:

Between processing tasks, pour in some water into the jar, press and hold the PULSE button for several seconds for quick cleaning.

SLICING/CHIPPING:

1. First, assemble the driving shaft onto the motor base, ensure it is clipped into position.
2. Place the jar on the motor base and turn it clockwise until it locks into position. Ensure it is assembled in place correctly; otherwise the appliance will not operate.
3. Insert the circle blade assembly into the driving shaft in the jar.

Note: if you want to slice, ensure the surface with the slicing blade is upward. If you want to chip, ensure the surface with the chipping holes face upwards.

4. Place the lid onto the jar and turn it clockwise until the tab of the lid clicks into the jar handle. Make sure it is locked in position correctly otherwise the appliance will not operate.
5. Press the corresponding speed button according to your task.

Note: The slicing/chipping blade can slice/chip potatoes, onions, cucumbers, beetroot, apples, carrots etc.

6. Use the pusher to feed food into the feeding funnel. The food shall be cut into a proper size suitable for the feeding funnel (the length of food shall be less than 120mm). You can slice/chip up to 500g of food.

CAUTION: The total operating time should not more than 3 minutes.

7. Press the "OFF" button and unplug the unit after processing. Remove the circle blade assembly by its hub. Unlock the jar by turning it in anti-clockwise away from its base, and lift off. Empty the processed food.

CAUTION: The circle blade assembly is extremely sharp, handle with care.

CLEANING

1. Disconnect the power supply before cleaning.
2. Empty the jar, dismantle all detachable parts and rinse them in warm soapy water. Extreme caution must be taken when handling disks as they are very sharp. Then dry thoroughly.
3. Wipe the outside of base with cloth. Never immerse it in water as electric shock is possible to occur. Then dry thoroughly. Ensure the interlock area is free of food particles.

NOTE: Some food may discolor the circle blade disc. This is normal and will not harm the plastic or affect the flavor of the food. Rub with a cloth dipped in vegetable oil to remove any discoloration.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.