

HELLER

madison
series

USER MANUAL

2 Slice Toaster

Model Number: HMT122 Series



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Read all instructions before, and follow whilst using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock do NOT immerse cord, plug or body of unit in water or liquid.
- Close supervision is necessary when any appliance is used near children or infirm persons.
- This appliance is not for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Contact customer service for replacement, examination, repair or adjustment.
- If the supply cord is damaged, it must not be replaced by the manufacturer or similarly qualified person in order to avoid a hazard. No user serviceable parts are inside.
- A distance of at least 10cm should be maintained between the toaster and the wall.
- Do not place below or near curtains or other combustible materials.
- The use of accessory attachments NOT recommended by the appliance manufacturer may cause injuries.
- Do not use on an unstable surface, always use on a flat steady surface.
- Do not use outdoors or in damp moist areas.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric element, or in a heated oven.
- To disconnect, press CANCEL, then grasp the plug and remove from wall outlet. Never pull by the cord.
- Do not use appliance for other than its intended purpose.
- Do not move HOT appliance before allowing to cool.
- Do not cover or place items on top of the unit.
- Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
- Do not toast buttered breads.
- Never force food into toasting slot, they should fit freely between the guard wires.
- Press CANCEL to stop any cooking function.
- Clean out accumulated crumbs frequently to avoid risk of fire or toaster malfunction.

- This appliance is not a toy. Young children should be supervised to ensure they do not play with the appliance.
- Do not lift the toaster by placing your fingers inside or near the bread slots.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch the internal parts of the toaster with any implement.
- To avoid the possibility of fire, do not leave toaster unattended during use.
- **DO NOT IMMERSE THE TOASTER IN WATER.**
- If toast of small bread slices is less than 85mm in length, you must pay attention to the potential risk of burning when taking out the slices.

FEATURES

Extra wide toasting slots x 2

Removable crumb tray



High lift lever

Variable browning control

Defrost button

Cancel button

Reheat button

BEFORE FIRST USE

Carefully remove the toaster from the box. Remove all packaging from inside the toasting slots. You may wish to retain the packaging.

Before using your toaster for the first time, you need to cure the elements. This will remove the protective coating. This may smell slightly, but it is nothing to worry about, just ensure the room is well ventilated.

Check that there is nothing between the slots, set the variable browning control to the highest setting and operate the toaster without bread by pressing down on the high lift lever. When the cycle has completed, leave it to cool down fully, and then you can use it normally.

PREPARATION

1. Place the toaster upright, on a stable, level, heat resistant surface.
2. Do not put it on or near anything that may be damaged by even moderate heat.
3. Do not place near or below curtains or other combustible materials.
4. Ensure the cable doesn't overhang, and can't be caught or tripped over.
5. Plug it into a wall socket.

FUNCTIONS

Cancel button: The toasting process can be cancelled/stopped at any time by pressing the cancel button.

Defrost button: The defrost function allows you to toast bread straight from the freezer. Insert the bread into the toasting slots, press the high lift lever down and press the defrost button. The defrost button will illuminate. Your toaster will extend the cooking time to allow the bread to defrost and toast. Please still keep and eye on your toast to ensure it does not burn.

Reheat button: the reheat function will allow you to heat up toast that has cooled or gone cold. Press the high lift lever down, then press the reheat button. The reheat button indicator light will illuminate. As your bread is already toasted, keep an eye on your toast to ensure it does not burn. This function can only be used for dry toast, not buttered toast.

High lift lever: The high lift lever helps you to remove the toast. When toasting has finished, simply lift the loading handle upwards from its resting position to raise the toast. This is ideal for smaller items such as crumpets.

TOASTING

WARNING: Never force bread into the toasting slots. Bread should fit easily into the slots. Never toast slices of bread that have been buttered.

1. Set the required level of toasting by turning the variable browning control from left to right. The higher the setting the darker the toast will be.
2. Place the bread into the toasting slots. You can toast one or two slices of bread at a time, but only place one slice of bread in each slot. Press the high lift lever down until it locks into place. **NOTE:** the lever will not lock into place if your toaster is not connected to a power supply.
3. When the toasting cycle has finished, the loading handle will rise and the toasted bread can be removed. You can lift the loading handle upwards beyond its rest position to help you remove the toast.
4. If the toast is not cooked enough, it can be toasted again. Turn the variable browning control to a lower setting and keep an eye on the toast to ensure it doesn't burn.

NOTE: In the unlikely event that the bread becomes jammed, switch off the toaster at the power outlet before carefully easing out the bread taking care not to damage the heating element.

WARNING: Do not use a knife or any other implements to remove jammed bread!!!

HINTS & TIPS

1. Old (yesterday's) bread contains less moisture than fresh bread, so it makes a crisper toast.
2. Breads that vary in thickness, size and freshness will all brown differently.
3. Thin bread cooks faster than thick bread, so you should use a lower setting.
4. Sweet bread products brown much more quickly than ordinary bread, so they should be toasted on a lower setting.

CARE & MAINTENANCE

1. Unplug the toaster when not in use, before moving, or cleaning. Let it cool completely before cleaning or storing.
2. Wipe the outside of the toaster with a soft damp cloth. If necessary use a little dish washing liquid.
3. Do not let anything enter the toasting slots, you might damage the elements.
4. Do not immerse the toaster in water or any other liquid!
5. Do not use harsh or abrasive cleaning agents or solvents.

CRUMB REMOVAL

It is important that crumbs are not allowed to build up inside the base of the toaster. Allowing crumbs to build up is unhygienic, and could cause a fire hazard, so remove them frequently.

Crumbs can be removed by simply sliding out the crumb tray and tipping the crumbs out. Always make sure that your toaster has completely cooled down and is disconnected from the power supply. Always replace the crumb tray before using the toaster.

HELLER

madison
series

1.7L Cordless Rocket Kettle

User Manual

Model Number: HMRK122 Series



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- To protect against electrical hazards do not immerse the power cord, plug, power base, or kettle in water or any other liquid.
- Do not use in the bathroom or near any source of water. Do not use outdoors.
- Always use the appliance handles as some parts may be hot.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always turn off and unplug from the wall power outlet before cleaning the appliance.
- Turn the power off at the wall power outlet when not in use.
- To disconnect, turn off the wall power outlet, then grasp and pull the plug from the wall outlet. Never pull by the cord.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By clients in hotels, motels and other residential type environments
 - Bed and breakfast type environments
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
- There are no user serviceable parts. If repairs are required, they must be performed by the manufacturer or a suitably qualified person in order to avoid hazard.
- Do not use on an inclined plane or unstable surface.
- Do not move the kettle while it is switched on.
- Ensure the lid is properly closed when in use.
- Do not open the lid while the water is heating or boiling.
- Always take care when pouring. Pour slowly, do not over-tilt the kettle.
- The scalding hazard remains long after the water has boiled. Keep the kettle, power base, and the power cord away from the edge of tables or countertops and out of reach of children or infirm persons.
- Only use the kettle with the power base provided and vice versa.
- Wind excess cable beneath the power base.
- Do not place on or near any heat sources.

- Do not use this appliance for other than its intended purpose of heating water.
- Do not switch on the kettle unless there is at least two cups of water.
- Do not fill past 'max', otherwise boiling water may spit from the spout.
- Do not use without filter fitted.
- Do not leave the product unattended when in use or where it may be touched by children or infirm persons.
- Do not use alkaline cleaning agents or harsh abrasives when cleaning this appliance. Follow the instructions in the 'Care and Maintenance' section when cleaning this appliance.
- This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- For indoor use only.
- CAUTION: This kettle should be used with a residual device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures.
- CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move the kettle while it is switched on.

FEATURES



BEFORE FIRST USE

Carefully remove your kettle from the box;

Fill to 'Max', boil, discard the water and then rinse. Do this three times, to remove any dust, residues etc from the kettle.

POSITIONING

- Put the power base on a stable, dry, level surface.
- The underside of the base is fitted with a cable storage feature. Unwind the length of cable required to reach the power outlet.
- Ensure the cable does not overhang, and cannot be caught or tripped over.

FILLING

Caution: if the kettle has just boiled, it will be full of steam. Keep hands clear, as steam may escape from the kettle when opening the lid.

- Remove the kettle from the power base
- Remove the lid.
- Fill the kettle with at least 2 cups of water, but do not fill above the 'Max' line.
- Replace the lid and place the kettle back on the power base. Make sure the lid is securely closed before boiling.

WARNING!: Do not attempt to empty boiling water from the kettle without the lid in place.

SWITCHING ON

Caution: Keep clear, as steam may escape from the spout when boiling.

- Position the kettle on the power base.
- Plug the kettle into a power outlet.
- Press the On/Off switch – the indicator light will illuminate.

SWITCHING OFF

- When the water boils, the kettle will switch itself off.
- You can stop the boiling process at anytime by switching the On/Off switch to the 'Off' position or by lifting the kettle off of the base.

BOIL-DRY PROTECTION

Using the kettle with insufficient water will shorten the life span of the element.

Should you accidentally switch on an empty kettle, the safety boil-dry cut-out will switch the kettle off. If this occurs, allow the kettle to cool down completely before filling with water.

CARE & CLEANING

- Always disconnect the kettle from the power outlet and allow the kettle to cool completely before cleaning.
- Wipe the outside of the kettle with a damp cloth. You may use a little mild detergent to remove stubborn marks.
- Keep all connectors and sockets dry.
- Do not put the kettle or power base in liquid
- Do not use harsh or abrasive cleaning agents or solvents.

Cleaning the filter:

- The filter is located inside the kettle behind the spout.
- Open the lid and gently slide the filter out of the kettle.
- Rinse the filter in warm water and gently remove any scale with a soft brush.
- To replace the filter, slide it down into the slot until it clicks into place.

Descaling:

- Lime scale may be white, coloured, even rusty looking.
- To receive the best performance from your kettle, descale it regularly.
- Add 25g of citric acid to the kettle and then fill to the 'Max' water line with water. Boil the kettle and leave it to stand for 15 minutes.
- A commercial descaler suitable for plastic products (most kettles have plastic parts) may be used. Follow the instructions provided with the descaler.
- After de-scaling, rinse several times, fill, boil and discard the water, to remove any chemical residue.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.