

# HELLER

**madison**  
series

## USER MANUAL

### 1.7L Cordless Jug Kettle

Model Number: HMJK122 Series



READ AND SAVE THESE INSTRUCTIONS

## IMPORTANT

---

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## IMPORTANT SAFEGUARDS

---

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- To protect against electrical hazards do not immerse the power cord, plug, power base, or kettle in water or any other liquid.
- Do not use in the bathroom or near any source of water. Do not use outdoors.
- Always use the appliance handles as some parts may be hot.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always turn off and unplug from the wall power outlet before cleaning the appliance.
- Turn the power off at the wall power outlet when not in use.
- To disconnect, turn off the wall power outlet, then grasp and pull the plug from the wall outlet. Never pull by the cord.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments
  - Farm houses
  - By clients in hotels, motels and other residential type environments
  - Bed and breakfast type environments
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
- There are no user serviceable parts. If repairs are required, they must be performed by the manufacturer or a suitably qualified person in order to avoid hazard.
- Do not use on an inclined plane or unstable surface.
- Do not move the kettle while it is switched on.
- Ensure the lid is properly closed when in use.
- Do not open the lid while the water is heating or boiling.
- Always take care when pouring. Pour slowly, do not over-tilt the kettle.
- The scalding hazard remains long after the water has boiled. Keep the kettle, power base, and the power cord away from the edge of tables or countertops and out of reach of children or infirm persons.
- Only use the kettle with the power base provided and vice versa.
- Wind excess cable beneath the power base.
- Do not place on or near any heat sources.

- Do not use this appliance for other than its intended purpose of heating water.
- Do not switch on the kettle unless there is at least two cups of water.
- Do not fill past 'max', otherwise boiling water may spit from the spout.
- Do not use without filter fitted.
- Do not leave the product unattended when in use or where it may be touched by children or infirm persons.
- Do not use alkaline cleaning agents or harsh abrasives when cleaning this appliance. Follow the instructions in the 'Care and Maintenance' section when cleaning this appliance.
- This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
- For indoor use only.
- CAUTION: This kettle should be used with a residual device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures.
- CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move the kettle while it is switched on.

## FEATURES

---



## BEFORE FIRST USE

---

Carefully remove your kettle from the box;

Fill to 'Max', boil, discard the water and then rinse. Do this three times, to remove any dust, residues etc from the kettle.

## POSITIONING

---

- Put the power base on a stable, dry, level surface.
- The underside of the base is fitted with a cable storage feature. Unwind the length of cable required to reach the power outlet.
- Ensure the cable does not overhang, and cannot be caught or tripped over.

## FILLING

---

**Caution: if the kettle has just boiled, it will be full of steam. Keep hands clear, as steam may escape from the kettle when opening the lid.**

- Remove the kettle from the power base
- Remove the lid.
- Fill the kettle with at least 2 cups of water, but do not fill above the 'Max' line.
- Replace the lid and place the kettle back on the power base. Make sure the lid is securely closed before boiling.

**WARNING!: Do not attempt to empty boiling water from the kettle without the lid in place.**

## SWITCHING ON

---

**Caution: Keep clear, as steam may escape from the spout when boiling.**

- Position the kettle on the power base.
- Plug the kettle into a power outlet.
- Press the On/Off switch – the indicator light will illuminate.

## SWITCHING OFF

---

- When the water boils, the kettle will switch itself off.
- You can stop the boiling process at anytime by switching the On/Off switch to the 'Off' position or by lifting the kettle off of the base.

## BOIL-DRY PROTECTION

---

Using the kettle with insufficient water will shorten the life span of the element.

Should you accidentally switch on an empty kettle, the safety boil-dry cut-out will switch the kettle off. If this occurs, allow the kettle to cool down completely before filling with water.

## CARE & CLEANING

---

- Always disconnect the kettle from the power outlet and allow the kettle to cool completely before cleaning.
- Wipe the outside of the kettle with a damp cloth. You may use a little mild detergent to remove stubborn marks.
- Keep all connectors and sockets dry.
- Do not put the kettle or power base in liquid
- Do not use harsh or abrasive cleaning agents or solvents.

**Cleaning the filter:**

- The filter is located inside the kettle behind the spout.
- Open the lid and gently slide the filter out of the kettle.
- Rinse the filter in warm water and gently remove any scale with a soft brush.
- To replace the filter, slide it down into the slot until it clicks into place.

**Descaling:**

- Lime scale may be white, coloured, even rusty looking.
- To receive the best performance from your kettle, descale it regularly.
- Add 25g of citric acid to the kettle and then fill to the 'Max' water line with water. Boil the kettle and leave it to stand for 15 minutes.
- A commercial descaler suitable for plastic products (most kettles have plastic parts) may be used. Follow the instructions provided with the descaler.
- After de-scaling, rinse several times, fill, boil and discard the water, to remove any chemical residue.

**CUSTOMER SERVICE**

---

**Australian Customer Service**

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

\*This product may vary slightly to the product illustrated due to ongoing product development.