

Tiffany

Stick Mixer with Mini Chopper User Manual

Model Number: SB982



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:


PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Stick Mixer for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the plug of this appliance.
- Use the Stick Mixer only for its intended use as described in this instruction manual.
- Avoid coming into contact with moving parts. Keep hands, hair, clothing and other utensils away from the blade during operation to prevent injury and/or damage to the Stick Blender & chopper.
- Do not use hard objects (spoon, knife, or fork etc) on the blades. Also, do not grasp turning blade with hands.
- Always wait until the blades have completely stopped before removing them from the Stick Mixer and chopper.
- Remove detachable shaft from the mixer body before washing.
- Do not place the Stick Mixer near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water, flour, etc.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted in any way.
- Do not place the Stick Mixer on or near a hot gas or electric burner, or where it could touch a heated oven. Operate on a smooth level surface.
- Do not cover the Stick Mixer and chopper whilst in operation.
- Do not immerse unit, power plug, power cord or motor base in water.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used near children.
- Never operate any appliance with a damaged power cord or plug, should the appliance malfunction, or if it has been damaged in any manner.
- Always make sure the Stick Mixer is completely assembled before operating.
- Do not operate the appliance continuously for more than 1 minute. Allow the motor to rest for 1 minute between each use.
- Do not allow cord to touch hot surfaces.
- To disconnect from a power outlet, grip plug and pull from the wall outlet. Never pull on the cord
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

- Do not blend food that is in a saucepan over heat. Remove from the heat source and ensure the power cord and body is kept away from the heat source.
- Handle the Stick Mixer and accessories with care. The blade is very sharp and should be kept out of reach of children.
- Before attempting to change any accessories, release the On/Off button, turn the power off at the outlet and unplug the cord.
- Do not use any attachments other than those provided with your Stick Mixer.
- Do not process hot or boiling liquids in the chopping bowl. Allow liquids to cool before placing into the chopper bowl.
- It is not recommended to use an extension cord with this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Save these instructions.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- This appliance contains no user serviceable parts. Any maintenance other than cleaning should be performed by a qualified person.
- For household use only.

FEATURES

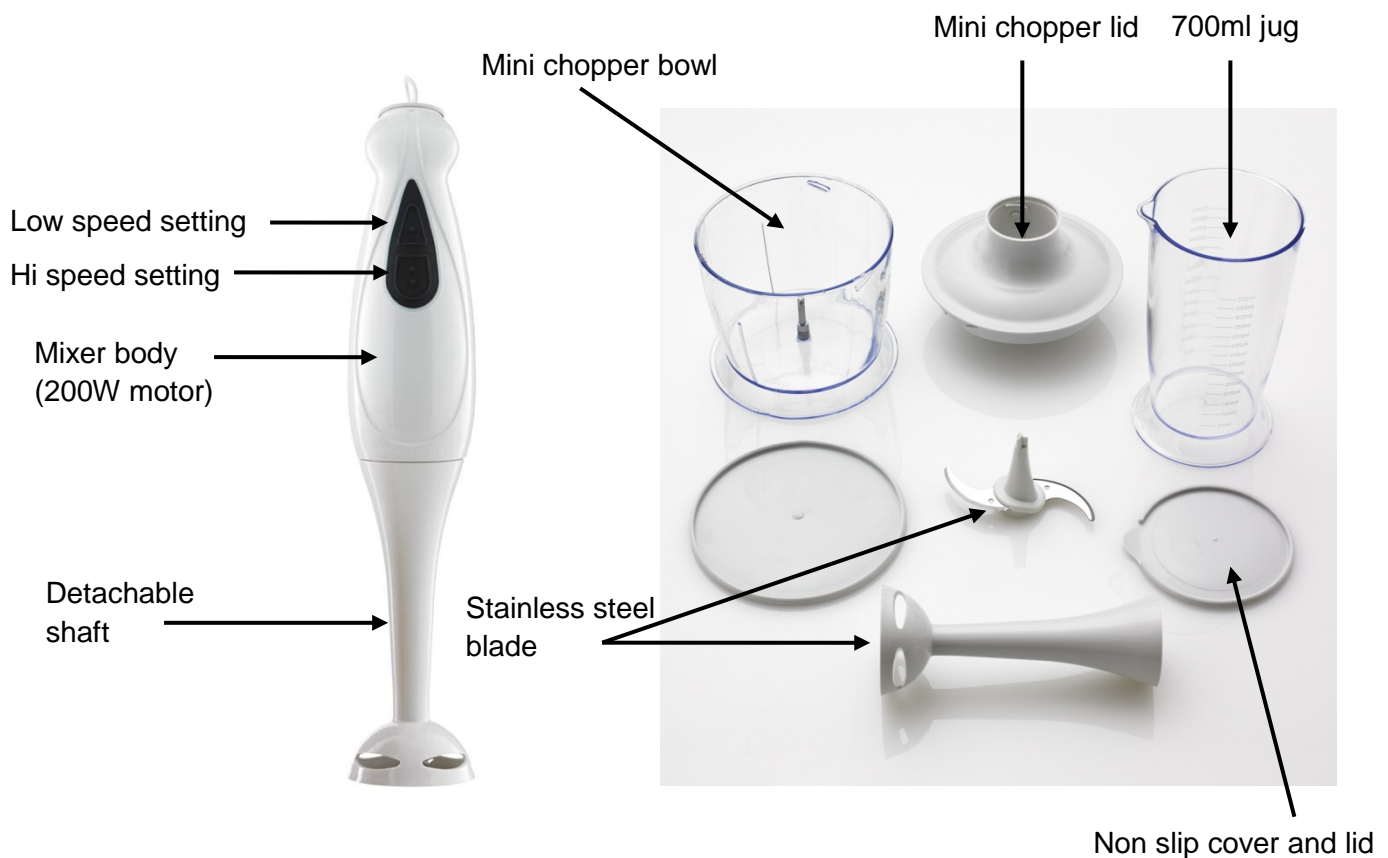

BEFORE FIRST USE

- Carefully remove your Stick Mixer with mini chopper from the box and remove any packaging materials.
- Remove the detachable shaft and wash in warm soapy water (refer to instructions). Rinse and dry thoroughly. Ensure that there is no water left inside the blending shaft.
- Disassemble and wash the mini chopper bowl, blade and lid in warm soapy water. When using the 700ml jug for the first time, it is recommended to wash it as well. Ensure no water is left in the chopper bowl, rinse and dry all parts thoroughly.



WARNING: Do not immerse the motor unit, cord or plug in water or any other liquid. All processing blades are extremely sharp. Avoid any contact with hands.

NOTE: The stick mixer body can be attached to the detachable shaft for use as a hand blender or to the chopper bowl for use as a mini chopper or food processor.

OPERATING INSTRUCTIONS

STICK MIXER:

NOTE: The maximum operating time is 1 minute. For every 1 minute of continuous use, rest for 1 minute. After two continuous cycles, it is recommended to let the motor rest for 10 minutes.

1. The Stick Mixer should be cleaned before first use, refer to instructions above.
2. Ensure the unit is unplugged.
3. Attach the detachable shaft to the mixer body and turn clockwise to lock into position.
4. Put the ingredients to be blended into a durable mixing bowl, ensure the bowl is tall enough to avoid splattering.
5. Plug the Stick Mixer into a suitable power outlet.
6. Dip the detachable shaft as deep as possible into the ingredients to be blended. **NOTE:** Do not immerse the Stick Mixer in food or liquid above the 'MAX' indicator line.
7. Press and hold one of the speed buttons (Hi or Low) to operate the unit.
8. Work the Stick Mixer through the ingredients with a gentle up and down motion, until the desired consistency has been achieved. Allow the blades to stop rotating before lifting the Stick Mixer out of the bowl.
9. When you have finished blending, unplug the appliance, and remove the detachable shaft by turning anti-clockwise.
10. Clean the attachments thoroughly.

MINI CHOPPER:

This accessory is used to chop meat, vegetables and similar mixtures of foodstuffs and is only recommended for light duty mixing only.

NOTE: The maximum operating time is 1 minute. For every 1 minute of continuous use, rest for 1 minute. After two continuous cycles, it is recommended to let the motor rest for 10 minutes.

1. Choose a flat stable surface for the mini chopper.
2. Ensure the unit is unplugged.
3. Attach the mini chopper lid to the mixer body and turn clockwise to lock into position.
4. Place the double blade knife into the chopper bowl. **NOTE:** The double blade knife is very sharp!
5. Add the pre-prepared ingredients into the chopper bowl. The chopper works best when the ingredients are cut into small, uniform pieces. Do not fill the bowl above the 'MAX' fill line.
6. Place the lid onto the chopper, ensuring it is on correctly.
7. Plug the unit into a suitable power outlet.

8. Press and hold one of the speed buttons (Hi or Low) to operate the unit.
9. For a fine consistency, you will need to hold the speed button for longer. For a course consistency press and release the speed button until the desired mix has been achieved.
10. When you have finished mixing, unplug the appliance, and remove the mixer body from the lid by turning anti-clockwise. Wait until the blades stop, and then remove the lid and transfer the ingredients from the bowl. Once the chopper bowl is empty, carefully remove the blade.
11. Clean the attachments thoroughly.



WARNING: Do not operate the Stick Mixer when the bowl is empty.

NOTE: During operation, hold the mixer body with one hand, and the mini chopper with the other.

CHOPPING GUIDE:

FOOD	SPEED	PREPARATION
Bread	LOW	Tear into pieces
Chips & crackers	HI	Break into 2" pieces
Coffee beans	HI	
Eggs	LOW	Hard boiled, peeled & quartered
Fruits & vegetables - hard	HI	Cut into 1" pieces
Fruits & vegetables – soft	LOW	Cut into 1" pieces
Garlic	LOW	
Fresh herbs	LOW	Rinse and pat dry
Nuts	HI	
Onions	LOW	Cut into 1" pieces

HANDY HINTS

- To ensure uniform results, gently move the detachable shaft around the mixture.
- If you want to clean the sides of the bowl whilst mixing, turn the Stick Mixer off first, and then proceed to scrape the sides of the bowl.
- To avoid unnecessary splattering, always immerse the detachable shaft into the mixture before switching the unit on.
- The speed can be adjusted at any time whilst blending. For thicker mixtures, a low speed is recommended. For fine, smooth mixtures, use the Hi setting.
- If whipping cream, it is recommended to place the cream in a bowl in the fridge to cool for a few minutes.

CLEANING & MAINTENANCE

NOTE: Use extreme care when handling the double blade knife. Do not touch the blades with your fingers. The blades are very sharp and can cause injury if touched.

- Before commencing any cleaning, ensure the unit is unplugged from the power supply.
- Disconnect the mixer body from either the detachable shaft, or the mini chopper lid (whichever is in use).
- Wash the disassembled parts in warm soapy water, rinse and dry thoroughly. **NOTE:** it is much easier to clean the parts directly after use.
- The mixer body must not be immersed in water or any other liquid, if it needs to be cleaned, wipe over the body with a soft damp cloth. To remove stubborn spots, wipe the surface with a slightly damper cloth with a mild non-abrasive detergent. Dry with a soft cloth.
- Do not use any abrasive cleaners on any part of the mixer or the accessories, it will damage the exterior.



CAUTION: The Stick Mixer motor should never be immersed in water or any other liquid.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.