

# HELLER

Instruction Manual

## 40cm Wall Fan with Remote Control

Model: 40WALR



READ AND SAVE THESE INSTRUCTIONS

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## Important Safeguards

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**


PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let children play with parts of the packing (such as plastic bags).
- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Ensure the fan is mounted on a stable, even wall, which is strong enough to hold it.
- The wall fan must be installed so the blades are at least 2.1m from the floor.
- Never install the unit where it is exposed to direct sunlight, excessive moisture/rain, dust and lack of ventilation near any heat sources.
- Avoid making contact with moving parts. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while the unit is working.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. Where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Be sure that no other high current appliances are plugged into the same circuit with your fan as an overload can occur.
- Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
- Do not use the appliance for other than its intended use.
- Do not use outdoors. **FOR INDOOR USE ONLY.**
- Do not leave the appliance unattended when switched on.
- Do not cover the grill, or operate in close proximity to curtains etc.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.

- This product is intended for normal domestic/household use only.
- Use this fan as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.


## Parts Location

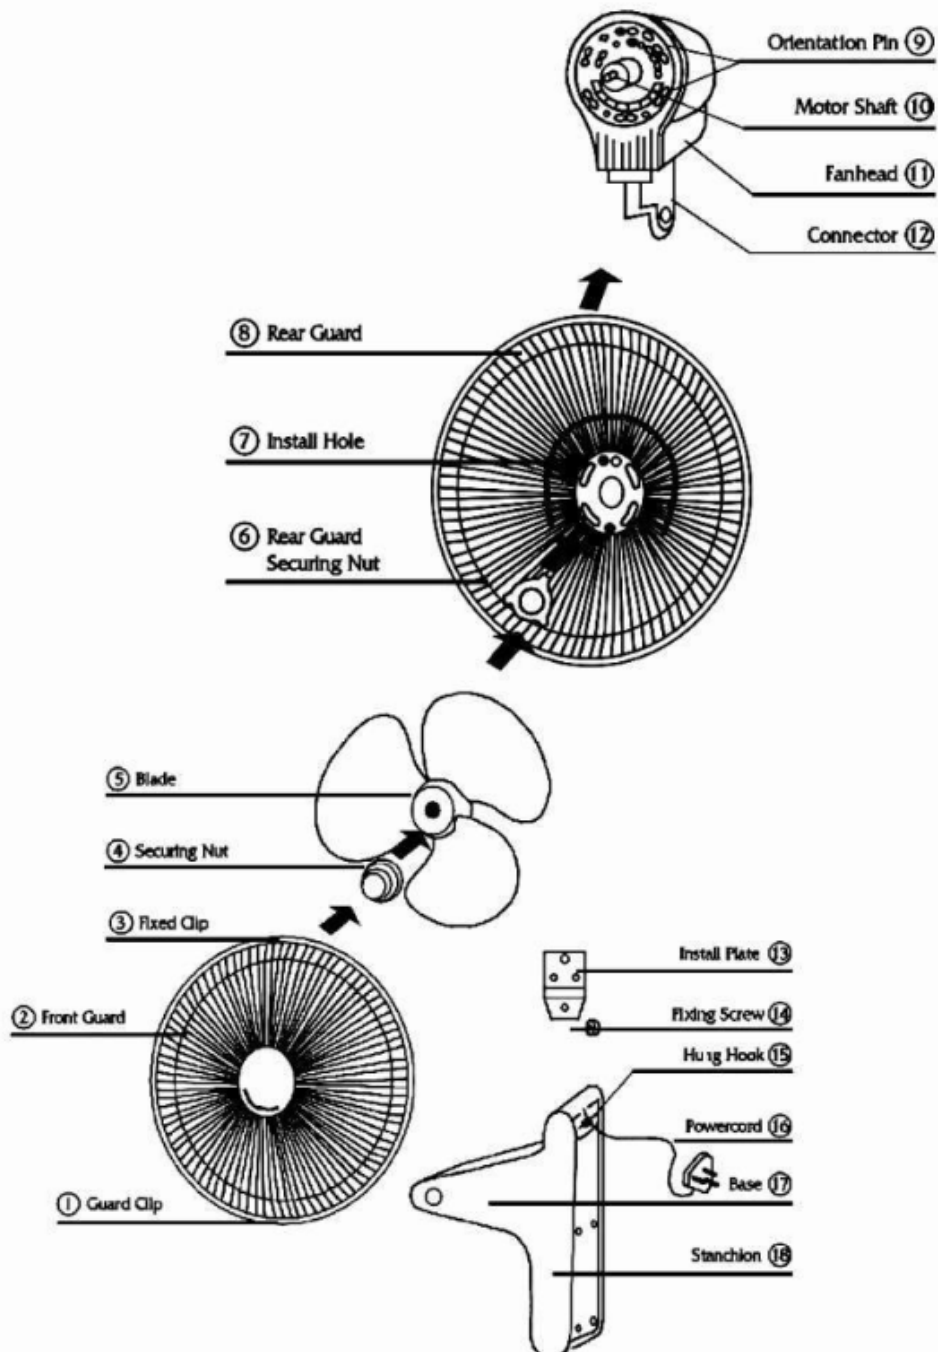


## Assembly Instructions

Ensure the fan is mounted on a stable, even wall, which is strong enough to hold the weight of the fan.

1. Mount the install plate (13) on the wall with the three fixing screws (14) provided [Fig. 1].
2. Hang the motor and base (17) with the hang hook (15) onto the hanging bracket [Fig. 2]

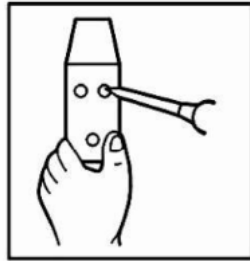

(Fig 1)

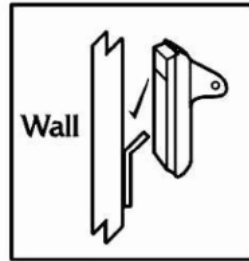

(Fig 2)

3. Remove the plastic shaft protector from the motor shaft (10).
4. Loosen the rear guard securing ring (6) from the motor and housing assembly.
5. Position the rear guard (8) firmly to the motor and housing assembly and fasten by turning the rear guard securing ring (6) clockwise tightly.
6. Push the fan blade (5) along the motor shaft. Fasten securely using the fan blade securing nut (4) with the spinner by turning anticlockwise. Attach the front guard (2).

## Before First Use

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.

## Operating & Remote Control Instructions

Before inserting the plug into a power outlet, make sure that the correct voltage being used corresponds to what is indicated on the rating label, and that the socket has an earth facility.



The fan and motor assembly are attached to a 3 position ratchet. Tilt up or down until the assembly clicks into desired position.

- Ensure batteries are inserted in the correct direction.
- Do not mix battery types.
- When replacing batteries, ensure both are changed simultaneously.
- 2 x AAA batteries are required (not included).

Press the ON/SPEED and OFF buttons to switch the fan on and off. Pressing the ON/SPEED button while the fan is operating will change speed to either (Low, Medium & High). The appropriate LED indicator light will illuminate on the control panel, indicating what speed has been selected.

Press the OSCIL button for oscillating or fixed operation. When the unit is first switched on the MODE LED indicator light will glow red, indicating that the unit is operating in normal mode.

The TIMER button allows you to set a time for the unit to automatically turn off. The timer can be set from 0.5-7.5hrs. Each press of the button equals half an hour.

Remote control operation is identical to the control panel functions.

Press the MODE button to select the required setting (Sleep/Natural/Normal):

#### **Natural:**

- High alternates between High-Medium-Low speeds.
- Medium alternates between Medium-Low speeds.
- Low alternates between Low and Off.

#### **Sleep:**

- Sleep mode selected on High speed: The fan will operate at high speed in Natural mode for 30 minutes, then at medium speed in Natural mode for 30 minutes, and then it will operate at Low speed in Natural mode for the remaining time.
- Sleep mode selected on Medium speed: The fan will operate at medium speed in Natural model for 30 minutes, and then it will operate at Low speed in Natural mode for the remaining time.
- Sleep mode: The fan will operate at low speed in Natural mode.

Remote control operations are identical to the functions on the fan control panel.

## **Care & Cleaning**

- Your appliance must be switched OFF via the main power supply and unplugged before proceeding with any cleaning.
- Clean the housing with a damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirits to clean the appliance.
- Never immerse the appliance in water!

## **Specifications**

Model	Description	Voltage	Frequency	Wattage
40WALR	40cm Wall Fan with Remote Control	230-240V~	50Hz	50W

## Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

[www.gafcontrol.com.au](http://www.gafcontrol.com.au)

\*This product may vary slightly to the product illustrated due to ongoing product development.