

# Tiffany

## ELECTRIC HAIR CLIPPER MODEL: HC62

## INSTRUCTION MANUAL

Read all instructions before using this appliance and save these instructions for future use.

### IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

#### For Your Safety

Read all instructions carefully, even if you feel you are quite familiar with the appliance

- To protect against the risk of electric shock DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from power outlet. Never pull cord. Never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- Avoid contact with moving parts.
- Before each use make sure the blades are correctly aligned.
- Do not use while bathing or in a shower.
- Do not reach for an appliance that has fallen into water. Switch off at the power point and then unplug immediately.
- Do not drop or insert any object into any opening on this appliance.
- Do not place this appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb, or with teeth missing from the blades, as injury may occur.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- Do not use outdoors, or expose to rain or moisture.

- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.


### CAUTION

Do not use or leave this hair clipper in a position where it may fall into a bath, sink or trough etc. There is a danger of electrocution under these conditions even with the hair clipper switch in the "OFF" position. Switch "OFF" at the power outlet and remove the plug when not in use.

### COMPULSORY WARNING


If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard. This product has not been designed for any uses other than those specified in this booklet. If the appliance is plugged into an extension lead or portable electrical outlet device, the extension lead or portable electrical outlet device should be positioned so it is not subject to splashing or exposure to moisture.

### PART NAMES

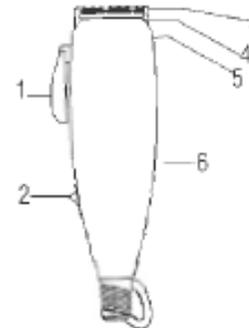

1. Blade Leaver
2. On/Off switch
3. Bottom Blade
4. Top Blade
5. Blade slide
6. Power screw

### ACCESSORIES

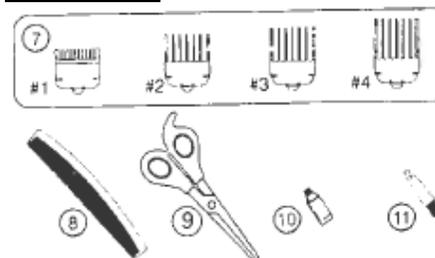

7. Attachment combs
8. Comb
9. Scissors
10. Oil bottle
11. Cleaning brush

### GUIDE FOR CUTTING HAIR AT HOME


- ❖ Never use this product to cut wet hair.
- ❖ It is designed to work in dry condition only.

#### Before you begin

- ❖ Make sure your clipper is clean, properly oiled and in perfect working condition.
- ❖ Place a towel around the neck of the person to prevent hair from falling down inside the collar.
- ❖ Position the person whose hair is to be cut on a chair so that his/her head is at your eye level.
- ❖ Comb the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip. This will help you to maintain an accurate cutting control.


### CUTTING HAIR WITH THE ATTACHMENT COMBS (For medium to long cut)

- ❖ To attach combs, hold comb with teeth up, snap comb attachment firmly to the bottom of the dipper blade. (fig. 12)

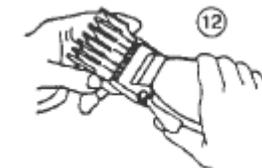

- Attachment comb #1 – Leaves hair approx 3mm in length
- Attachment comb #2 – Leaves hair approx 6mm in length
- Attachment comb #3 – Leaves hair approx 9mm in length
- Attachment comb #4 – Leaves hair approx 12mm in length

 Special angle comb is also available. (Fig. 7)



- ❖ At the beginning, cut only a small amount of hair until you become accustomed to the length each attachment comb leaves the hair.

- ❖ And, it is suggested to try the longest attachment comb on the clipper first, and then use the shorter one if the desired length is shorter.
- ❖ For uniform cutting, never push or force the clipper through the hair at a fast rate. The clipper works most efficiently when at its own speed.
- ❖ Start by combing the hair in its natural direction.
- ❖ Place the largest attachment comb in to your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair with teeth of the attachment comb pointing up but flat against the head. Slowly lift the clipper up and outward through the hair, cutting only a small amount at a time. (Fig. 13)



- ❖ Repeat around sides and back of head. (Fig. 14)
- ❖ If you desire shorter hair, either change to a lower number attachment comb or apply more pressure and less tilt away from head with the present attachment comb. (Fig. 15)
- ❖ For the top of the head, you will give a fairly short cut if you use the #4 attachment comb. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few hair cuts. (Fig. 16)


### OUTLINING

- ❖ Outlining requires no attachments. Take the clipper and push the lever up to the close-cut position.

- ❖ Comb hair into the style. Position clipper between the side burns and the ear. (Fig. 17)
- ❖ Make sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around, and behind the ears. (Fig. 18)
- ❖ For the back of the neck and the sideburns, hold the clipper upside down, (see sketch) and holding it against the skin at the length desired, move downwards.

### SHORT CUTS TO PERFECT FLAT TOPS, CREW CUTS

- ❖ Always cut from the back of the neck to the crown, using the longest attachment comb. Holding it flat against the head, slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head. (Fig. 19)
- ❖ For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides. (Fig. 20)
- ❖ For a flat top, use a flat comb, not the attachment comb. Just cut hair on top of the head over it.
- ❖ To taper hair down to the neckline, use closer cutting attachment combs. Comb hair and check for uneven spots and outline sideburns and neckline. (Fig. 21)
- ❖ If a short tapered cut on the sides and back is desired, follow the Fig. 22.

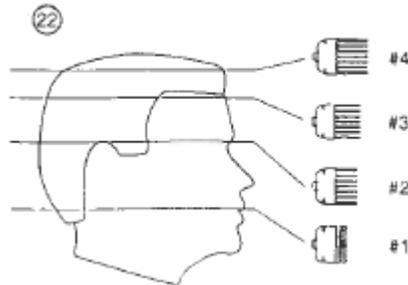


- ❖ The four basic areas illustrated on the hair cutting guide are your "road map" to easy do-it-yourself" hair cutting.


### MAINTENANCE

- ❖ Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving the factory.
- ❖ Blades must be realigned if they have been removed for cleaning or replacement.

- ❖ To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 1.2mm back from bottom blade. Compare your clipper blades with the sketch Fig. 23).

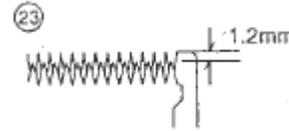


 - ❖ If blade alignment is incorrect, add a few drops of oil to the blades, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned. (Fig. 24)



### OIL

- ❖ To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- ❖ Do not use hair oil, grease, oil mixed with kerosene or any solvent. As the solvent will evaporate and leave the thick oil which may slow down the blades motion. (Fig. 25)

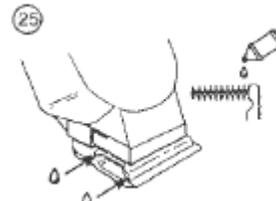


### POWER SCREW

- ❖ The power screw permits you to adjust the power. It has been adjust before leaving the factory. However, if the voltage in your home is low, you may need to re-adjust it.
- ❖ To adjust, use a screwdriver or a thin coin to turn power screw in clockwise direction until the arm strikes the coil, making noise. Then slowly turn power screw out (counter-clockwise) just until noise stops. This is maximum power setting. (Fig. 26)



### ADJUSTABLE LEVER

- ❖ The lever is conveniently located near your thumb (if you are right-handed) so it can easily be adjusted while the clipper is in your hand.
- ❖ The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.
- ❖ When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. Pushing the lever downward gradually increases the cutting length.
- ❖ In its lowest position, the lever will leave the hair approximately the same length as a #1 comb.
- ❖ The lever will also extend the use of your blades since a different cutting edge is used in each setting.
- ❖ In addition, if extremely heavy hair cutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. (Fig. 27)

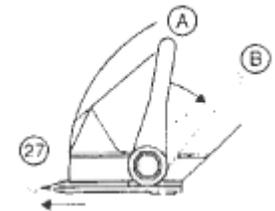

A. Close Cut  
B. Longer cut

- ❖ While the clipper is running, rapidly move the lever from "close cut" to "longer-cut" a couple of times. Doing this each time after you have finished using your clipper will help to keep the blades clear of cut hair. If your clipper stops cutting and this does not help, your cutting blades are dulled. Replace them with new blades.