

Tiffany

USER MANUAL

1800W Hairdryer

Model Number: HDT1800A



READ AND SAVE THESE INSTRUCTIONS

HDT1800A HAIRDRYER INSTRUCTION MANUAL

Please read this instruction manual carefully before using your new Tiffany Hairdryer.

SAFETY PRECAUTIONS FOR YOUR TIFFANY HAIRDRYER:

- *This hairdryer must not come in contact with water or any other liquid.*
- *Always switch off your hairdryer at the power outlet and remove plug when not in use.*
- *Do not store your hairdryer near tubs, basins, baths or vessels which contain water.*
- *When the hairdryer is used in bathroom, unplug it after use since the proximity of water presents a hazard, even when the unit is switched off.*
- *This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.*
- *Children should be supervised to ensure they do not play with the appliance.*
- *If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.*



WARNING: Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.

- *When the hair dryer is used in the bathroom, unplug it after each use since the proximity of water presents a hazard even when the hair dryer is switched off.*
- *For additional protection, the installation of a residual current device (RCD) having a rated residual operation current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.*
- *This hair dryer should be left/fitted out of reach of children.*
- *Do not insert small metal objects into the air grilles to avoid electric shock. Never block air grilles.*
- *Do not use the appliance for any other purpose, other than its intended use.*
- *Do not wind the mains cord around the appliance.*
- *Do not use the appliance on artificial hair.*

Please exercise care when using any electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance.

- Read carefully and save all the instructions provided with an appliance.
- Always turn off at the power outlet before you insert or remove a plug. Remove by grasping the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.

USING YOUR 1800W HAIRDRYER:

- Your 1800W Hairdryer has 3 heat settings and 2 speed settings.
- The switch marked with numbers 1,2 & 3 controls the temperature of the air flow as follows:-
 - 1- *Low heat*
 - 2- *Medium heat*
 - 3- *High heat*
- The switch marked 0,1 & 2 controls the strength of the airflow as follows:-
 - 0- *Off*
 - 1- *Gentle Airflow*
 - 2- *Strong Airflow*
- The cool shot button provides a burst of cool air to set the style in place once styled.

TO DRY HAIR:

- After shampooing & conditioning the hair, squeeze excess moisture from your hair using a dry towel.
- Comb hair free of all tangles with a wide tooth comb.
- Plug your dryer into a power outlet and turn the power on.
- Select the desired heat and speed combination and using your fingers dry hair from the roots to the ends.
- Use the concentrator nozzle onto specific areas of hair for spot drying or styling.
- Always hold the dryer at 30cm away from the hair when drying, to avoid burning yourself with the hot air stream and excessive heat exposure to your hair.

CARE AND CLEANING:

- Turn your hairdryer off after use. Always turn the power OFF and remove the plug from power outlet before cleaning.
- Do not immerse the hairdryer in water or any other liquid.
- To clean the exterior, simply wipe over with a dampened cloth and wipe dry.
- Do not wind the power cord around the hairdryer as this may strain and damage the wiring.

CUSTOMER SERVICE:

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.