



# WHITE FREESTANDING HEATED TOWEL RAIL

## USER MANUAL

Model Number: HTR102W



**READ AND SAVE THESE INSTRUCTIONS**

## **BEFORE FIRST USE:**

Read and follow all the instructions in this "User Manual" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS" and "FOR YOUR SAFETY".

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## **IMPORTANT SAFEGUARDS:**

When using any electrically powered product, basic safety precautions should always be followed, including the following:

**WARNING** - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Please read and save these instructions for future reference, and before using the heater.
2. Extreme caution is necessary when the heater is used by, or near children, invalids or animals.
3. Always disconnect the heater when it is not in use, by switching to power 'off' and removing the plug from the outlet.
4. Do not operate any heater with a damaged cord or plug, or if the heater has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors.
6. Do not place the heater where it may come into direct contact, or become immersed with any liquid. The minimum distance the heater is to be kept from a bath or shower is 0.6 metres.
7. Do not run the cord under carpeting or cover the cord with rugs, runners, or the like. Arrange the cord so it will be away from traffic areas, and where it will not be tripped over.
8. Do not use in areas where petrol, paints, aerosols, or other flammable substances are used or stored.
9. Use this heater only as described in the instruction manual. Any other use is not recommended by the manufacturer, as it may cause fire, electric shock, or injury and will void all warranties.
10. This heater is not intended for use with an extension cord. Plug the cord directly into an appropriate wall outlet.
11. This appliance is intended only for drying textiles washed in water.
12. Young children should be supervised to ensure that they do not play with the heater.
13. Ensure that the heater is fully disconnected and cooled down, before cleaning or storing.
14. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.


## **CAUTION:**

- This heater only operates in an upright position
- Store the heater in a cool dry place, when not in use.
- Do not clean, or store until the heater has completely cooled down.
- If this appliance is supplied from a cord extension, or portable outlet device, ensure that such devices are positioned so that it is not subject to splashing or water ingress of moisture.

## HOW TO OPERATE:

Please read these instructions carefully before operating.

1. Carefully remove the heater from its carton and plastic packaging, and remove all promotional labels, and unwind the cord to its full length.
2. To attach the foot base to the appliance, align the plastic mounting bracket to the towel rail, so that the bracket fits evenly over the assembly point.
3. Place the foot into the recess of the bracket. Align all holes and secure into position with the nut provided.
4. Repeat the process for the second foot.
5. Refer to the figure below:

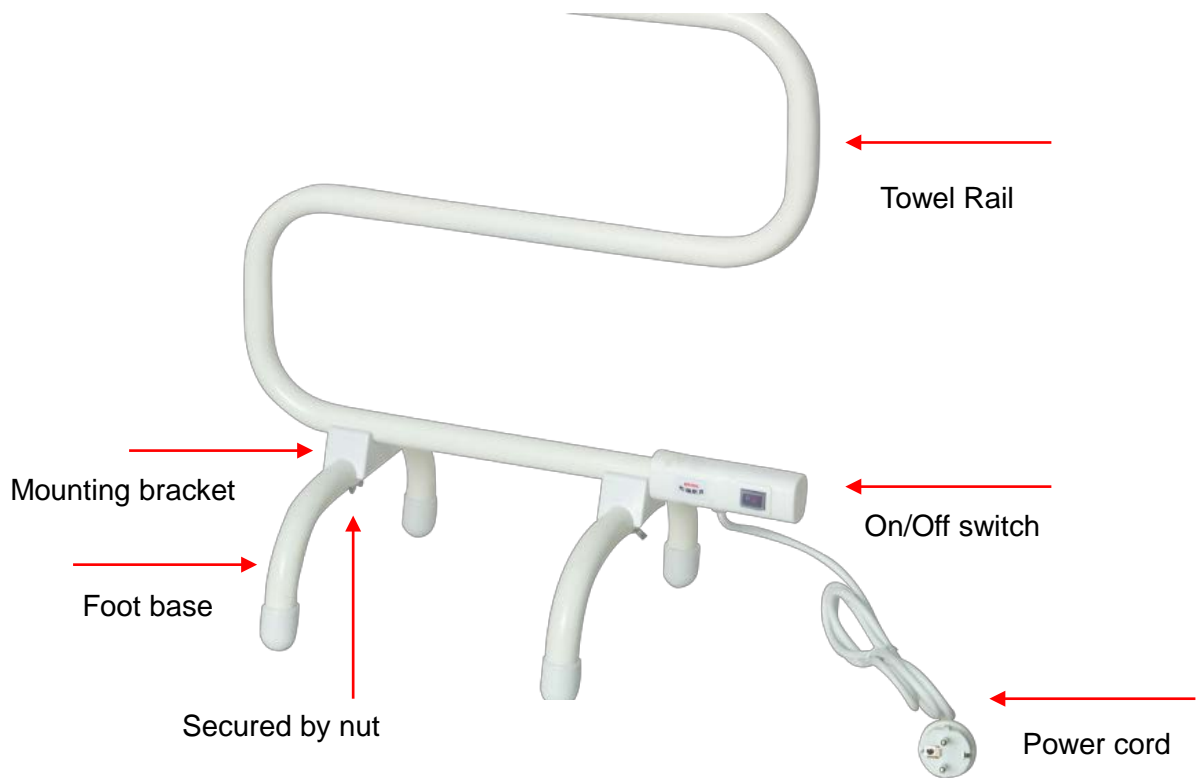

6. On completion of installation, ensure the switch is in '0' position (power off) before plugging in the power cord.
7. Once the heater is in a stable and suitable position and plugged in, press the switch to '1' (power on) and you can start using your new appliance.
8. It is recommended that the heater is switched off '0' after each use.

**CARE AND MAINTENANCE:**

- Always turn off and unplug the heater before cleaning, and ensure that it is completely cooled down.
- Do not use abrasive cleaning products on this appliance.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse in water or any other liquid.
- Clean with a damp, lint-free cloth
- When the heater is not in use, store in a cool, clean, dry location, preferably in the original box for the best protection.

**FOR YOUR SAFETY:**

- Do not operate the product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug – do not pull on the cord.

**SERVICE:**

- The appliance has no user serviceable parts. In the event that it is dropped or damaged in any way, or fails to operate it should be returned to the place of purchase, together with your purchase receipt or the address below for repair or replacement.

G.A.F Control (Sales) Pty. Ltd.,  
18-28 Taras Avenue  
Altona North  
Victoria 3025  
Tel: 1300 659 489

**READ AND SAVE THESE INSTRUCTIONS**