

- Turn the Steam knob to the "Low" or "Max" positions. Setting will depend on Temperature Dial settings and amount of steam required. Please refer to the FABRIC SETTING CHART and TEMPERATURE CONTROL SETTING.

POWER ON LIGHT (PILOT LAMP)


The Power ON Light will be illuminated when the power to the iron is switched on and the Temperature Dial is adjusted away from the "MIN" mark. The light will cycle ON and OFF to indicate that the soleplate temperature is being maintained at that selected by the Temperature Dial.

BEFORE USE:

- Please read all of the instructions for use and the Important Safeguards carefully.
- Remove all packaging from the steam iron.
- Slowly peel the protective cover off the soleplate.
- The first time the steam iron is used, it is normal for a small amount of smoke and a slight odour to be produced. It will quickly disappear.

HOW TO USE

- Always check first to see whether ironing instructions are attached to the article being ironed. Follow these ironing instructions in all cases.
- If ironing instructions are missing but you know the kind of fabric then operate the iron with the Temperature Dial set for the required fabric. The Temperature Dial marking is valid for the actual fabric and does not concern any applied finish, gloss etc.
- Textile to which some kind of finish has been applied (gloss, wrinkle, relief, etc) can best be ironed at somewhat lower temperatures.
- If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature of the composition. (e.g. an article consisting of 60% nylon and 40% wool should be ironed at the nylon setting and without steam.)
- Sort the garments to be ironed starting with those requiring the lowest temperature such as those made of synthetic fibres. The iron heats up quicker than it cools down. Therefore, start with those made of synthetic fibres, then progress to the higher ones.
- When you are not sure about the kind of fabric(s) the article is made of, always try on a spot which is less visible so that you can understand and use correctly.

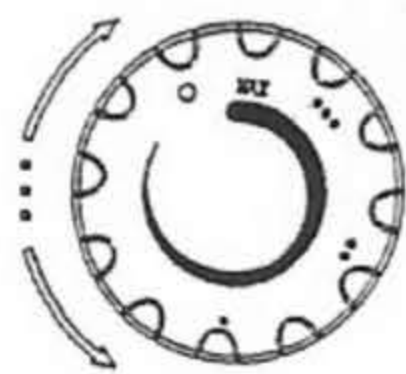

HOW TO FILL THE WATER TANK

If you plan to use the Steam feature of the iron, fill the water tank as follows:

1. Unplug the iron from the power outlet.
2. Set the temperature dial to the "MIN" mark and the Steam knob to the "No steam or 0" position.
3. Hold the iron in an incline position of 45° from the horizontal so that the water inlet is in the desired position.
4. Fill the tank to the "MAX" mark with the cup supplied.



3

5. Set the iron on its heel on a firm, stable surface.

NOTE:

1. The water level can be observed through the transparent tank when the iron is placed either horizontally or vertically. When the level becomes low, add water as instructed above.
2. Never overfill the tank and do not use chemicals, descaling compounds or any other liquids for refilling.
3. It is advisable to use clean tap water or distilled water.

DRY PRESSING

1. Plug the iron into a suitable power outlet.
2. Set the Temperature Dial to the setting required for the fabric being ironed.
3. Ensure the Steam button is set to the "0" (Dry Iron) position.
4. Set the iron on the heel rest and wait until the Power On Light comes on. Wait until the light comes on for the second time for the iron temperature to stabilise.

STEAM PRESSING

1. Fill the water tank as instructed above.
2. Plug the iron into a suitable power outlet.
3. Turn the Temperature Dial to the "••••" position or higher.
4. Ensure the Steam knob is set to the "0" (Dry Iron) position.
5. Set the iron on the heel rest and wait until the Power On Light comes on. Wait until the light comes on for the second time for the iron temperature to stabilise.
6. When the iron is placed horizontally, steam will be emitted from the soleplate. The Steam control should then be adjusted until the desired amount of steam is emitted from the soleplate. See FABRIC SETTING CHART Note: Turning the Steam Control too high may result in water dripping from the steam vents. If this occurs, turn the Steam Control towards "Low" or increase the temperature setting.
7. To turn iron off, set Adjustable Steam Knob to "0" (Dry Iron) position. Turn the Temperature Control Dial to Min. Unplug iron.
8. Empty water from the iron following directions in "Draining and Storing Iron."

Note: Make sure there is enough water in the water tank

SPRAY FUNCTION

1. Pump the Spray Button continuously until water is sprayed from the nozzle. When used for the first time or after being stored for a long time the button may have to be pumped numerous times to prime the pump.

BURST OF STEAM IRONING

This function provides extra amount of steam to remove stubborn wrinkles.

1. Fill the iron as described in the section of "How to fill the Water tank".
2. Turn the Temperature Dial to 'Max' setting.



4

3. Pilot light glows indicating the iron is switched on.
4. Pilot light goes off when the required temperature is reached.
5. The iron is ready for use.
6. Press the Burst of Steam button once.
7. Steam will penetrate into the garment removing the wrinkles.
8. Wait a few seconds before pressing the Burst of Steam button again when there are stubborn wrinkles.
9. Usually all wrinkles can be removed within three presses.

Note: Make sure there is enough water in the water tank

STEAM OFF

Steam generation can be interrupted as follows:

- Standing the iron on its heel.
- Turning the Adjustable Steam knob to "0" (Dry Iron) position.

FABRIC SETTING CHART

| Steam Setting | Temperature Setting | Ironing Instructions |
|---------------|---------------------|--|
| O Dry Iron | Off | |
| | Nylon, Acrylic | Dry iron using spray if necessary. |
| | Silk | Dry iron on the inside of the garment. |
| Steam Range | Wool | Use a press cloth and steam iron on the inside of garment. |
| | Polyester | Iron while fabric is still damp. |
| | Rayon | Iron using spray if necessary. |
| | Cotton, Linen | For cotton, iron while still damp or use spray. For linen, iron fabric on the inside of the garment. Use this setting for vertical steaming. |

DRAINING AND STORING IRON

1. Turn the Temperature Dial to minimum and unplug the iron from the power outlet.
2. With the Soleplate facing away from you, carefully turn the iron upside down over sink to empty water.
3. When all the water has been drained from the iron, plug the iron into a power outlet and turn the Temperature Dial to maximum. Allow the iron to heat for about 2 minutes to dry all the water in the steam chamber.
4. Unplug the iron and allow to cool completely before storing.



IRONING TIPS

- To avoid ironing damage, be sure to set the temperature according to the instructions in this manual
- Arrange ironing so that you begin with those garments requiring low temperature settings first (acrylic, rayon, silk). Then follow with those requiring higher settings (wool, cotton, linen).
- To guard against damaging delicate fabrics, press blends on temperature settings for the lowest

| Temperature Control Setting | | |
|---|--|---------------------|
| | | |
| • Acetate • Elastene • Polyamide • Polypropylene | • Cupro • Polyester • Protein • Silk • Triacetate • Viscose | • Cotton • Linen |

5

- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Do not leave hot iron unattended.
- This product is intended for normal domestic/household use only.


Special Instructions

- This is a high wattage appliance. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- If it is necessary to use an extension cord, a 10-amp cord should be used. Cords with lower rating may overheat.
- Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

READ AND SAVE THESE INSTRUCTIONS

PART IDENTIFICATION

1. Spray Nozzle
2. Water Inlet
3. Adjustable Steam Knob
4. Spray Button
5. Burst of Steam
6. Handle
7. Power Cord
8. Heel Rest
9. Power Light
10. Temperature Control Dial
11. See through water tank
12. Skirt
13. Non-stick Soleplate

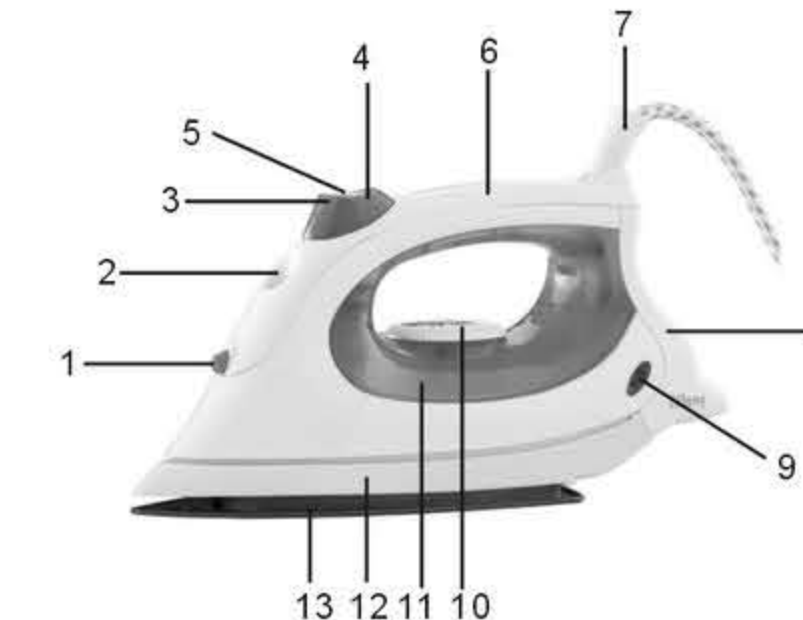

TEMPERATURE DIAL

Allows the iron temperature to be set for the particular fabric being ironed. For material types between Nylon and Wool, the iron should be used on "Dry" only. For material types Cotton and Linen, the iron may be used on "Dry" or "Steam". For temperature control settings below "Cotton" the iron does not reach a temperature high enough to convert all the water to steam and some water may drip from the soleplate, causing possible staining of materials.

STEAM/DRY CONTROL

To set for dry ironing:

- Turn the Steam knob to the "0" position.

To set for steam ironing:

- Set the Temperature Dial to "Cotton" or higher. If the temperature setting is too low water may drip from the soleplate.

2

Read and follow all the instructions in this "Use And Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", and the "WARRANTY and SERVICE" statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities, or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Close supervision is necessary when the product is used by or near children or invalids. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Do not allow the cord to touch hot surfaces. Allow the iron to cool completely before putting away. Loop cord loosely around iron when storing. Do not wrap the cord tightly around the iron as this may damage the cord or cord guard.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Do not touch hot surfaces. Use the handle.
- Do not use the appliance for other than its intended use.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.

1

temperature fibre. (Check the garment label.) If you are unsure of the fibre content of your fabric, try a low setting (nylon) first and then gradually increase the temperature until you obtain the desired effect or test on a concealed seam before beginning.

NOTE: Garments requiring temperatures below the COTTON setting cannot be steam ironed.

- When possible, press fabric on the back side or place a cloth over the right side of the fabric. This will protect the fabric.
- A press cloth should be used when ironing over abrasive objects such as buttons and zippers.
- When pressing, place the Soleplate on fabric, apply pressure, lift and reposition iron or lightly move iron across the fabric. Never bear down and slide soleplate across the fabric.
- Care should be taken when ironing plastic buttons and zippers since these items may melt.
- Never tip the iron upside down or backwards when ironing, as water will leak from the iron.

CLEANING THE IRON

1. Disconnect the iron from the mains supply outlet.
2. Use a damp cloth or non-scratching cleaner to remove any deposits on the sole plate and body of the iron
3. Never use scourers or sharp or rough objects to remove the deposits on the sole plate.
4. Never use any abrasive vinegar or descaling agents to clean the iron.

SERVICE AND WARRANTY

Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement. For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information card. Retain in the event that warranty service is required. Warranty is 1 year from date of purchase.

G.A.F. Control (Sales) Pty. Ltd.,
441 Kororoit Creek Road,
Altona, Victoria, 3018

READ AND SAVE THESE INSTRUCTIONS

6

PRODUCT USE, CARE AND SERVICE WARRANTY INSTRUCTIONS

Tiffany

Steam/Dry Iron

MODEL No: IR1188



READ AND SAVE THESE INSTRUCTIONS BEFORE FIRST USE