

SUNAIR

Instruction Manual

30cm High Velocity Turbo Fan

Model: PFS30



READ AND SAVE THESE INSTRUCTIONS

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

Important Safeguards

When using any electrically powered product, basic safety precautions should always be followed, including the following:


PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Read all instructions before operating the Turbo Fan for the first time and save for future reference.
- This appliance is designed for domestic/household use only. Do not use the appliance for any other purpose than its intended use.
- Switch off and unplug from the mains when the appliance is not in use, before assembling or disassembling, moving the fan, and before cleaning.
- Fully assemble the fan before switching on.
- Make sure the fan is standing on a dry, even surface.
- To reduce the risk of electric shock, do not immerse or expose the product or power cord to rain, moisture or liquid. Do not use the fan in or near a window.
- This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Never install the unit where it could be subject to direct sunlight, excessive dust, lack of ventilation; such as bookcases or cabinets or any heat sources.
- Do not cover the fan, or operate in close proximity to curtains, etc. to reduce the risk of a fire or electrical hazard.
- Before connecting the appliance to the power point, make sure the voltage complies with the requirements, as indicated on the rating plate. Damages caused by connection error are not covered by your warranty.
- Always place the fan on a stable, level surface when operating, to prevent the fan from overturning. Do not run the power cord under carpet. Do not cover power cord with throw rugs or runners. Route the power cord away from walking paths so that nobody can trip over it. The cable should be kept away from heat, sharp edges and oil.
- Never leave a working appliance unattended, even for a short period of time – always switch it off. Please unplug the appliance from the power point when not in use.
- When unplugging, switch off the power point and hold the plug – never unplug the appliance by pulling on the power cord.
- Don't use the appliance if the power cord or plug is damaged. It may pose a serious safety hazard. For cable replacement or any other major repairs please refer to a qualified serviceman.
- Please clean the appliance according to this user's manual. Always make sure it is switched off and unplugged from the power point before cleaning or carrying out any maintenance.
- Avoid touching mobile parts of the fan.
- Never insert fingers, pencils or any other objects through the grille whenever the power plug is connected, especially while the unit is working.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Most of the materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers.
- This appliance has no user serviceable parts. Any maintenance other than should be performed by a qualified person.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Parts Location

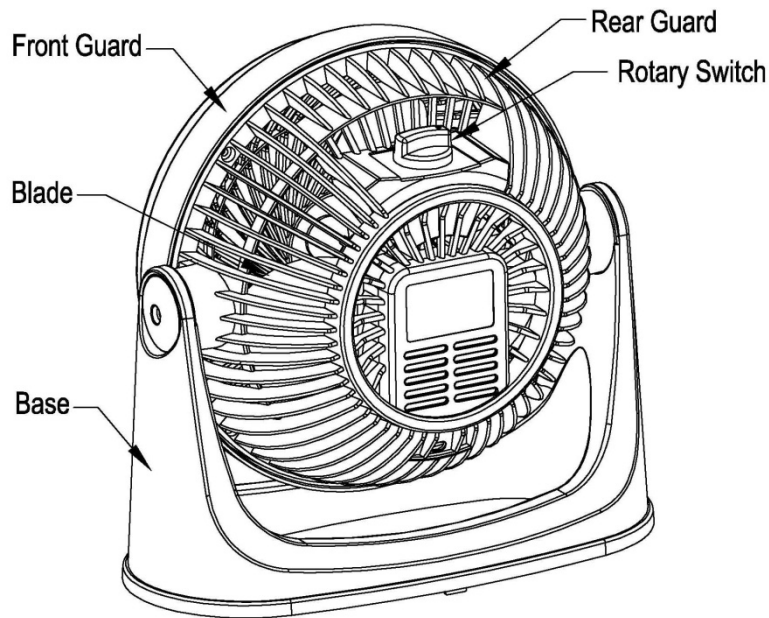

Assembly Instructions

You're fan already comes assembled.

Before First Use

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.

Operating Instructions

Freestanding:

1. Remove all packaging materials and any promotional labels from your Turbo Fan. The fan does not require assembling.
2. Inspect the product, if you notice any damage, return to the place of purchase. Never operate a product with a damaged cord or plug.
3. Place the fan on a dry and level surface.
4. Ensure the rotary switch is in the '0' (OFF) position. Plug the unit into a 220-240Vac 50Hz power outlet.
5. Adjust the fan head vertically to your desired angle.
6. To turn On the unit, turn the rotary switch to '3' (HIGH), '2' (MEDIUM) or '1' (LOW) position.
7. To turn Off the unit, turn the rotary switch to '0' (OFF) position, then unplug the unit from the power outlet

Wall mounted:

CAUTION: The wall mounting procedure requires the use of power tools e.g. a drill. Please ensure an adult or qualified person uses the power tools required.

1. Pick an appropriate spot to mount the fan. It must be close enough to a power outlet, but not directly below one.
2. Place the fan on the wall and mark the position of the two mounting holes.
3. Mount two hooks, screws, or wall studs onto the wall (not included). Keep in mind that they need to be strong enough to hold the fans weight. If using screws, make sure you leave at least 3/8" exposed.
4. Hang the fan on the hooks/screws/wall studs.
5. Tilt the fan to the desired position. Ensure the fan is in the '0' position before plugging into a power outlet

CAUTION: *The fan should always be switched off when making any adjustments to the fan head angle.*

Care & Cleaning

WARNING: To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before cleaning or servicing.

CAUTION: This fan is not intended to be disassembled to clean internal parts (e.g. blade, motor). Disassembly may result in product damage, and is not covered by warranty. Never use liquids or abrasive cleaners to clean this product.

1. Wipe the exterior surface with a soft damp cloth. Dust can be removed from the Guard and Blades with a vacuum cleaner.
2. Do not immerse the motor, switch or wires in water or any other liquid. Never allow water to drip onto the blade or motor housing.
3. Do not use any chemical or abrasive cleaners such as acid, alcohol, etc, to clean the fan.
4. Make sure the fan is completely dry after cleaning. Dry with a soft damp cloth.

WARNING: Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist. This product has been permanently lubricated at the factory and will not require further lubrication for the life of the product. Additional lubrication of electric motor parts could create a fire hazard.

1. We recommend that you store the fan in its original box and stored in a safe and dry location.
2. Make sure the product is completely dry before using at any time

NOTE: If you experience a problem with the fan, please return the fan to the place of purchase with your receipt.

Specifications

Model	Description	Voltage	Frequency	Wattage
PFS30	30cm High Velocity Turbo Fan	220-240V~	50Hz	60W

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.