

SUNAIR

2000W CERAMIC TOWER HEATER WITH REMOTE

INSTRUCTION MANUAL

Model Number: SCTH2000R



READ AND SAVE THESE INSTRUCTIONS

Read and follow all the instructions in this "User Manual" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the section concerning "IMPORTANT SAFEGUARDS".

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFE GUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Children must be supervised to ensure that they do not play with the appliance.
4. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
5. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split particularly where it enters the unit.
7. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electric shock.
8. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
9. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
10. Avoid touching the heater body whilst the heater is on. If the unit needs to be moved, switch off and only hold the heater by the handles where provided.
11. Do not use near or point the heater at furniture, animals, curtains or other flammable objects. Keep combustible materials such as furniture, drapes, bedding and any other furnishings at least 2 metres from the front, sides, and rear of the heater.
12. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
13. Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
14. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
15. This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, bathrooms, swimming pools etc. where the likelihood of immersion or splashing could occur.
16. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
17. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool down completely and cleaning as described in the Cleaning and Storing section.
18. Be sure that no other high current appliances are plugged into the same circuit as your heater, as an overload can occur.
19. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
20. Do not use the appliance for other than its intended use.
21. Do not use this appliance outdoors. FOR INDOOR USE ONLY.
22. Do not leave the appliance unattended when switched on.
23. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, or locate the heater immediately below a socket outlet.
24. Do not cover the unit when in operation, as this can lead to a risk of fire.

25. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
26. This product is intended for normal domestic/household use only and only to be used on the floor.
27. Do not mount on ceilings or walls.
28. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

LOCATION

1. The appliance should be placed a minimum distance of 2 metres away from flammable and combustible materials (e.g. curtains), walls or other structures.

POWER CORD

1. Do not lay the cord under carpet, rugs, mats or similar articles. Position the cord so that it does not pose an obstruction or a tripping hazard.
2. Always pull the plug out of the socket do not pull the cord!
3. Always disconnect the mains plug when the appliance is not in use. Attention! The appliance may only be used in normal domestic instances and not for industrial use.

BEFORE FIRST USE

1. Before first use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.
2. Ensure that all the accessories are included as per the diagram below before continuing with the installation.
3. Ensure that the location of the heater is not directly under a power socket and that a power socket is available to power the appliance.

USING THE HEATER

1. Carefully remove the heater from the packaging.
2. Place the heater on a firm level surface, away from any obstructions or combustible materials.
3. Ensure the unit is turned "Off". Plug the cord into a power outlet.
4. Once plugged in, press the On/Off Button at the bottom of the unit to turn it on.



Figure1



Figure 2

Fan mode:

MANUAL/REMOTE OPERATION:

1. Press the ON/OFF button at the top of the unit, the fan heater will switch ON and the fan will blow. The COOL AIR indicator will illuminate.
2. To switch the fan OFF, press the ON/OFF button. The unit will continue to operate for 10 -15 seconds, and then it will switch OFF.

Heating mode:

MANUAL/REMOTE OPERATION:

1. Press the ON/OFF button at the top of the unit, the heater will switch ON and the fan will blow. The COOL AIR indicator will illuminate
2. Press the MODE button, to operate at 1000W. The 1000W indicator will illuminate.
3. If more heat is required press the MODE button again, to operate at 2000W. The 2000W indicator will illuminate.
4. Press the OSC button, to start oscillation. The "OSC" indicator will light up. To stop the swing function, press the OSC button again - the indicator light should be no longer illuminated.
5. To switch the heater OFF at anytime, press the ON/OFF button until the "COOL AIR" indicator light flashes. The fan heater will continue to operate for 10 -15 sec, and then it will switch OFF.

NOTE: Always remember to turn the unit off by the On/Off button at the base of the unit.

Timer function:

The timer function allows the fan heater to operate continuously at 30 minute intervals, and can be programmed up to 7.5 hours before it automatically turns OFF. This applies for both Manual and Remote operation.

1. Press the TIME button once for 30min operation before the unit will automatically turn itself OFF.
2. Press the TIME button again for 1 hour etc. Repeat this process until the desired time of operation is achieved.
3. The time indicators will light up depending on the time chosen. For example, if the timer is programmed to operate for 5.5 hours, the indicator 4h, 1h, and 0.5h will be illuminated on the control panel.
4. To cancel the timer function. Press the TIME button until all indicators lights are OFF.

Overheat Protection:

Your heater is fitted with a safety device that switches the heater off, should the unit overheat or tip over, it will switch off automatically. If this should occur, all you need to do is:

- Disconnect the plug from the electrical socket and wait at least 30 minutes before plugging it back in.
- Ensure the heater is not covered and nothing is obstructing any of the vents.
- Plug the heater back into the electrical socket and switch the heater on.
- If the problem persists and the safety device switches off the heater again, return the heater to the place of purchase.
- If the heater has tipped over, repeat the above instructions and ensure the heater is positioned on a level surface.

BATTERY

The remote control uses 2 x AAA batteries. We recommend lithium type batteries for longer use. Please dispose of batteries as per instructions on the battery packaging.

HINTS/TIPS TO RETAIN THE HEAT IN YOUR HOME

- Do not overheat your home, in winter the temperature of a heated room should be between 18-21°C
- Choose the right size heater for the room that you wish to heat.
- Zone off the unoccupied rooms by closing doors, and curtains to limit heat loss.
- Use draft stoppers where possible, to keep the cold air from filtering in under doors.
- Avoid placing items, or sitting too close to the heater for optimal air flow.

CLEANING & STORING

- Always disconnect the appliance from the main power outlet and allow to cool before cleaning.
- Clean the outside of the heater by wiping with a damp, lint free cloth or use a dusting brush and a vacuum cleaner.
- Do not use any detergents/solvents or chemical agents to clean the heater. Never immerse the appliance in water!
- Clean the air inlet regularly with a vacuum cleaner.
- Make sure that the heater has cooled down completely before storing. Storing the heater in its original box is highly recommended.

SPECIFICATIONS

Model No	SCTH2000R
Voltage	220-240V
Frequency	50/60Hz
Output Power	2000W

WARRANTY

This appliance has no user serviceable parts. In the event that the unit is faulty, or fails to operate it should be returned to the place of purchase, together with your purchase receipt.

CUSTOMER SERVICE

Australian Customer Service
GAF Control (Sales) Pty Ltd
P.O Box 19
Altona North Victoria 3025
Phone: 1300 659 489
Hours: 9am-5pm (EST) Mon-Fri
www.gafcontrol.com.au