

PRODUCT USE, CARE AND SERVICE
WARRANTY INSTRUCTIONS

MAXIM[®]
kitchenpro



Model: MJ250

Mini Juice Extractor 250W



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience, record the complete model number (located on the product identification plate) and the date you received the product together with your purchase receipt, and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:


- Carefully read all instructions before operating your new product for the first time and keep handy for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Before usage, disassemble the unit and rinse the unit's parts with luke warm soapy water (Not the motor unit).
- Before using, check that the voltage of the wall outlet corresponds to that shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Always ensure the appliance is switched OFF, prior to plugging into the power outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent or a qualified technician in order to avoid a hazard.
- To protect against risk of electrical shock, do not put the motor unit into water or any other liquid. Do not start the product or press the control button with wet hands. To disconnect, turn the control to "Off", then remove plug from power outlet by grasping the plug, not the cord.
- Avoid making contact with moving parts.
- In operation, it is forbidden to put your hands or sharp objects into the feed port and any objects instead of the plunger. In case of any accidents, please keep your eyes away from the feed port.

- To avoid any personal injury or product damage, it is required to keep your body or other hard objects away from the juice extraction strainer, motor wheel when starting up the product.
- Please operate the unit strictly in accordance with the rated time. Do not operate the unit for more than 5 minutes continuously. Always allow the unit to cool down 2-3 minutes after every 5 minutes of use.
- If product stops working in operation - which may be caused by the motor thermal control protection, please turn the unit off and the remove the plug from the wall socket and restart after allowing the unit to cool down 20-30 minutes.
- **DO NOT IMMERSE** the motor unit in water or any other liquid. Do not wash the motor unit. Please use a soft cloth to wipe down motor unit if necessary.
- The product shall not be cleaned with the steel wool, abrasive cleaners or corrosive fluids (e.g. gasoline or acetone).
- Please confirm the proper installation of such dismountable parts such as the juice extraction strainer and head cover, before turning the power on.
- When removing the juicer from the motor unit, wait until the blades have completely stopped.
- Always use the appliance on a secure, dry level surface.
- Fruits and vegetables with kernel, hard seeds, thick skin or hard shell – must be removed before processing.
- Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance..
- Do not run this appliance over a long period of time; otherwise the inner parts will be damaged.
- Do not leave this appliance unattended during use.
- To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
- Do not use outdoors.
- **CAUTION:** Never immerse in water, or unplug before inserting and/or removing parts.
- **CAUTION:** DO NOT OPEN HEAD COVER UNTIL BLADES STOP.
- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not operate product with damp or wet hands.
- Close supervision is necessary when the appliance is being used near children or infirm persons.
- The use of other accessories not recommended by the manufacturer as it may cause injuries to persons.
- This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance other than for its intended use. This appliance is for household use only.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety

switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Safety protection: The motor is equipped with protection setting, while over loading; it will turn off automatically and will operate after cooling down. So make sure the unit is turned off.

PARTS & FUNCTIONS

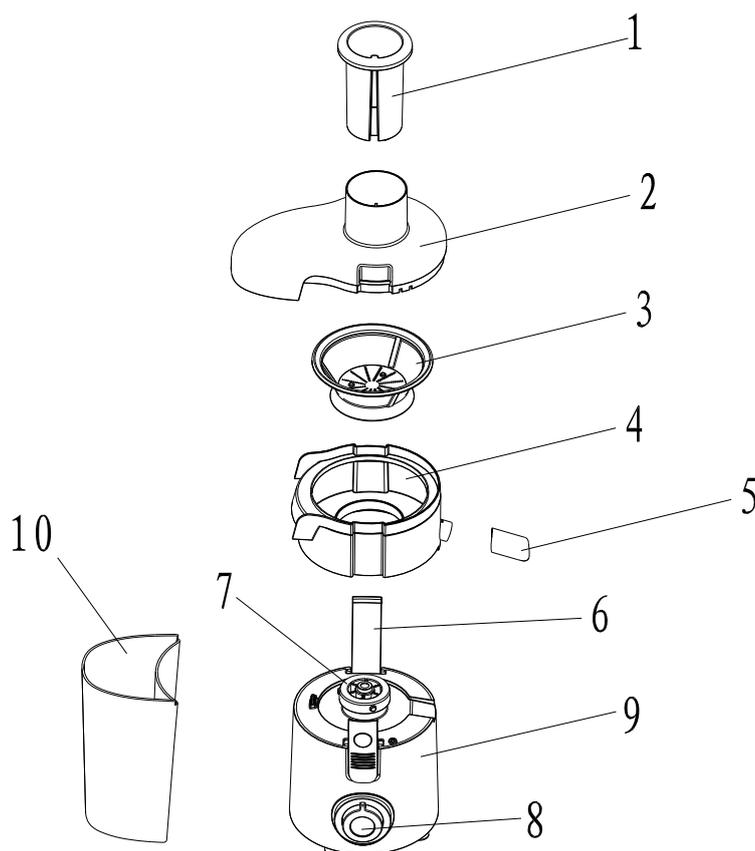


Serial No.	Parts Name	Function Information
1	Plunger	In putting in the food material, softly press them against the juice extraction strainer to improve the juicing efficiency.
2	Head cover	Head cover, connected with the machine body, plays an important role in juicing and safety protection.
3	Juice extraction strainer	The cutter at the bottom of the juicer extracts juices from fruits and vegetables.

4	Central Ring	Receive and export the juice separated by the juice extraction strainer.
5	Juice Flowing Nozzle	Let juice from the central ring to flow to the juice cup.
6	Plate Buckle	Used for the connection to lock between the head cover and the unit.
7	Motor Wheel	Used to connect the juice extraction strainer and allow it automatically centering, easy for access.
8	Knob Switch	The switch is used to control the working status of the product, with four gears: the reset, inching, low speed and the high speed gear.
9	Machine Body	It is the key part of the machine, inside it with motor-the power source providing the power.
10	Pulp Cup	Receive and collect pulp separated by the juice extraction strainer.

OPERATIONS

Please clean the parts contacting the ingredients completely before using the product. (See *Care & Cleaning*)

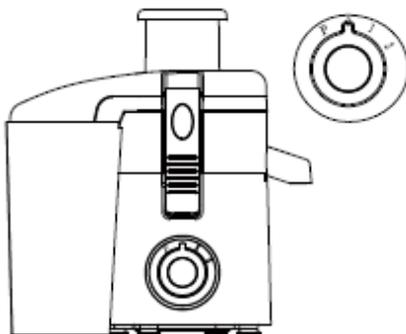

Gear

“P” Gear: Pulse

“0” Gear: shut off and stop

“1” Gear: low speed gear, applicable to process soft fruits and vegetables, such as water melon, tomato, cucumber and strawberry.

“2” Gear: high speed gear, applicable to process all fruits and vegetables.





(As to the detailed descriptions of the selection of fruits and vegetables and gear speed, please refer to the second point of the User’s Manual: fruits and vegetables selection prompt)


1. Usage

This product is equipped with safety switch system, and will not start working before all the parts and components are in correct installation status.

Please install and use the product as follows;


Juicing Function:

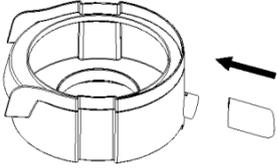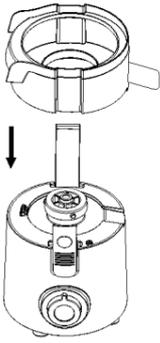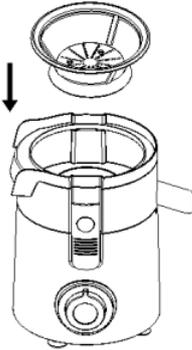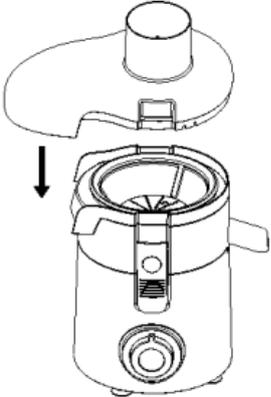	1	Align the juice flowing nozzle with the juice outlet of the central ring and install them.
	2	Put central ring on the machine body.
	3	Put juice extraction strainer into the central ring, and confirm it in the right place of the motor wheel. (Before using, please check if any damage to the net, if any, please stops using and contact our customer service department immediately).
	4	Install the head cover right above on the machine body, and install it in the right place according to the giving direction on the cover.

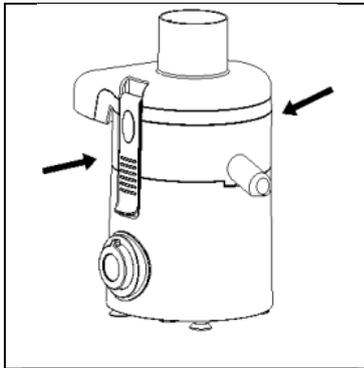


5

Button up the plate buckle with the double concave trough on the head cover, press down the buckle, and the sound of “click” means successful installation.

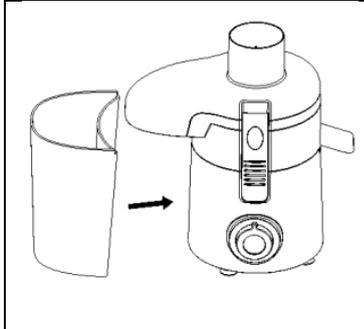


6

Install the pulp cup to the machine body.

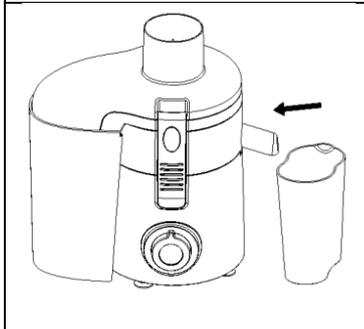


7

Place juice cup under the juice flowing nozzle.

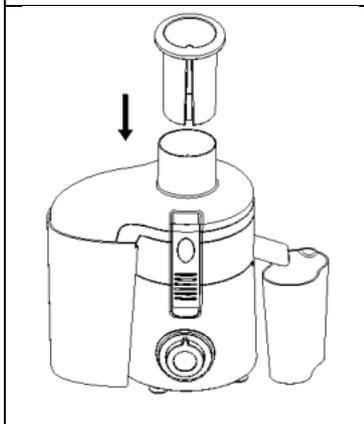


8

Align the plunger with the flange inside the feed port on the head cover.

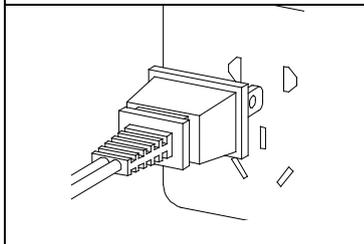

9

Power on, ready to work. (Confirm the switch on the close status before power on)

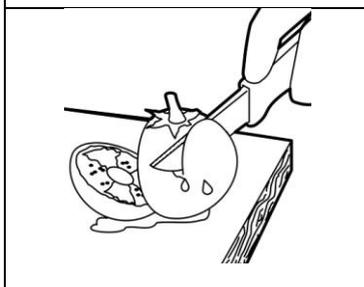


10

Wash fruits and vegetables, slice into pieces (with kernel, hard seeds, thick skin or hard shell shall be removed)




11

Start the switch.

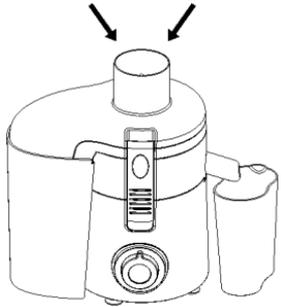

12


Feed fruits and vegetables prepared into the feed port.

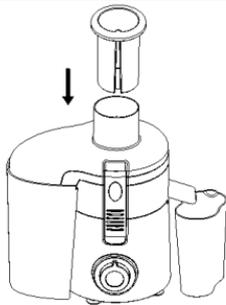

13

Push pieces of fruits and vegetables gently into the feed port with plunger and too excessive of force implied on the rod may affect the juicing effect.

(Keep your fingers or other objects away from the feed port, please power off to clean, if full, the pulp cup or juicing cup.)

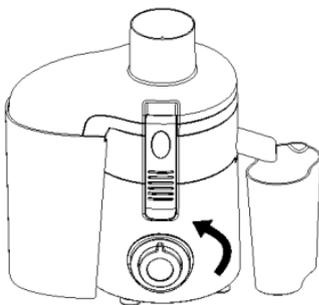

14

After completion of processing ingredients and no juice flowing from the nozzle, shut off switch and power off, and remove juicing cup away from the nozzle after the motor and juice extraction strainer completely stops working.

(Drink juices when it is fresh, as its taste and nutritive value may be affected by long exposure to the air.)

CARE & CLEANING

1. Before cleaning, unplug the motor base from the power outlet.
2. For easier cleaning, always rinse/wash immediately after use. Do not let liquid dry in the unit assembly, as this will make cleaning extremely difficult.
3. Dismantle all detachable parts. Lift the parts assembly off the motor base.
4. Wash the unit's parts (except the motor unit) and blades using warm soapy water, then rinse thoroughly. The blades are very sharp, so please handle with care.
5. Rinse well and dry. Leave the parts to dry upside down, and away from children. The product should be placed in dry place and away from ultraviolet rays.
6. Wipe the motor base with a damp cloth and dry thoroughly. Remove any stubborn spots by rubbing with non-abrasive cleaner.
7. Product shall be clean and dry before storage.

CAUTION: Never immerse the motor unit in water or any other liquid.

CAUTION: Do not use rough scouring pads or cleansers on parts or finish.

SPECIFICATIONS

Rated Voltage	220-240V~
Rated Power	250W
Rated Frequency	50Hz
Continuous operating time of juicing	≤1 minute
Spacing Interval	≥ 2 minutes

The product is class II electrical appliance and has no need of adding grounding device.

FAULT ANALYSIS & TROUBLESHOOTING

Fault Phenomena	Cause Analysis	Troubleshooting
Unable to start switch, product fails to work.	<ol style="list-style-type: none">1. Improper installation of central seat.2. Head cover installed in wrong place.	<ol style="list-style-type: none">1. Install central seat in proper place.2. Install head cover in place.3. Replace the head cover.

Electric motor makes us smells bad at first few times.	It is normal.	Please send the product to our company's maintenance point nearby if the product gives off unpleasant smell still after repeated use.
Halting when in service.	<ol style="list-style-type: none"> 1. Under voltage 2. Excessive ingredients 3. Push the rod with excessive force 4. Motor thermal control protection 	<ol style="list-style-type: none"> 1. Check if under voltage 2. Disconnect power, take out the surplus ingredients. 3. Push the rod gently. 4. Restart it after stopping 20-30 minutes.
Too much pulp contained in the juice	<ol style="list-style-type: none"> 1. Juice extraction strainer damaged. 2. Too much pulp in the central ring. 	<ol style="list-style-type: none"> 1. Replace the net. 2. Clean the central ring.
Abnormal vibration or big noise.	<ol style="list-style-type: none"> 1. Improper installation of juice extraction strainer and poor running balance. 2. Unstable placement of product or come off of foot pad. 3. Over voltage 4. Excessive ingredients 	<ol style="list-style-type: none"> 1. Install juice extraction strainer in proper place. 2. Place product stably or install the foot pad in proper place. 3. Check if any over voltage. 4. Disconnect power and take out surplus ingredients.
Low quantity of juice	<ol style="list-style-type: none"> 1. Much pulp in the central ring. 2. Press the plunger with excessive force. 	<ol style="list-style-type: none"> 1. Clean central ring. 2. Press the plunger with proper force.
Cutter	Cutter twined by ingredients or blocked	Disconnect power, take out ingredients.

The above mentioned contents are common fault analysis and troubleshooting, for others, please contact the company Customer Service Department.

Maintenance points Designated by our company are detailed in the warranty card.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd & Maxim Housewares

441 Kororoit Creek Road, Altona

Victoria, 3018, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: MJ250

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim Housewares products, please go to our website.

www.maximhousewares.com & www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au