

MAXIM[®] kitchenpro



MAXIM[®]
kitchenpro

USER MANUAL
Mini Oven 9L Silver
Model Number: MMO9S

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operation and save them for future reference.
- Remove and safely discard any packaging material before using the oven for the first time.
- To eliminate a choking hazard for young children, remove and discard the protective cover that is fitted to the power plug of the appliance.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate this product with a damaged cord or plug, or after the product malfunctions, or appears damaged in any way. Return appliance to the nearest authorized service center for examination, repair, adjustment or any other servicing.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not touch hot surfaces such as the oven door top or sides. Always use the handles or knobs in order to prevent hazardous burns or injuries. Use oven mitts for removing or touching any hot parts.
- Always place the appliance on heat protected surface.
- Close supervision is necessary when any appliance is used by or near children.
- For protection against electric shock, do not immerse the cord, plug or any parts of the oven in water or any other liquids.
- Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
- The use of other accessory attachments not recommended by the appliance manufacturer may cause hazard or injury. Do not use any accessories other than the ones provided with this product.
- Use only the accessories provided with this unit inside the oven when not in use. Do not store any other materials.

- Always pull the plug out from the wall, never pull the cord. Remove the plug from the wall before moving the appliance. Use both hands to move the appliance.
- DO NOT place the appliance on, or near a hot gas or electric burner, or in a heated oven.
- When operating the oven, keep at least four inches or 100-150mm of free open space on all sides of the exterior of the oven to allow for adequate air circulation.
- Place the appliance on a clean, heat resistance, dry, flat/even, horizontal surface.
- Unplug from the power outlet when not in use and before cleaning. Allow to cool completely before putting on or removing parts, and before cleaning.
- Extreme caution must be used when removing tray containing hot oil, grease or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
- Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
- Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in the toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, etc, when in operation. Do not store any item on top of the appliance when in operation.
- Extreme caution should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.
- Be sure that nothing touches the top or bottom elements of the oven.
- Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
- Do not store any materials other than the manufacturer's recommended accessories in this oven when not in use.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
- This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around the edges. Avoid scratching the door surface or nicking the edges.
- In order to switch off this appliance, rotate the Timer Knob to "OFF" position and then remove plug from wall outlet.
- Do not use outdoors.
- Do not use the appliance other than for its intended purpose.
- If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The unit should be operated on a separate electrical circuit.
- Clean this appliance regularly as build up of grease may cause a fire. Make sure that the appliance has cooled down before cleaning the unit.
- Use a soapy damp rag to clean the glass on oven door. Do not use any sharp utensils as this may damage the glass and possibly breaking of the glass. Always let the appliance cool down first before cleaning.
- Always attach plug the unit into the wall outlet with the switch on and operate the unit. To disconnect; turn the control to "OFF" , then remove plug from wall outlet.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCES

BEFORE FIRST USE

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.


For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

Before using your appliance for the first time, be sure to:

1. Read all of the instructions included in the manual.
2. Make sure the oven is unplugged and the 'Timer Knob' is in the "OFF" position.
3. Remove all accessories and shipping materials packed inside the oven.
4. Wash the rack and pan in warm soapy water. Wipe the inside of the oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
5. Place Oven on a flat and heat resistance counter or stable surface. Do not operate on the same circuit with another appliance.
6. Position the oven so that it is at least 4 inches (100-150mm) away from any surrounding object. Ensure that nothing has been placed on top of the Oven.
7. Thoroughly dry all accessories and re-assemble in the oven, plug oven into a power outlet and you are ready to use your new appliance.
8. For the first time only, turn the Temperature Knob to 200°C and the Timer Knob to 15 minutes. This will remove any traces of odours or oils initially present. A slight smell and smoke may result, which is completely normal and harmless and should disappear after 10 minutes.

PARTS AND FEATURES

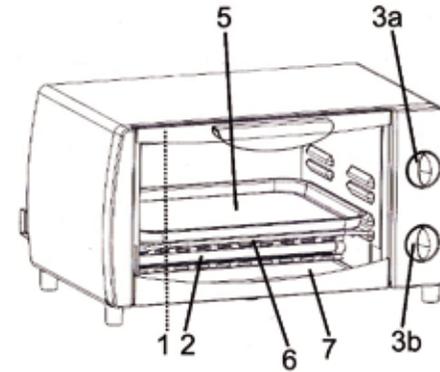

1. Top Heating Elements
2. Bottom Heating Elements
3. a) Temperature Knob
b) Timer Knob
4. Indicator light
5. Baking/ Broiling Pan
6. Baking Rack
7. Crumb Tray

USING YOUR OVEN

WARNING: TO AVOID RISK OF INJURY AND BURNS, DO NOT TOUCH HOT SURFACES WHEN THE OVEN IS IN USE. ALWAYS USE OVEN MITTS.

CAUTION: ALWAYS USE EXTREME CARE WHEN REMOVING THE BAKING/BROILING PAN, WIRE RACK, CRUMB TRAY OR ANY HOT CONTAINER FROM THE HOT OVEN. ALWAYS USE OVEN MITTS WHEN REMOVING HOT ITEMS FROM THE OVEN.

Please familiarize yourself with the following oven functions and accessories prior to first use:

Temperature Control Knob: choose the desired temperature from 0°C - 250°C for baking, grilling, broiling or toasting.

Upper heater (the upper heating temperature will be 250°C)

Lower heater (the lower heating temperature will be 250°C)




Timer Control Knob: when you activate the timer segment of the control, turn to the right (clockwise) to use timer. The time bell will ring at the end of the programmed time.

STAY ON: this function allows you to keep the oven on at the desired temperature, until the desired time.

OFF: this function turns off the unit.

ABOUT RACK LEVELS

There are 2 rack levels. The baking tray or rack can be slid into the groove for either level.

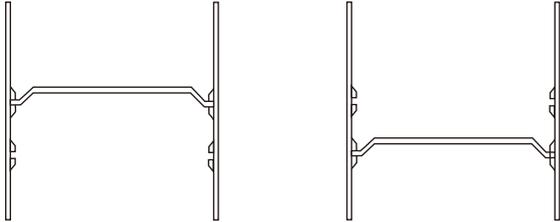

CARE & CLEANING

WARNING: BE SURE TO UNPLUG THE OVEN AND ALLOW IT TO COOL COMPLETELY BEFORE CLEANING.

1. Before cleaning unplug the appliance and let it cool completely.
2. Wipe the inside walls of the oven with a damp sponge or cloth with mild detergent. Clean the outside of the appliance with a soft cloth.


NOTE: DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS, STEEL WOOL OR SCRAPE THE WALLS WITH METAL UNTOOLS, AS ALL OF THESE METHODS MAY DAMAGE THE COATING.

NOTE: NEVER IMMERSE THE UNIT IN WATER OR ANY OTHER LIQUID.

3. All accessories should be cleaned in hot soapy water. Wipe the door with a clean damp sponge and dry with a soft cloth.

NOTE:

- DO NOT USE AN ABRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON BROILING/BAKING PAN, CRUMB TRAY & BAKING RACK AS IT MAY DAMAGE THE EXTERIOR FINISH.
- LET ALL PARTS AND SURFACES DRY THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING.

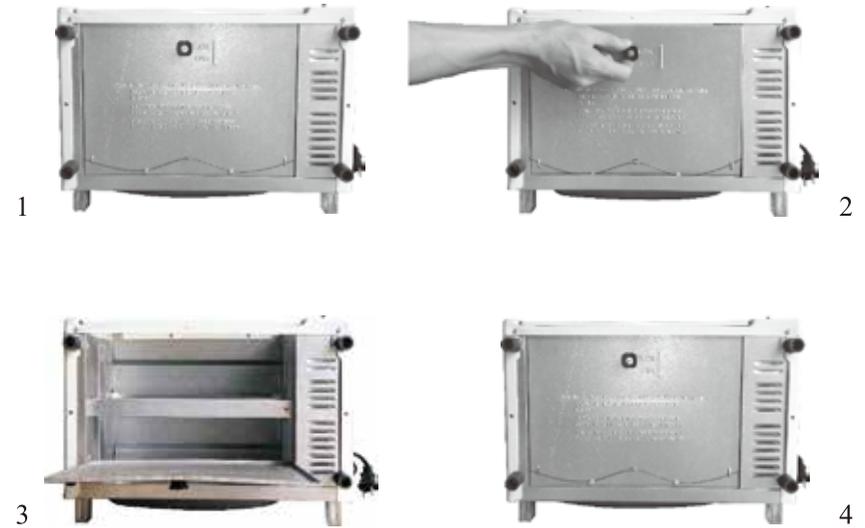

4. To clean the bottom of the Crumb Tray, this appliance has a drop open crumb tray at the bottom of the baking chamber. First, unplug this appliance and allow cooling. To clean out the crumbs, simply tilt the unit backwards and push the "Crumb Tray Slide Fastener" towards the rear, down allow dropping on counter top. Wipe interior of crumb tray with a damp cloth. After cleaning, slide the "Crumb Tray Slide Fasteners" into the tabs to lock the crumb tray. Washing of the interior of the crumb tray is accomplished by placing unit on its back side and allow crumb tray to fall forward for easy cleaning.

SPECIFICATIONS

Model Number : MMO9S	
Description: 9L Mini Oven	
Voltage: 220-240V	Capacity : 9 Litres
Wattage: 1000W	Frequency: 50/60Hz

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd & Maxim Housewares

P.O. Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd & Maxim Housewares

P.O. Box 19, Altona North

Victoria, 3025, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: MMO9S

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products may differ slightly from what is in, or depicted in this user manual or on the product and its carton.

Product: Made in China.

To view the full range of Maxim Housewares products, please go to our website.

www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au