

MAXIM®



Digital Wall Clock LED

Model Number: MWC01

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT


 
WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate this product with if the product malfunctions, or appears damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- Close supervision is necessary when any appliance is used by or near children.
- For protection against electric shock, do not immerse the unit in water or any other liquid.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
- Do not place on, or near a hot gas or electric burner.
- Not suitable for use outdoors.
- Do not use the appliance other than for its intended use.

FUNCTIONS

- All-age calendar: from 1900 to 2099 A.D.
- Alarm ring: a group of rings can be set. The ring is tick sound and lasts one minute.
- The function for alarm OFF: you can start or close this function.
- The function of timing: stopwatch calculagraph and count-down calculagraph.
- Thermometer: it can tell the temperature between -10°C and 50°C automatically. You can choose Celsius or Fahrenheit (°C/°F).
- It can tell the time in 12/24 hour systems

FUNCTIONS OPERATING UNDER THE NORMAL TIME MODE

1. Press "MODE" key, it show the present time and the present set alarm. If it shows a  Symbol, please set alarm timer; if it shows "TIME", please set the present time.
2. Press "UP" key, it show how long it is to the present time and set time. "TIME" refers to the present time.
3. Press "DOWN" key, it can be changed between 12/24 hours systems.
4. Press "°C/°F" key, change the temperature between Celsius and Fahrenheit.
5. Press "SNOOZE" key to choose alarm ON/OFF function. If it shows the  Symbol, it will ring if time is up. If it shows "SNOOZE", it will ring again if time is up.

ALL PARTS HAMONIOUS MODE

Press "MODE" key for 3 minutes, it shows the each function setting mode, in proper order, they are: time-set, alarm-set, alarm "ON/OFF" set, timing-set, stopwatch-set.


1. Time Setting Mode:

Press "MODE" key for 3 minutes, come to time setting mode, now hour-set is twinkling.

- A. The screen displays "TIME", Press "MODE" key to choose hour-minute-year-month-day in proper order, and the chosen item will twinkles.
- B. Press "UP" key, and add 1 to every chosen item.
- C. Press "DOWN" key, each chosen item subtracts 1.
- D. Press "°C/°F" key, change temperature mode between Celsius and Fahrenheit.
- E. It is no use to press "SNOOZE"

2. Alarm ON Setting Mode:

Set hour-minute-year-month-day, then press "MODE" key to come to the alarm ON setting mode automatically.

- A. The screen shows  symbol, press "MODE" to choose "minute". Chosen item will twinkle.
- B. Press "UP" key, and add 1 to every chosen item.
- C. Press "DOWN" key, each chosen item subtracts 1.
- D. Press "°C/°F" key, change temperature mode between Celsius and Fahrenheit.
- E. It is no use to press "SNOOZE"

3. Alarm OFF Setting Mode:

After setting alarm ring, press "MODE" to come to alarm OFF setting mode automatically.

- A. The screen shows "SNOOZE" key, alarm OFF time twinkles.
- B. Press "UP" key, and add 1 to every chosen item.
- C. Press "DOWN" key, each chosen item subtracts 1.
- D. Press "°C/°F" key, change temperature mode between Celsius and Fahrenheit.
- E. It is no use to press "SNOOZE"

4. Time Setting Mode:

After setting alarm OFF, press "MODE" key to come to timing setting mode automatically.

- A. The screen shows "SNOOZE" key, alarm OFF time twinkles.
- B. Press "UP" key, and add 1 to every chosen item.
- C. Press "DOWN" key, each chosen item subtracts 1.
- D. Press "°C/°F" key, change temperature mode between Celsius and Fahrenheit.
- E. It is no use to press "SNOOZE"

OPERATIONS

1. Place the scale on a stable surface.
2. Position yourself on the scale.
3. The scale starts automatically and calibrates the weight. When it's finished, the value flashes and then shows for 6 seconds.
4. Use the button on the back of the scale to set measurement unit (kg, lb or st).
5. The scale turns off automatically when not used.

SPECIFICATIONS

Capacity:	6kg – 180kgs
Resolution:	0, 1 kg
Unit:	kg, lb, st
Unit's Dimensions:	300 x 300 x 21mm
Batteries (not included):	2 x AAA

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. GAF Control (Sales) Pty Ltd guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd

441 Kororoit Creek Road, Altona

Victoria, 3018, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: MBS01

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim products, please go to our website.

www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au