

6.5L Slow Cooker Stainless

User Manual
Model Number: NSC-650

kitchenpro
MAXIM[®]



Please read these instructions carefully and retain for future reference.

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Do not operate the slow cooker on an inclined surface.
- Do not move or cover the slow cooker while in operation.
- Do not immerse the base of the slow cooker in water or any other liquid.
- Use your slow cooker well away from walls and curtains.
- Do not use your slow cooker in confined spaces.
- Do not touch any metal surface of the slow cooker whilst in use as it will be hot.

Please exercise care when using any electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance.

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug- do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service persons.
- This appliance must not be immersed in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner.
- Do not immerse the appliance in water or any other liquid unless specified.
- This appliance contains no user servable parts. Any maintenance other than cleaning should be performed by a qualified person.

FEATURES

1. **Quality Glass Lid-** Fits neatly onto the ceramic pot to retain heat and moisture for best results. The transparent glass allows you to view the food during cooking without lifting the lid, preventing the heat from escaping.
2. **Removable ceramic crock-** The durable ceramic pot is removable to allow for convenient serving at the table, storing of leftovers and easy cleaning. The crock can be washed in dishwasher.
3. **Temperature Control Dial-** Allows you to select the desired temperature for each recipe. LOW, HIGH and AUTO.
4. **Power ON Light-** Indicates that the slow cooker is turned on and heating.
5. **Cool touch handles and lid knob-** Allows you to lift and carry the slow cooker to the table when hot.
6. **6.5 litres capacity-** Suitable for a large family.

INSTRUCTIONS

1. Before using you Maxim slow cooker, wash the ceramic pot and lid in warm soapy water. Rinse and dry thoroughly. **Important:** Do not immerse the slow cooker base in water.
2. Place the slow cooker on a flat level surface.
3. Prepare the food to be cooked and place inside the slow cooker. Put the lid on. **Note:** Do not place very cold or frozen food in the ceramic pot, it may cause cracking of the pot.
Important: The pot should not be placed under hot water if it has been taken directly from the freezer.
4. Insert the plug into the power outlet and turn the power on.
5. Select the desired setting on the temperature dial: LOW, HIGH or AUTO. The power on light will illuminate to indicate that the appliance is switched on.
6. Once the AUTO model has been set, the slow cooker will operate in HIGH setting and then change to LOW setting automatically after reach adequate temperature. Please Note: the machine will NOT automatically turn off unless turn the control knob to 'OFF' setting.

CARE & CLEANING

Wash the pot and lid in warm soapy water. To remove food stuck onto the bottom, soak the pot insert in warm water before cleaning and scrub lightly with a plastic or nylon brush. Rinse well and dry. The ceramic pot is dishwasher-safe.

Note: Do not place the ceramic pot into cold water if it is still hot. Wipe the surface of the slow cooker with a wet cloth and polish dry.

DO NOT use harsh abrasives, scourers or chemicals to clean any part of your slow cooker as these will damage the surfaces.

CAUTION: Do not immerse the base of the slow cooker in water or any other liquid.

SPECIFICATIONS

Model	Description	Voltage	Frequency	Wattage
NSC-650	6.5L Slow Cooker Stainless Steel	220-240Vac	50Hz	320W

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. GAF Control (Sales) Pty Ltd guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

**GAF Control (Sales) Pty Ltd
441 Kororoit Creek Road, Altona
Victoria, 3018, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: NSC-650

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim products, please go to our website.

www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au