

# 10 Cup Rice Cooker

User Manual  
Model Number: RC10

kitchenpro

**MAXIM<sup>®</sup>**



**Please read these instructions carefully and retain for future reference.**

## IMPORTANT

---

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## IMPORTANT SAFEGUARDS

---

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operation and save them for future reference.
- Remove and safely discard any packaging material before using the unit for the first time.
- To eliminate a choking hazard for young children, remove and discard the protective cover that is fitted to the power plug of the appliance.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split particularly where it enters the unit.
- To reduce the risk of electric shock, do not immerse or expose the product controls or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Do not let the cord hang over edge of table or bench, or touch hot surfaces, including the stove.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Do not use the appliance for other than its intended use.
- Do not leave the appliance unattended or move it when switched on.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.
- **Caution: The appliance will become hot during use and steam will escape from the opening in the lid. Do not obstruct the opening. Do not touch hot surfaces. Use handles or knobs.**
- Burns can occur from touching the hot surfaces. Use appropriate utensils such as potholders to remove the removable cooking bowl and steaming tray.
- Always operate the product on a flat, steady and stable surface to avoid it overturning. Operating on sinks, drain boards or uneven surfaces must be avoided.
- Never plug in or switch on the Rice Cooker without having the removable cooking bowl placed inside the cavity of the main housing.
- Do not put liquid into the main housing. Only the removable cooking bowl is designed to contain liquid.
- **CAUTION: Lift and remove the glass lid carefully and angled away from you to avoid scalding from escaping steam. Do not allow water from the lid to drip into the main housing, only into the removable cooking bowl.**

- Ensure that the unit switched off and unplugged from the power supply before cleaning and maintenance is performed.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- This product is intended for normal domestic/household use only.

## CAUTIONS TO READ BEFORE USING RICE COOKER

---

- Only use this product with the correct AC voltage outlet (correct rated voltage- see the box and the rating compliance label under the base of the rice cooker.)
- Be sure to unplug power cord when pan is not in cooker, or when cooker is not being used.
- Remember the “KEEP WARM” feature operates whenever the cord is plugged in
- Place the inner pot inside the cooker before operating. Turn the pot gently to right and left.
- If the switch button is difficult to press to the “cook” position, do not try to force it down. This difficulty usually occurs when inner pot is of fully inserted in cooker or when cooking has just finished.
- Place the lid on your inner pot while cooking; keep the lid in place after serving to prevent your rice from drying out or discolouring.
- Keep bottom of inner pot and surface of heater plate free of foreign matter to prevent operating malfunctions.
- Clean the inner cooking pot thoroughly before use the first use.

## SPECIFICATIONS


---

Model	Description	Voltage	Frequency	Wattage
RC10	1.8L Rice Cooker (10 Cup)	220-240V~	50Hz	700W

**READ AND SAVE THESE INSTRUCTIONS**

## FEATURES

- Capacity: 1.8 Litres
- Voltage/Frequency: 220-240Vac~50/60Hz
- Power: 700W
- Easy to clean
- Non-stick removable bowl
- Warm & Cook functions
- Keep warm feature
- Includes measuring cup

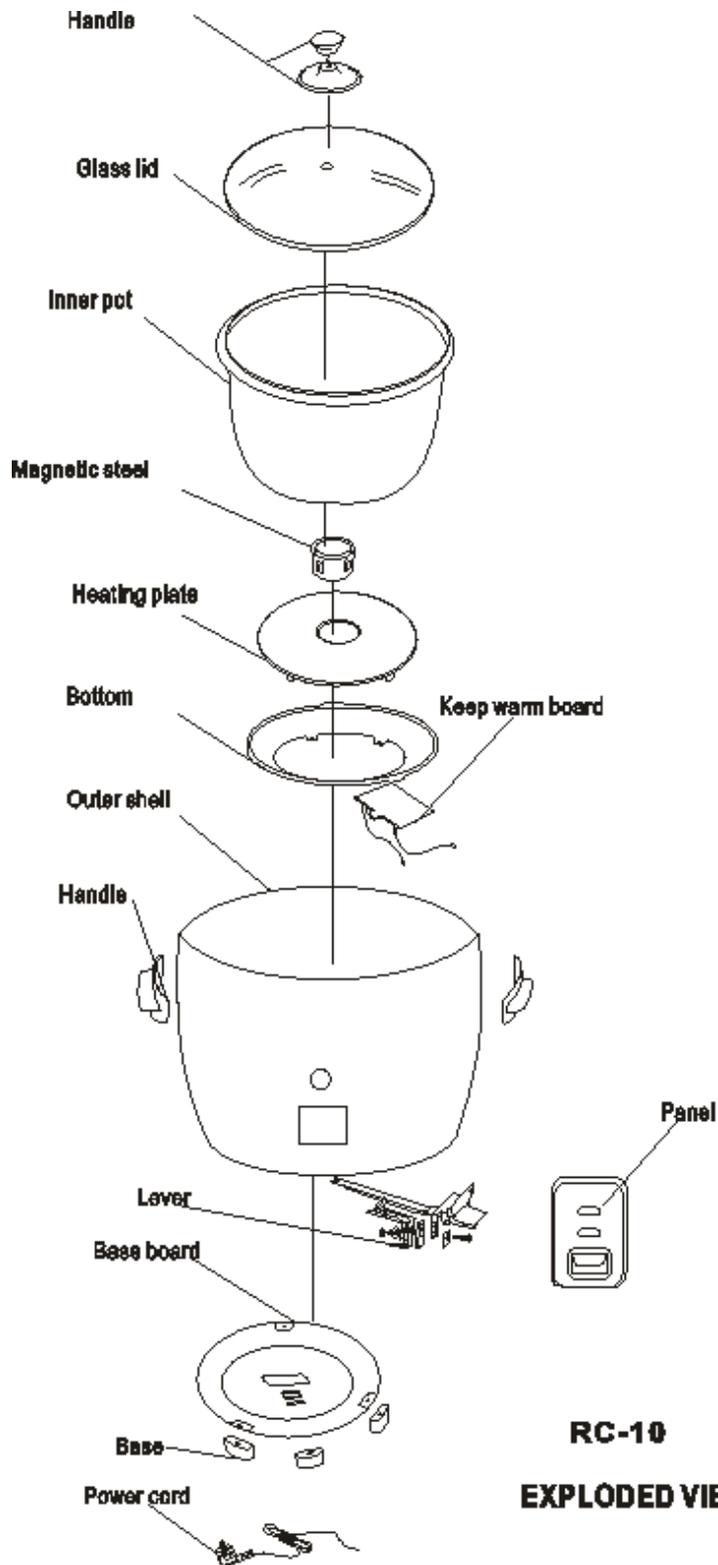

## MAINTENANCE PROCEDURES

---

1. Remove inner pot and lid and wash them in hot soapy water, taking care to rinse them completely, and then dry with a soft cloth.
2. Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
3. To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects; otherwise the cooker will not operate properly.
4. Improper cleaning of cooker may cause unpleasant odours.
5. Non-stick inner pot should not be cleaned with an abrasive cleaner, instead use plastic kitchen utensil to avoid scratching or damaging unit.
6. Do not wash rice in the inner pot otherwise it could damage the non-stick coating.
7. Do not use cooking oil in the inner cooking pot.
8. Any residue of vinegar or salt may cause pan to corrode.

## OPERATIONS

---


1. Using the measuring cup provided in the package, measure and add rice to the inner pot.



2. By using the measuring cup, add the amount of water to the rice inside the inner pot according to the following standard:


Cups of Raw Rice	Water add to the line on pot
20 Cups	20-20 1/2 Cups
15 Cups	15-15 1/2 Cups
14 Cups	14-14 1/2 Cups
12 Cups	12-12 1/2 Cups
10 Cups	10-10 1/2 Cups
8 Cups	8-8 1/2 Cups
6 Cups	6-6 1/2 Cups
4 Cups	4-4 1/2 Cups
2 Cups	2-2 1/2 Cups

3. Set inner pot in the cooker. Place rice and water in inner pot. Close the lid firmly. Turn pan gently to right and left. Close the cover firmly.
4. Plug in power cord. Do not plug in until ready to cook. Otherwise, rice may be spoiled. If pot is not in the cooker, cooking will not begin.
5. Press the switch. The "cook" indicator light shows cooking have started.
6. When rice is done, the switch will pop-up. After the switch pops up, leave covered for at least 15 minutes to steam rice.
7. Unplug after each use. Grasp the plug, not the cord.
8. When you stew, the water level should not more than 70% of the volume.
9. Do not attach the ventilating hole – you may burn yourself.

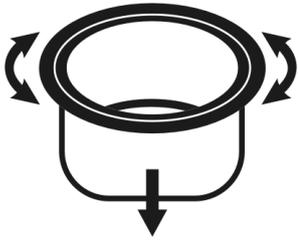

### **CAUTION**

**BEFORE STARTING TO COOK, CLEAN THE BOTTOM OF THE INNER POT AND THE SURFACE OF THE HEATER PLATE. THEN TURN THE INNER POT CLOCKWISE AND ANTI-CLOCKWISE SO THAT IT SITS PROPERLY ONTO THE HEATER PLATE INSIDE THE RICE COOKER. OTHERWISE, THE RICE COOKER WILL NOT WORK OR WILL BE DAMAGED.**

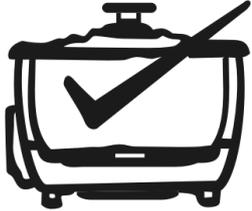

## CARE & CLEANING

---

### **AFTER EACH USE:**

- Switch off the Rice Cooker at the power outlet and then unplug.
- Allow all parts to cool before removing the removable cooking bowl.
- Wash the removable cooking bowl, steaming tray and glass lid in hot, soapy water, rinse and dry thoroughly.
- We do not recommend that any parts of your Rice Cooker are washed in a dishwasher as harsh detergents and hot water temperatures may stain or distort the removable cooking bowl and accessories.

**CAUTION: Do not use abrasive cleaners, steel wool, or metal scouring pads as these can damage the non-stick surface.**

- The Stainless Steel Housing can be wiped over with a damp cloth and then dried thoroughly.

**NOTE: NEVER IMMERSE THE MAIN HOUSING IN WATER OR ANY OTHER LIQUID.**

## FOR YOUR SAFETY

---

- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- The appliance has no user serviceable parts. In the event that it is dropped or damaged in any way, or fails to operate it should be returned to the place of purchase, together with your purchase receipt or the address below for repair or replacement.

## CUSTOMER SERVICE

---

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

\*This product may vary slightly to the product illustrated due to ongoing product development.

## **WARRANTY**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. GAF Control (Sales) Pty Ltd guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

### **Supplier warranting this product:**

**GAF Control (Sales) Pty Ltd  
441 Kororoit Creek Road, Altona  
Victoria, 3018, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

**Product Model Number: RC10**

**Purchase Date:** \_\_\_\_\_

**Retailer:** \_\_\_\_\_

**Retailer Store Address:** \_\_\_\_\_

**Name of Purchaser:** \_\_\_\_\_

**Address:** \_\_\_\_\_

\_\_\_\_\_

**Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly**

**Product: Made in China.**

**To view the full range of Maxim products, please go to our website.**

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

**For additional consumer support – email us at:**

**[gaf@gafcontrol.com.au](mailto:gaf@gafcontrol.com.au)**