

MAXIM[®]

kitchenpro

USER MANUAL

Large Sandwich Press & Grill

Model Number: SW28



READ AND SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

Before using, clean the top and bottom cooking surfaces with a warm damp cloth.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operation and save them for future reference.
- Remove and safely discard any packaging material before using the frypan for the first time.
- To eliminate a choking hazard for young children, remove and discard the protective cover that is fitted to the power plug of the appliance.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not place the appliance near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- The appliance should not be used on a power point that is also connected to another appliance. The combined wattage usage will overload the circuit.
- Keep the appliance a minimum distance of 200mm from walls, curtains, and other combustible or heat or steam sensitive areas/materials.
- Do not place on or near a gas burner, electric element or in or near a heated oven.
- Do not use the appliance on a sink or drain board.
- Do not leave the appliance unattended when in use.
- Always attach plug to the appliance first, then plug cord into the wall outlet.
- To disconnect, turn any control to "OFF", then remove plug from the wall outlet.
- Extreme caution must be taken when moving an appliance containing hot liquids.
- Do not touch hot surface when in use. Allow it to cool unit to cool down first. Use the handles for lifting and carrying the appliance.
- Do not use in conjunction with a timer or other remote control application.
- Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split particularly where it enters the unit.
- Fully unwind the cord before use.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- To protect against electrical hazards, do not immerse cord, plugs or the appliance in water or other liquid.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when the appliance is used by or near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is for household domestic use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The use of accessories or attachments is not recommended. It may cause hazards.
- Do not use abrasives to clean unit.
- After each use of the appliance, make sure the plates are cleaned. Always keep the unit clean.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCES

HOW TO USE

Pre-heating the appliance helps. Turn on the unit, the red light will come on and will switch to green when it is ready. Throughout the cooking process, the green light will switch on & off, based on the thermostat maintain the heat. The thermostat knob can be adjusted to suit: if doing steak, place on high for 3-4 minutes each side, then lower the temperature a bit. For thick slices bagels, you will need a higher temperature setting compared to thin slice breads. Breads with higher sugar content will brown quicker. To remove food off the plates, use a plastic spatula to avoid scratching the non-stick surface.

HINTS

Butter or margarine can be used on the outside of bread before toasting, but this is not essential. The top lid can be lowered to sit directly on top of what is being grilled or toasted, or you can adjust the height of the top plate to sit just above (without squashing the contents).

CARE & CLEANING

1. Remove plug from outlet.
2. Allow unit to cool down.
3. Wipe the cooking plates with a sponge or damp cloth. For stubborn spots, cover with a small amount of cooking oil and leave on for several minutes.
4. Remove with a paper towel.
5. Wipe the outside of the unit with a damp cloth and dry.

NOTE: DO NOT USE ABRASIVES OR METAL UTENSILS ON THE UNIT.

NOTE: NEVER IMMERSE THE UNIT IN WATER OR ANY OTHER LIQUID.

STORAGE

1. Close the grill.
2. Lift the locking clip and snap it closed over the handle.
3. Stand the unit up so that the Handle faces upwards. Wrap the cord around the legs, tilting the unit so that the cord can be also be wrapped around the bottom legs.
4. Store in the upright position.

NOTE: Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd & Maxim Housewares

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

www.maximhousewares.com

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

**GAF Control (Sales) Pty Ltd & Maxim Housewares
P.O. Box 19, Altona North
Victoria, 3025, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: SW28

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products may differ slightly from what is in, listed or depicted in this user manual, or on the product and its carton.

Product: Made in China.

To view the full range of Maxim Housewares products, please go to our website.

www.maximhousewares.com or www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au