

kitchenpro

MAXIM®

Teppanyaki & BBQ Grill

Model No: TG100




User Instruction Manual

Many thanks for purchasing this Maxim Kitchenpro Electric Teppanyaki & BBQ Grill. We would particularly advise that you carefully read and retain these operating instructions before using the appliance.

For your own safety read these instructions carefully before using the appliances.

Rated Voltage: 240V~
Rated Frequency: 50Hz
Rated Power: 2000W
MADE IN CHINA

Location of Parts and Control

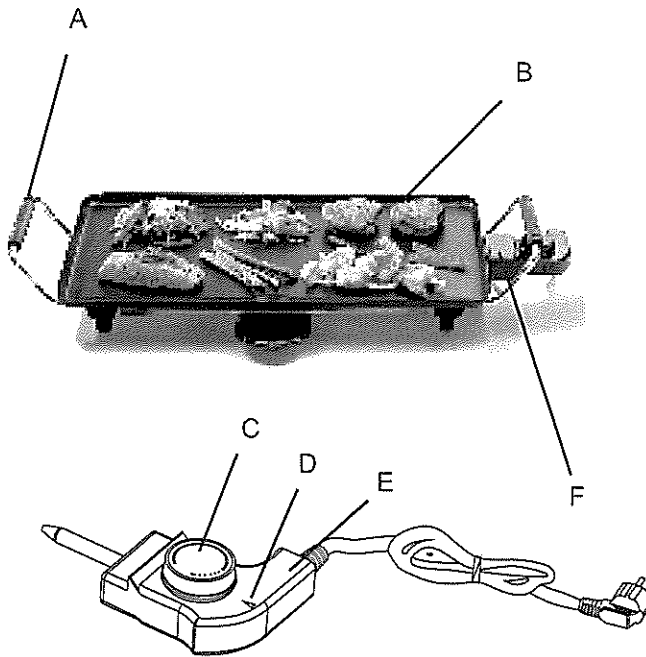

Location of Parts and Control

- A. Cool touch easy grip handles
- B. Grill
- C. Knob of thermostat control
- D. Indicator Light
- E. Removable thermostat control
- F. Thermostat control socket

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. If the supply cord is damaged, it must be replaced by the manufacturer or its authorized service agent or a similarly qualified person in order to avoid hazard & damage to the unit.
2. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
3. The appliance cannot be partially or fully immersed in water for cleaning.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or learning disabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. This appliance may only be connected to the same main voltage as shown on the rating plate.
9. To protect against risk of electrical shock, do not immerse or rinse housing, cord or plug in water or other liquid.
10. Close supervision is necessary when any appliance is used near children.

11. Unplug from power outlet when not in use, before putting on or taking off parts and before cleaning.
12. The use of attachment or accessories which are not supplied with the appliance are not recommended. This could result in electrical shock or injury or permanent damage to the appliance.
13. Do not let cord hang over edge of table or counter or touch a hot surface.
14. Do not use the appliance for other than intended household use.
15. Switch off the appliance before changing accessories or approaching parts, which move in use.
16. This appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current). Do not use any other electrical outlet.
17. Do not touch hot surfaces. Use handles.
18. An insulated hot pad protection is recommended when using this grill on surfaces which heat may cause damage.
19. The temperature of accessible surfaces may be high when the appliance is operating.
20. Only the appropriate power control probe supplied by the manufacturer must be used.
21. The appliance can only be used for household indoor only.
22. The power plug probe must be removed before the appliance is cleaned and that the appliance power inlet must be dried before the appliance is used again.
23. Only the appropriate power plug and heat control probe must be used.
24. Do not use metal spatula's as they may damage the cooking surface.

CAUTION!

The housing gets hot when operation, Risk of burns! Do not place the appliance on a sensitive surface (e.g. painted furniture) and keep a distance of at least 70cm from combustible materials (e.g. curtains).

When in use:

- Never put the appliance on a hob.
 - When the appliance is switched on the light will illuminate and extinguish as the thermostat switches the heating element on and off to maintain the required temperature.
 - A little hot fat can splash from the appliance when the thermostat is set to higher than 165 degrees Celsius.
 - Never allow metal cutlery to contact the grill plate, since this could damage the non-stick coating.
 - Do not touch the hot grill plate. Use oven gloves if you need to touch the appliance during or shortly after use.
1. Place the appliance on a flat, stable and heat-resistant surface; keep inflammable items away from the appliance.
 2. Smear a little of butter or cooking oil on the grill plate. This makes it easier to turn the food over.
 3. Plug the thermostat probe into the thermostat socket.
 4. Put the plug into an earthed wall power socket.
 5. Adjust the thermostat dial to your desired setting, the temperature light illuminates.
 6. Wait for several minutes until the temperature light has extinguished. The grill plate has now reached the required temperature. It is ready for use.
 7. Use the spatula to turn the food over during frying and grilling.

Grill cooking chart: This cooking chart is for guidance reference only.

Control No.	1	2	3	4	5
Temperature	110	130	160	180	210

FOOD, TEMPERATURE APPROX SUGGESTED COOKING TIME – FOR GUIDANCE/REFERENCE ONLY

Beef steaks - ½" thick	210°C	10 - 15 minutes
Chicken breasts	210°C	20 - 30 minutes
Pork chops	160°C	15 - 20 minutes

Hamburgers	180°C	10 – 15 minutes
Hot dogs	160°C	10 – 15 minutes
Sausages	180°C	5 – 10 minutes
Fish filets	160°C	10 – 15 minutes
Bacon	160°C	10 – 12 minutes
Vegetables	160°C	10 – 15 minutes
Pancakes	160°C	5 – 10 minutes

CLEANING INSTRUCTIONS

1. Disconnect the plug from wall power outlet and then remove the power cord connector probe together with power cord from the appliance.
2. Allow the unit to completely cool.
3. Wipe off the grill pan with warm soapy water using a sponge or dishcloth.
4. Wipe off thoroughly to remove soap residue.
5. Always unplug the grill and allow it to cool before starting to clean.
6. Do not use abrasive cleaners or scouring pads.
7. Do not put temperature control or power cord in the dishwasher.
8. Never immerse the cord, plug or temperature selector probe in any liquids.
9. Do not soak the grill in water.
10. The connector probe must be removed before the appliance is cleaned and that the appliance power inlet must be dried before the appliance is used again.

Instructions on environment protection



Do not dispose of this product in the usual household garbage at the end of its life cycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in its marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use- or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier guaranteeing this product

Maxim Housewares
38 Allied Drive
Tullamarine
Victoria, 3043.

Warranty

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: TG100

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly.

Product Made in China.

To view the full range of Maxim Housewares products, please go to our website.
www.maximhousewares.com

For further consumer support – please email us at:
info@maximhousewares.com