

Tiffany

Transparent Cordless Kettle 1L

User Manual

Model Number: TKT1



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT


WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating the Tiffany kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle.
- To eliminate a choking hazard for young children, remove and discard the protective cover fitted to the power plug.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Do not place the kettle on or near a hot gas or electric burner/element, hot surface, stove or toaster or where it could touch a heated oven.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Do not operate the appliance without any water in it to avoid damaging the heat elements
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water or other liquids. Ensure that the kettle is used on a firm and flat surface.
- Always ensure that the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
- Do not operate the kettle on a sink or drain board.

- To protect against electric shock or personal injury, do not immerse kettle base, power base, power cord, or power plug in water or allow moisture to come into contact with these parts.
- While the water is boiling, or just after the water has been boiled, avoid contact with steam from the spout as it will scald.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Keep a minimum distance of 20cm.
- Do not place anything on top of the lid.
- Use caution when pouring water from the kettle; do not pour the water too quickly.
- Be careful when refilling a hot kettle.
- Do not use appliance other than its intended use.
- Do not leave the appliance unattended when switched on or when water is boiling.
- Do not let children play with parts of the packaging (such as plastic bags).
- Close supervision is necessary when any appliance is used by or near children.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- The kettle must be used only with the power base supplied.
- Use kettle only for heating water.
- Do not use the kettle without any water.
- Extreme caution must be used when moving an appliance containing hot water.
- Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
- Do not plug this unit into an extension lead, double adaptor or power board.
- The kettle is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats.
- Do not use the appliance outdoors. **FOR INDOOR USE ONLY.** Misuse may cause injury.
- The use of accessory attachments, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the appliance during filling with water and cleaning.
- This product must always be used and stored in the upright position.
- Switch off and unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool completely before disassembling parts, and before cleaning the appliance.
- Always take off housing from the base before filling, pouring or cleaning.
- Never allow water to come into contact with connector.
- The appliance must be dried before the appliance is used again.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Always ensure the lid is closed and do not lift it while the water is boiling, as scalding may occur.
- Do not fill the kettle past the MAX fill line.
- If the kettle did not fill with enough water or it is empty, when switched on – the kettle will cause the safety cut-out to switch off the power automatically. If this happens see sub heading “**USEFUL ADVICES**”
- This appliance is hot when in use. To avoid burns or scalds, do not let bare skin touch hot surface. Always disconnect the power base unit from the electrical outlet when filling the kettle with water or emptying and when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- This appliance is intended to be used for normal domestic/household use and similar applications only such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- This appliance has no user serviceable parts. Any maintenance other than cleaning should be performed by a qualified person.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

FEATURES

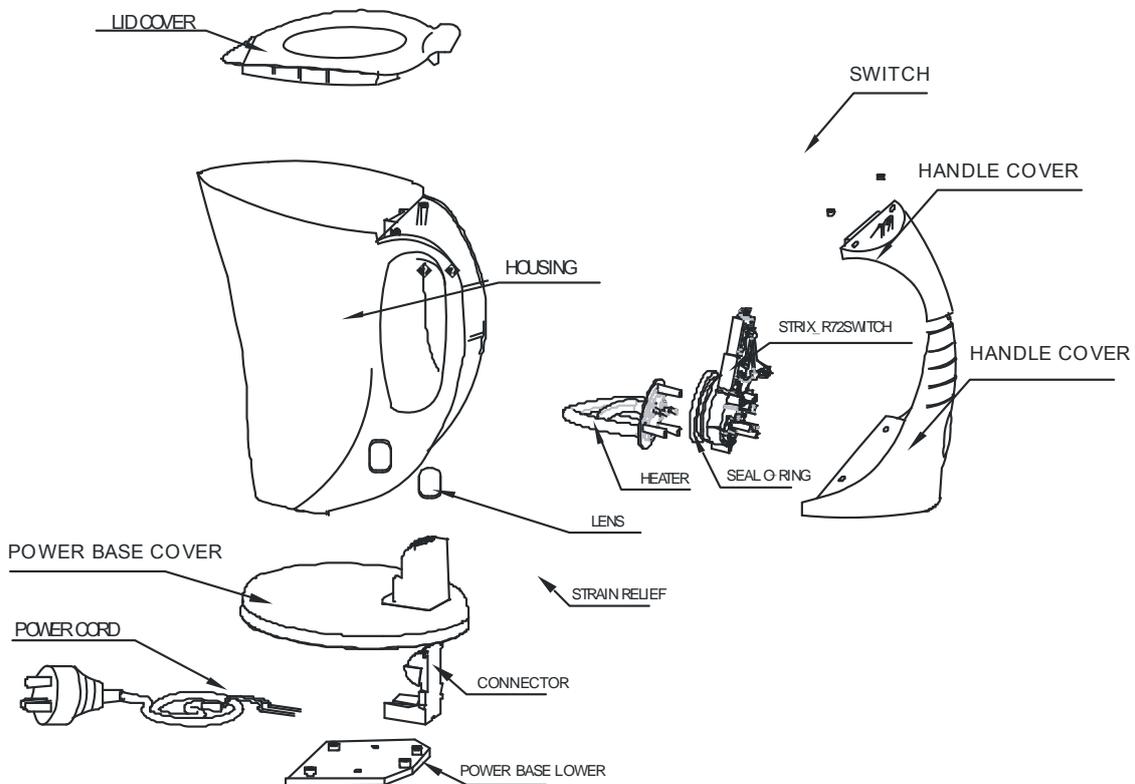

BEFORE FIRST USE

Carefully remove your kettle from the box;

Before using the first time, remove any sticker or packaging material from inside or exterior of the kettle.

Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underneath of the kettle and base) corresponds with the voltage in your home.

Fill to 'Max', boil, discard the water and then rinse. Do this three times, to remove any dust, residues etc from the kettle.

Wipe the external surface with a soft damp cloth.

Periodic descaling will maintain the best performance of the kettle. Descale intervals depend on the hardness of your local water supply.

POSITIONING

- Put the power base on a stable, dry, level surface.
- The underside of the base is fitted with a cord storage feature. Unwind the length of cord required to reach the power outlet.
- Ensure the cord does not overhang, and cannot be caught or tripped over.

FILLING

CAUTION: If the kettle has just boiled, it will be full of steam. Keep hands clear, as steam may escape from the kettle when opening the lid.

- Remove the kettle from the power base unit.
- Press the lid release button and pull lid back. To close lid simply press the lid.
- Fill the kettle with the desired amount of water, but do not fill above the 'Max' line. Do not overfill the kettle over the Max level because the boiling water will be ejected from the spout while operating. The minimum amount of water should reach the Min marking.
- Close the lid and place the kettle back on the power base. Make sure the lid is securely closed before boiling.

NOTE: The water level should be between the MIN and MAX fill line.

SWITCHING ON

CAUTION: Keep clear, as steam may escape from the spout when boiling.

NOTE: Do not use the housing without base.

- Position the kettle on the power base.
- Plug the kettle into a power outlet and switch on.
- To switch on, lift up the On/Off switch, the kettle will begin to boil. The indicator light will light up.

SWITCHING OFF

- When the water boils, the kettle will automatically switch itself off.
- You can stop the boiling process at anytime by lifting the On/Off switch to the 'Off' position.
- Ensure that the kettle is switched off before removing it from its base.
- To pour water from the kettle, take the kettle from the base.

BOIL-DRY PROTECTION

Using the kettle with insufficient water will shorten the life span of the element.

Should you accidentally switch on an empty kettle; the safety boil-dry cut-out will switch the kettle off. If this occurs, allow the kettle to cool down completely for at least 5 minutes before refilling it with water. Turn on by lifting the On/Off switch. After 15 minutes the kettle will switch on automatically and begin to boil the water.

USEFUL ADVICES

If your kettle switches off before the water boils, you have to descale the volume of water in the kettle.

In case of the operation with insufficient water safety cut-out device will switch off the kettle automatically.

CARE & CLEANING

- Always disconnect the kettle from the power outlet and allow the kettle to cool completely before cleaning.
- Wipe the outside of the kettle with a damp cloth. You may use a little mild detergent to remove stubborn marks.
- Keep all connectors and sockets dry.
- Do not immerse the kettle or power base in water or any other liquid.
- Do not use harsh or abrasive cleaning agents or solvents.

Descaling:

- Lime scale may be white, coloured, even rusty looking.
- To receive the best performance from your kettle, descale it regularly.
- Add 25g of citric acid to the kettle and then fill to the 'Max' water line with water. Boil the kettle and leave it to stand for 15 minutes.
- A commercial descaler suitable for plastic products (most kettles have plastic parts) may be used. Follow the instructions provided with the descaler.
- After de-scaling, rinse several times, fill, boil and discard the water, to remove any chemical residue.

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.