

Tiffany

USER MANUAL

Hair Brush Straightener

Model Number: THB230



READ AND SAVE THESE INSTRUCTIONS

Please read this instruction manual carefully before using your new Tiffany Hair Brush Straightener.

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Before using, check that the voltage of the wall outlet corresponds to that shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug, should the appliance malfunction, or if it has been dropped or damaged in any manner. Return appliance to the nearest supplier for examination, repair or electrical or mechanical adjustment.
- Always ensure the appliance is switched OFF, prior to plugging into the power outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or a qualified technician in order to avoid a hazard.
- To protect against risk of electrical shock, do not put the unit into water or any other liquid. To disconnect, turn the control to "OFF", then remove plug from power outlet by grasping the plug, not the cord (never pull the cord).
- This appliance must not come in contact with water or any other liquid.
- Always switch off your appliance at the power outlet and remove plug when not in use.
- Do not store or leave this appliance in a position where it might fall into tubs, basins, baths or vessels which contain water or electrically conductive liquids, even when the appliance is turned off.
- When the appliance is used in bathroom, unplug it after use since the proximity of water presents a hazard, even when the unit is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance should be positioned where it is out of reach for children.
- This unit should not be operated with wet or damp hands.



WARNING: Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.

- Regularly clean the unit by taking out the loose hair from the bristles.
- Do not cover or put the appliance on or near any heat sensitive or flammable materials such as plastic and always allow it to cool down first before storing away.
- Do not use the appliance for any other purpose, other than its intended use.
- Do not use the appliance on artificial hair.
- Do not drop or insert any object into an opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not use extension cord with this appliance.

- After use, do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by side of the appliance in storage.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current supplying the bathroom. Ask your electrician for advice.
- Before cleaning, always turn the appliance off, switch off at the power outlet, and unplug at the power outlet. Allow the appliance to completely cool before undertaking any cleaning.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not leave appliance unattended when plugged in or switched on.
- Use this appliance only for its intended use and described in this instruction booklet.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, hands, ears, face and neck.
- This appliance is not intended for commercial use.

Note: Please exercise care when using any electrical appliance

FEATURES:

1. Main Unit
2. Rubber tips
3. Ceramic coating
4. ON/OFF Switch
5. Temperature Switch '-'
6. Temperature Switch '+'
7. LCD Indicator Display
8. Rotating Power Cord



BEFORE USE:

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.

Read these instructions before use.

OPERATING YOUR HAIR BRUSH STRAIGHTENER:

1. Plug the device into main supply.
2. Turn on the device by pressing and holding the switch (4) for 2 seconds.
3. The LCD display will light up and show the temperature. After switching on, within about 2 minutes the device will automatically heat up to 180°C.
4. Set the appropriate temperature adapted to the thickness and quality of straightened hair from 80°C - 230°C.
 - Thin and delicate hair: 170°C - 200°C.
 - Standard hair: 190°C - 210°C.
 - Thick and strong hair: 210°C - 230°C.
5. Setting the temperature: the brush automatically heats up to 180°C. In order to decrease the temperature, you should press the temperature switch '-' (5) until the display shows the required value.
6. In order to increase the temperature, you should press the temperature switch '+' (6) until the display shows the required value.

USING YOUR HAIR BRUSH STRAIGHTENER:

- Do not use on greasy, dirty, sweat hair. Before use, the hair should be wash, dried and combed.
 - Use only on healthy hair.
1. Start the hair brush straightener from dividing the hair into equal strands, about 5cm wide and 5mm thick.
 2. Start from the back of the head and from the lower strands.
 3. Comb your hair from top to bottom.
 4. Be careful do not touch the hot tips with hands or scalp.
 5. Repeat step all over the head until you achieve the desired effect.
 6. The speed of moving the straightening brush should be fitted to the character and quality of the hair. Thin hair needs shorter time of straightening than thick hair.
 7. Allow the hair to cool, and then comb the strands.
 8. Turn off the device by pressing and holding the switch (4) for 2 seconds; the LED indicator will go off. Then plug off from the power socket.
 9. Allow the unit to cool.
 10. After each use, clean the device according to the instructions included in section "CLEANING & MAINTENANCE".

CLEANING AND MAINTENANCE:

- Turn your hair brush straightener off after use. Always turn the power OFF and remove the plug from power outlet before cleaning.
- Allow the unit to cool down first before cleaning.
- Do not immerse the appliance in water or any other liquid.
- To clean the exterior, simply wipe over with a dampened cloth and wipe dry.
- Do not wind the power cord around the unit as this may strain and damage the wiring.
- Do not use liquid or aerosol cleaners.
- Do not use solvents, strong detergents and sharp objects; as they may damage the housing of the device.
- The brush should be thoroughly cleaned off any hair.

SPECIFICATIONS:

Model	Description	Voltage	Frequency	Wattage
THB230	Hair Brush Straightener	220-240Vac	50Hz	65W

CUSTOMER SERVICE:

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.