

Tiffany

USER MANUAL

Ceramic Hair Straightener

Model Number: THS210



READ AND SAVE THESE INSTRUCTIONS

THS210 CERAMIC HAIR STRAIGHTENER INSTRUCTION MANUAL

Please read this instruction manual carefully before using your new Tiffany Ceramic Hair Straightener

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Before using, check that the voltage of the wall outlet corresponds to that shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug, should the appliance malfunction, or if it has been dropped or damaged in any manner. Return appliance to the nearest supplier for examination, repair or electrical or mechanical adjustment.
- Always ensure the appliance is switched OFF, prior to plugging into the power outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or a qualified technician in order to avoid a hazard.
- To protect against risk of electrical shock, do not put the unit into water or any other liquid. To disconnect, turn the control to "OFF", the remove plug from power outlet by grasping the plug, not the cord (never pull the cord).
- This appliance must not come in contact with water or any other liquid.
- Always switch off your appliance at the power outlet and remove plug when not in use.
- Do not store or leave this appliance in a position where it might fall into tubs, basins, baths or vessels which contain water or electrically conductive liquids, even when the appliance is turned off.
- When the appliance is used in bathroom, unplug it after use since the proximity of water presents a hazard, even when the unit is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance should be positioned where it is out of reach for children.
- This unit should not be operated with wet or damp hands.



WARNING: Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.

- Do not touch the plates on the appliance while it is hot.
- Do not cover or put the appliance on or near any heat sensitive or flammable materials such as plastic and always allow it to cool down first before storing away.
- Do not use the appliance for any other purpose, other than its intended use.
- Do not use the appliance on artificial hair.
- Do not drop or insert any object into an opening.
- Do not block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings of the appliance may be blocked. Keep the air openings free of blockage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not use extension cord with this appliance.

- After use, do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by side of the appliance in storage.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current supplying the bathroom. Ask your electrician for advice.
- Before cleaning, always turn the appliance off, switch off at the power outlet, and unplug at the power outlet. Allow the appliance to completely cool before undertaking any cleaning.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not leave appliance unattended when plugged in or switched on.
- Use this appliance only for its intended use and described in this instruction booklet.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, hands, ears, face and neck.
- This appliance is not intended for commercial use.

FEATURES



BEFORE FIRST USE

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.

OPERATING INSTRUCTIONS

Before inserting the plug into a power outlet, make sure that the correct voltage being used corresponds to what is indicated on the rating label, and that the socket has an earth facility.

WARNING: This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, hands, ears, face and neck.

IMPORTANT: Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

NOTE: After each use, turn off the appliance and unplug it from the power outlet. Always allow the unit to cool down first before storing away.

NOTE: The heat-up time will vary depending on which temperature settings you select. It is suggested to use the lower heat settings when using the appliance for the first time.

NOTE: There will be a smell odour when the appliance is first used, please note that this is normal to use.

After plugging in the power outlet, push the switch to "ON" position.

After 2-3minutes, the ceramic coating plates are hot and ready for use.

Hair straightener spray or serum can be used to enhance your hair shine.

Hold the plates tight (by pressing the handles together). Hold for 2-3 seconds and slide the unit away from the head towards the ends of the hair. (DO NOT TOUCH THE SCALP)

NOTE: Do not hold the hair between the plates for more than 2-3 seconds

When heating and the hair is semi-dry, steam will come out from the holes.

When one section of the hair has been treated, move to another section.

Turn the power switch to "OFF" position after usage is complete.

Pull out the plug and allow the unit to cool in a safe place before storing.

CARE, CLEANING & MAINTENANCE:

- Always turn the appliance OFF after each use. The unit must be switched OFF and unplugged from the power outlet before proceeding with any cleaning.
- Do not immerse appliance in water or any other liquid.
- To clean the exterior, simply wipe over with dry or slightly damp cloth.
- Do not use harsh detergents, abrasive, solvents or cleaners.
- Do not wind the power cord around the appliance as this may strain and damage the wiring.

NOTE: If the power cord set of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician.

SPECIFICATIONS

Model	Description	Voltage	Frequency	Wattage
THS210	Ceramic Hair Straightener	220-240V~	50/60Hz	35W

CUSTOMER SERVICE:

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.