

MAXIM[®]

USER MANUAL

Wall Mounted Hair Dryer 1600W

Model Number: WHD1600



READ AND SAVE THESE INSTRUCTIONS

WHD1600 Wall Mounted Hair Dryer 1600W INSTRUCTION MANUAL

Please read this instruction manual carefully before using your new Maxim Wall Mounted Hair Dryer 1600W

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the product for the first time.
- Before using, check that the voltage of the wall outlet corresponds to that shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug, should the appliance malfunction, or if it has been dropped or damaged in any manner. Return appliance to the nearest supplier for examination, repair or electrical or mechanical adjustment.
- Always ensure the appliance is switched OFF, prior to plugging into the power outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or a qualified technician in order to avoid a hazard.
- To protect against risk of electrical shock, do not put the unit into water or any other liquid. To disconnect, turn the control to "OFF", then remove plug from power outlet by grasping the plug, not the cord (never pull the cord).
- This appliance must not come in contact with water or any other liquid.
- Always switch off your appliance at the power outlet and remove plug when not in use.
- Do not store or leave this appliance in a position where it might fall into tubs, basins, baths or vessels which contain water or electrically conductive liquids, even when the appliance is turned off.
- When the appliance is used in bathroom, unplug it after use since the proximity of water presents a hazard, even when the unit is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance should be positioned where it is out of reach for children.
- This unit should not be operated with wet or damp hands.




WARNING: Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.

- Regularly clean the back filter of the unit.
- Do not cover or put the appliance on or near any heat sensitive or flammable materials such as plastic and always allow it to cool down first before storing away.
- Do not use the appliance for any other purpose, other than its intended use.
- Do not use the appliance on artificial hair.
- Do not drop or insert any object into an opening.
- Do not block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings of the appliance may be blocked. Keep the air openings free of blockage.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not let the cord hang over the edge of a bench, table or to touch hot surfaces.
- Do not use extension cord with this appliance.
- After use, do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by side of the appliance in storage.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current supplying the bathroom. Ask your electrician for advice.
- Before cleaning, always turn the appliance off, switch off at the power outlet, and unplug at the power outlet. Allow the appliance to completely cool before undertaking any cleaning.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not leave appliance unattended when plugged in or switched on.
- Use this appliance only for its intended use and described in this instruction booklet.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, hands, ears, face and neck.
- This appliance is not intended for commercial use.

FEATURES

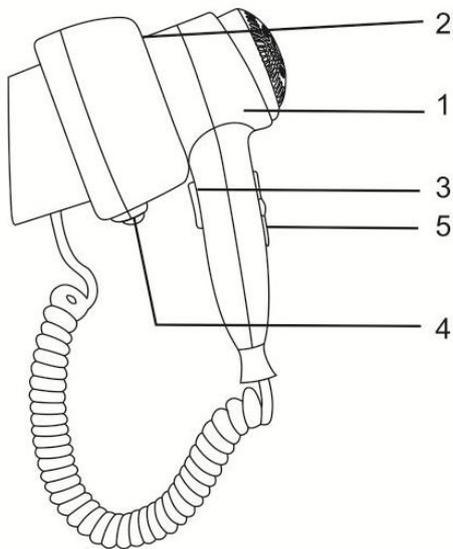

1. Dryer Body
2. Holder
3. Spring Button
4. Power Switch
5. Switch

ACCESSORIES

1. One pothook
2. 2 x pieces of toggles
3. 2 x pieces of screws

BEFORE FIRST USE

Before use, remove all packaging and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.


INSTALLATION

WARNING: Do not install hair dryer in wet or damp affected areas.

HOW TO INSTALL THIS UNIT WITH PLUG-CONNECTED WIRE:

1. Drill 2 holes of 6mm diameter, and the distance is 40mm between the two holes.

- Put the toggles inside the holes and tighten one screw to toggle (up), fix the holder to the pothook and tighten the other screw as picture 3.
- Connect with the general power and move power switch to 'ON' position.

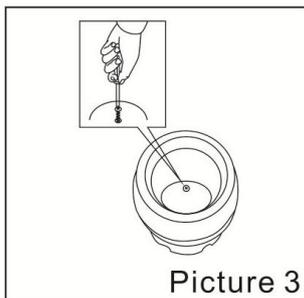

HOW TO INSTALL THIS UNIT WITHOUT PLUG-CONNECTED WIRE:

- Drill 2 holes of 6mm diameter, and the distance is 40mm between the two holes.
- Loosen the screws as shown on picture 3, to remove the front cover and remove to plug-connected wire from terminal.
- Open the wire entry hole; pull the reserved wire through that hole. Then align installation clip on the back cover to the hanger and push down. Then fix back cover on the wall with the screw.
- Fix the reserved wire on terminal, replace terminal to its original position.
- Fix the front cover after checking that there is no mistake.

OPERATING INSTRUCTIONS

Before inserting the plug into a power outlet, make sure that the correct voltage being used corresponds to what is indicated on the rating label, and that the socket has an earth facility.

- WARNING:** This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, hands, ears, face and neck.
- NOTE:** After each use, turn off the appliance and unplug it from the power outlet. Always allow the unit to cool down first before storing away.
- NOTE:** The heat-up time will vary depending on which temperature settings you select. It is suggested to use the lower heat settings when using the appliance for the first time.
- NOTE:** There will be a smell odour when the appliance is first used, please note that this is normal to use.

Switch on general power and pick up the dryer body, the dryer will work when the spring button is held on, move the push button up and down for higher and lower heating.

The switch marked 1, 2 & C controls the temperature & strength of the airflow as follows:-

- 1 – Strong Airflow & Heat
- 2 – Warm Airflow & Heat
- C – Cool Setting

CARE, CLEANING & MAINTENANCE:

- Always turn the appliance OFF after each use. The unit must be switched OFF and unplugged from the power outlet before proceeding with any cleaning.
- Do not immerse appliance in water or any other liquid.
- To clean the exterior, simply wipe over with dry or slightly damp cloth.
- Do not use harsh detergents, abrasive, solvents or cleaners.
- Do not wind the power cord around the appliance as this may strain and damage the wiring.

NOTE: If the power cord set of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician.

SPECIFICATIONS

Model	Description	Voltage	Frequency	Wattage
WHD1600	Wall Mounted Hair Dryer 1600W	220-240V~	50/60Hz	1600W

CUSTOMER SERVICE:

Australian Customer Service

GAF Control (Sales) Pty Ltd & Maxim Housewares

441 Kororoit Creek Road,

Altona, Victoria 3018

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.maximhousewares.com

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. GAF Control (Sales) Pty Ltd guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd & Maxim Housewares

441 Kororoit Creek Road, Altona

Victoria, 3018, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: WHD1600

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim products, please go to our website.

www.maximhousewares.com

For additional consumer support – email us at:

info@maximhousewares.com