

MAXIM[®]



Tyre Pump (with Cord)

Model Number: ATP

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

 
 
PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate this product with if the product malfunctions, or appears damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- For protection against electric shock, do not immerse the unit in water or any other liquid.
- The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
- Store air compressor in a secure location. If the air compressor is going to be unused for long periods of time, it should be stored in a dry place inaccessible to children.
- Keep the air compressor clean to maintain maximum output and safety. Examine, the plug, charger and cable pack on a regular basis and have them repaired by qualified technicians if they are damaged.
- The air compressor is designed for occasional use. Inflation over a long period will overheat the air compressor and may cause damage.
- The air compressor should not operate for more than 15 minutes at a time, after which it must be switched off and set aside to cool for at least 30 minutes before restarting. Allow the unit to cool for 30 minutes after each 15 minutes of use.
- If the air compressor emits abnormal sounds or overheats, turn it off immediately and let it cool off for minimum 30 minutes.
- Do not use the appliance other than for its intended use. Incorrect use of the air compressor may result in personal injury and/ or property damage.
- Never expose the air compressor to rain, frost or temperatures above 50°C (122°F).
- Never use the air compressor near flammable fluids or gases. Make sure your working area is well-lit.
- Protect yourself against electric shock. Avoid physical contact with grounded surfaces such as pipes, radiators, electric stoves, refrigerators, etc.
- Never allow children to connect/ disconnect the air compressor to/from power sources. Never leave children unattended with the air compressor and never allow them to play with accessories.
- Never allow anyone to pump air into mouth, ears, nose, etc of people, or animals. The air compressor is not a toy.

- Power required: 12 Volts Car Charger.
- Do not use air inflator on high pressure tires such as those used on trucks.
- Keep out of reach of children.
- Do not leave unattended.

PARTS & FEATURES

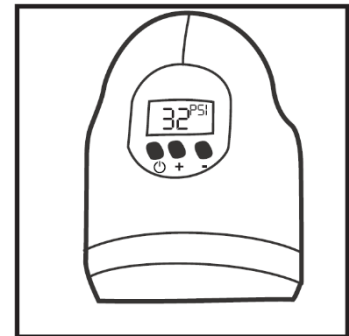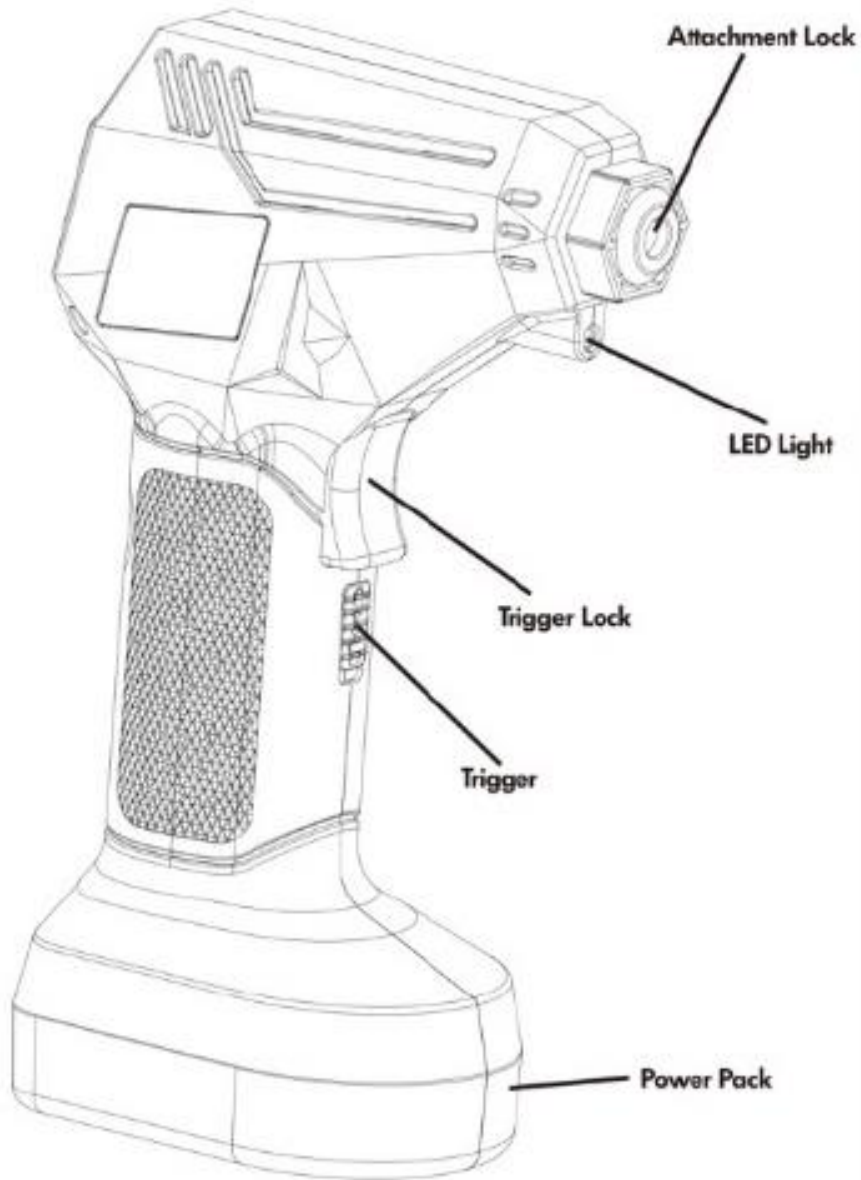

Digital LCD Display



Sports equipment nozzle



Balloon, toys, air mattresses nozzle



Threaded Connector

Air Pressure Hose

OPERATIONS – INFLATING TIRES

WARNING!: THE LCD DISPLAY MUST TURN ON BEFORE OPERATING AIR INFLATOR. PLEASE READ AND UNDERSTAND THE INSTRUCTIONS PROVIDED IN THE MANUAL PRIOR TO OPERATION.

1. Loosen the attachment lock approximately 3 rotations counter-clockwise (see Fig 3). Do not remove lock completely.
2. **IMPORTANT: Insert the air hose with threaded connector into the attachment lock. Press in firmly while screwing in clockwise until it can go no further. (See Fig 4).**
3. Turn the attachment lock clockwise until hand-tight.
4. Press the Power button below the LCD display to turn on (See Fig 5).

NOTE: After 30 seconds of inactivity, the digital tire gauge will turn off automatically to conserve energy.

5. To choose the desired pressure format (PSI, BAR, KPA), press the power button continuously until desired format displays.
6. Screw the threaded connector onto tire's valve stem quickly. When connected, the gauge will show current tire pressure.
7. Press "+" or "-" to set desired pressure level. Once set, wait a few seconds and until current tire pressure displays.

NOTE: After check and follow the manufacturer's recommended pressure, usually located on the door jamb of your vehicle.

 
 
 
8. Being sure trigger lock is in unlock position, press the trigger.
9. The air inflator unit will begin to inflate the tire to the set pressure level, and will shut off automatically when reached.
10. When done, press the trigger once to turn off the appliance, and slide the trigger lock to lock in position.
11. Remove the thread connector from the tire quickly, and replace the valve stem cap on tire, if required.

WARNING!: Connector may be hot. Use caution when removing.

NOTE: To avoid over-inflation of tires, please check the recommended tire pressure in the vehicle's owner manual. For bicycle tires, check for markings on tire.

NOTE: Use a separate pressure gauge for more accurate reading.

CAUTION!: Do not over inflate items beyond their needs. Most car tires will inflate properly between 24 and 32 psi depending upon the tire. Other bicycle tires may require substantially lower pressures.

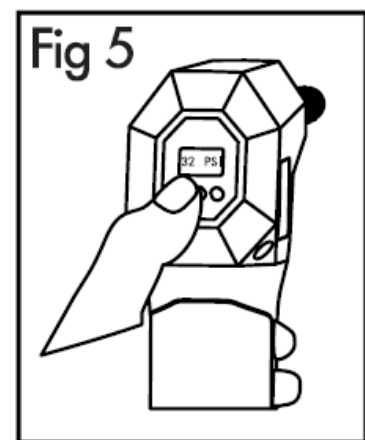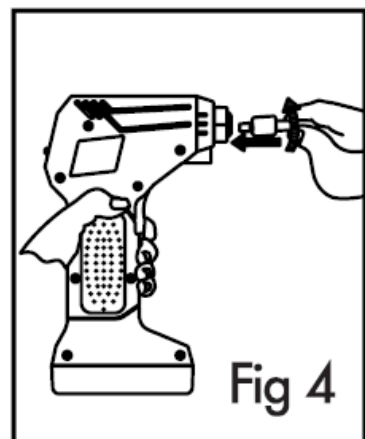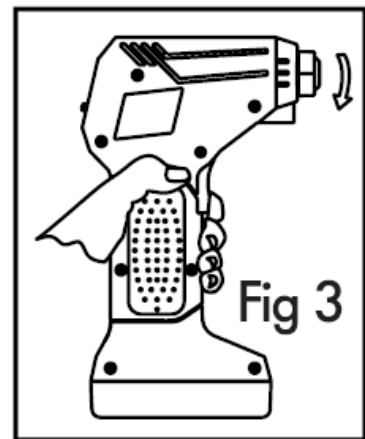

OPERATIONS – INFLATING ITEMS WITH ADDITIONAL TIPS

 
 
 
WARNING!: THE LCD DISPLAY MUST TURN ON BEFORE OPERATING AIR INFLATOR. PLEASE READ AND UNDERSTAND THE INSTRUCTIONS PROVIDED IN THE MANUAL PRIOR TO OPERATION.

1. Loosen the attachment lock approximately 3 rotations counter-clockwise (see Fig 6). Do not remove lock completely.
2. **IMPORTANT: Insert the air hose with threaded connector into the attachment lock. Press in firmly while screwing in clockwise until it can go no further. (See Fig 7).**
3. Turn the attachment lock clockwise until hand-tight.
4. Press the Power button below the LCD display to turn on (See Fig 8).

NOTE: After 30 seconds of inactivity, the digital tire gauge will turn off automatically to conserve energy.

5. Insert the tip adapter into inflatable object and push trigger.
6. Allow air inflator unit to run until fully inflated.
7. Remove tip adapter from the inflated object quickly, and replace valve cover if required.

NOTE: The pressure gauge will only provide an estimated reading. Use a separate pressure gauge for more accurate reading.

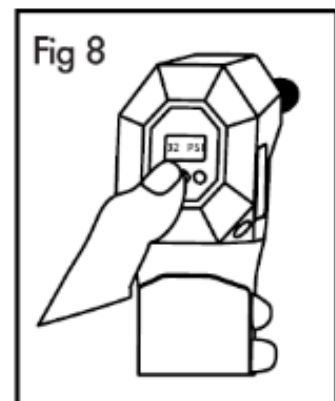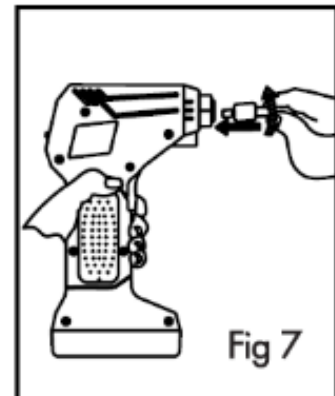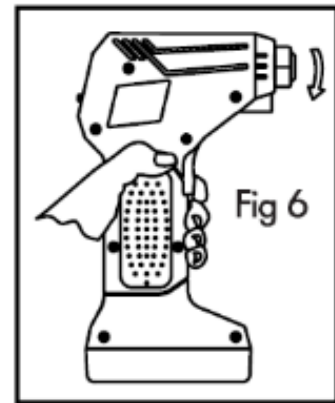

WARNING!: Avoid overinflating. NEVER EXCEED RECOMMENDED PRESSURE. The item being inflated may burst and cause serious injuries.

CAUTION!: Soft inflatable materials items will not have existing pressure reading. You must be careful not to over-inflate.

TROUBLE SHOOTING

A. **COMPRESSOR DOES NOT START/ BLOW FUSES**

1. Push the power plug firmly into the receptacle and twist it back and forth.
2. Check receptacle and plug terminals for dirt, particularly tobacco. Use a non-conductive probe, not fingers or metal to clean it out.
3. Check vehicle lighter fuse. Should be 10amps minimum.

B. COMPRESSOR RUNS BUT DOES NOT INFLATE

1. Be sure the connector always touches the core of the valve stem.
2. Check articles for leaks.
3. Check hose for breaks and leaks at fittings.

C. COMPRESSOR RUNS SLOWLY

1. Overheated from excessive use. Shut it off and let it cool for 30 minutes.
2. Voltage too low. Check condition of battery.

SPECIFICATIONS

Voltage	12V
Power	120W
Maximum Current	10A
Maximum Pressure	150 PSI
Pressure gauge accuracy	-1 / +1.5 PSI
Pressure Unit	PSI, BAR, KPA
Length of Hose	15cm
Cord length	3.5m

CUSTOMER SERVICE

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. GAF Control (Sales) Pty Ltd guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd

441 Kororoit Creek Road, Altona

Victoria, 3018, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: ATP

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim products, please go to our website.

www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au