

# **INSTRUCTION MANUAL**

---

## **UPRIGHT FREEZER**

Model no. LD-1000F

### **CONTENTS**

- SAFETY PRECAUTIONS ..... 1 ~ 3
- HOW TO USE ..... 4 ~ 5
- CLEANING ..... 5
- IN CASE OF THE FOLLOWING ..... 6
- BEFORE REQUESTING SERVICE ..... 7
- Replacing lamp and climate class ..... 8

Please read these instructions completely before operating the units.

# SAFETY PRECAUTIONS

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "⚠️WARNING" heading. However, the cases listed under the "⚠️CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

**⚠️ WARNING** Improper handling of the unit could lead to death or serious injury.

**⚠️ CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark **!** contains information that should be strictly adhered to.
- After reading the instruction manual, store it in an easily accessible place where the user(s) of this product can easily find it.

## ◆ PRECAUTIONS FOR INSTALLATION

### ⚠️ WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

 
## ◆ PRECAUTIONS FOR USE

### ⚠️ WARNING




DONT TAMPER

All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

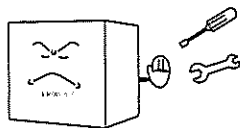


ELECTRICAL SHOCK HAZARDS

 Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

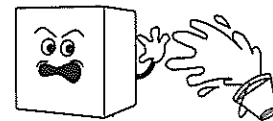


DANGER OF EXPLOSION

 Never put flammable or volatile substances into the unit as explosion and fire could result.

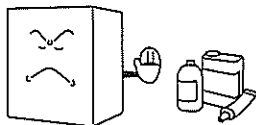


PROHIBITED

 Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.

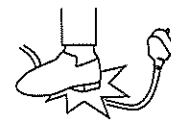


PROHIBITED

 Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

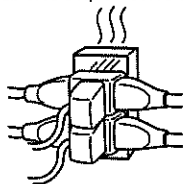

FLAMMABLE

 Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

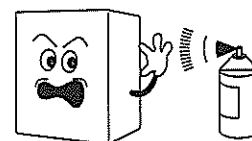


# SAFETY PRECAUTIONS


## ⚠ WARNING



 
This Freezer is intended for storage the meats or ice cream for sale. Do not use for other purpose than the intended as this could adversely affect items placed in the unit.

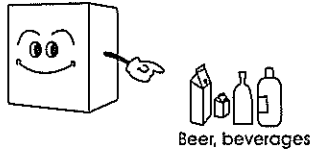

 
Never attempt to insert fingers, sticks, etc. Into the cold air suction outlet. A circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.

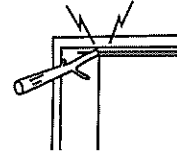

 
For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

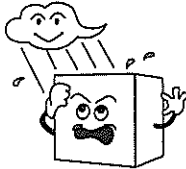

 
Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

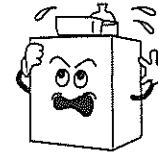

 
Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

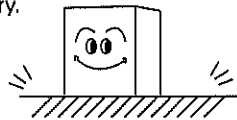

 
If you find gas leakage, please don't touch the chest freezer, and close gas and open the door for ventilation. Gas leakage cause explosion, fire, and fire injury.

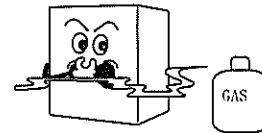

 
Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.

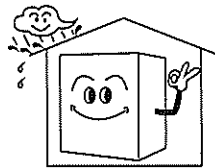

 Away from hot air sources  
Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.

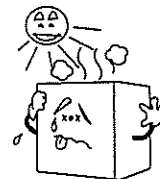

 Leave disassembly and disposal of the unit to qualified experts.

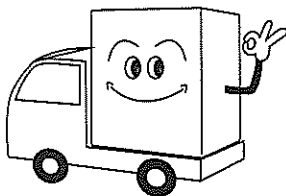


Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

# SAFETY PRECAUTIONS
 
## ⚠ WARNING


### WELL VENTILATED PLACE

Please make more than 10cm space between Chest freezer and wall. If there are no space, cooling capacity can drop down.

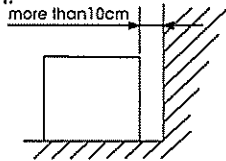


DANGER OF ELECTRICAL SHOCK

 If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

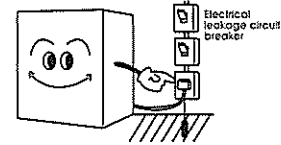


PROHIBITED

 Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

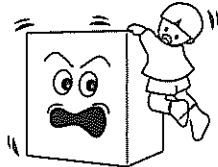


DISCONNECT POWER CORD PLUS FROM WALL OUTLET

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

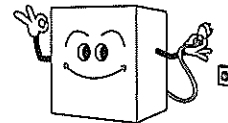


DONT PINCH FINGERS

 Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.




Do not touch

 
Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.

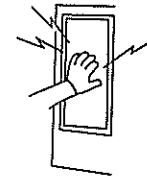

 When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.

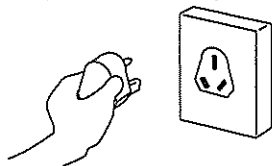


 Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

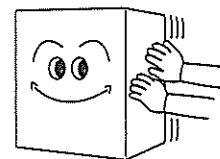


PROHIBITED

 Do not throw items onto the shelves and do not place items totaling more than 40Kg on each shelf. The shelf could fall down, possibly cause injury.

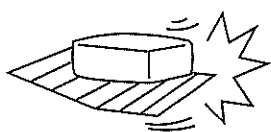

 Be sure attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.

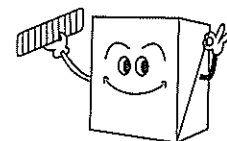

# HOW TO USE

---

## BEFORE USE

- Remove shipping package, tape, etc, and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Please insert power supply plug into the wall outlet ,single-phase to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

## WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

## DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.  
Water is in the drain tr

## EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

## SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the freezer.

The maximum load for a shelf (9) is 40kg.

# HOW TO USE

## PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

 
- Do not let items obstruct the cold air inlet and suction outlet.
  - Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
  - Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.

## THERMOSTAT INSTRUCTION

### Operation

#### Control Panel

The control panel is located below the doors on the front of the appliance.

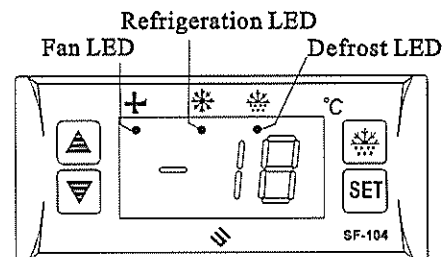

#### Front Panel Operation

##### 1. Set temperature

- Press **SET** button, the set temperature is displayed.
- Press **▲** or **▼** button again to modify and store the displayed value. Press **SET** button to exit the adjustment and display the cold-room temperature.
- If no more button is pressed within 10 seconds, the cold-room temperature will be displayed.

##### 2. Manual start/stop defrost: Press **☼** button and hold for 6 seconds to defrost or stop defrost.

##### 3. Display the evap. temperature: Press **▲** button and hold 6 for seconds, the evap. temp. is display, after 10 seconds the cold room temp. is resumed to be displayed.

##### 4. Refrigerating LED: During refrigerating, the LED is on; when the cold-room temp. is constant, the LED is off; during the delay, the LED flashes.

##### 5. Defrost LED: during defrosting, the LED is on; when it stops defrosting, the LED is off.

##### 6. Evap. Fan LED: the LED is on during fan operation. The LED is off when the Evap. fan stops operation.

##### 7. Parameters setup

- Press **SET** button for 6 seconds to enter parameter setting, at the same time "PAS" will be displayed and flash press **▲** or **▼** to enter a tens digit and press **SET** button to confirm; and then press **▲** or **▼** to enter a single digit and press **SET** button to confirm. If it is correct, parameter code E1 will be displayed (when it is set to 00, the password will be cancelled).
- Press **SET** button to select sequentially from E2, E3, E4, E5, E6, F0, F1~C4
- Press **▲** or **▼** button, the value of parameter will be displayed and can be modified and stored.
- If no more button is pressed within 10 seconds, it will return to normal operation mode.

##### 8. The factory default resumption: press **▼** button for 1 second and then press **▲** button simultaneously for 6 seconds, the LED flashes, all parameters will be resumed to factory defaults. After 10 seconds, it returns to normal operation mode.

 
##### 9. Parameters Locking

In normal operating, press **▼** button and hold for 6 seconds to lock the parameters if "OFF" is displayed or to unlock if "On" is displayed. Parameters can be displayed only and can not be modified if locked, but the adjustment of the set temp. is still active (factory default is "On")



**WARNING:** Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.

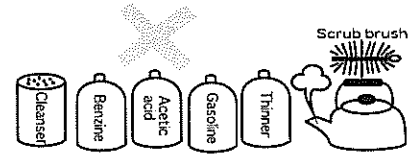

## 2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

# IN CASE OF THE FOLLOWING

## 1 POWER FAILURE

Keep opening and closing of the door to a minimum.  
Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

## 2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.  
Clean the compartment interior and wipe away all water.  
To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

## 3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.  
When moving the cooler, make sure that the feet do not damage the power cord.  
Do not let the feet hit against floor steps, thresholds, etc.

## 4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door.  
Make sure not to store the unused cooler at a location where children play.  
Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

INSTRUCTION MANUAL

# BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

# BEFORE REQUESTING SERVICE

No refrigeration at all	<ul style="list-style-type: none"> <li>● Is the power supply interrupted?</li> <li>● Is the power cord plug disconnected from the wall outlet?</li> <li>● Are the shop's power fuses blown and/or the circuit breaker activated?</li> </ul>
Inadequate refrigeration	<ul style="list-style-type: none"> <li>● Is the temperature setting appropriate?</li> <li>● Are items obstructing the cold air inlet and suction outlet?</li> <li>● Are stored items packed too tight?</li> <li>● Is the door open or is it opened and closed frequently?</li> <li>● Is the condenser clogged?</li> </ul>
Excessive noise	<ul style="list-style-type: none"> <li>● Are all feet in firm contact with the floor?</li> <li>● Is the rear panel of the cooler contacting the wall or other objects?</li> <li>● Are other objects in contact with the cooler?</li> </ul>
Condensation on cooler exterior	<ul style="list-style-type: none"> <li>● Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.</li> </ul>

Showcase sometimes stop running when thermostat turns off.

**INSTRUCTION MANUAL**

## REQUIRED INFORMATION

- |  |   |
|--|---|
| ① Nature of malfunction<br>(as accurately as possible) | ④ Customer's name, address,<br>phone number |
| ② Product number                                       | ⑤ Year and date of purchase                 |
| ③ Serial number  | ⑥ Desired date for service visit            |
- } (inscribed on badge)



**WARNING**-Do not use electrical appliance inside the food storage compartment, unless they are of the type commended by the manufacturer

**WARNING**-This appliance is not intended for use by persons ( including children)with reduced physical. Sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

-Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.Children should be supervised to ensure that they do not play with the appliance.

### Replacing the lamps

- The LED lampshave to be replaced by identical LED lamps which offered by the manufacturer only,and please do not replace the lamps yourself. Contact qualified personnel for this purpose

**Please see the climate class and matched temperature range for reference:**

Test room climate	Dry bulb temperature	Relative humidity
	°C	%
0	20	50
1	16	80
2	22	65
3	25	60
4	30	55
5	40	40
6	27	70
7	35	75
8	23.9	55



#### Disposal of packaging

All packaging materials should be disposed of in an environmentally friendly way.

The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC – free.

Do not allow children to play with the packaging and destroy plastic bags safely.

You can break or cut the cardboard into smaller pieces and give to a waste paper disposal service.



#### Environmental Protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres.