

PRODUCT USE, CARE AND SERVICE  
WARRANTY INSTRUCTIONS

**MAXIM**®  
kitchenpro



**Model: MKPK1S**

**1L Stainless Steel Cordless Kettle**



**READ AND SAVE THESE INSTRUCTIONS**

## BEFORE FIRST USE

Read and follow all the instructions in this "Use and Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY", and the "WARRANTY" statements.

For your convenience, record the complete model number (located on the product identification plate) and the date you received the product, together with your proof of purchase and attached to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

Carefully unpack the unit and remove all packaging materials. Wipe down the outside of the kettle and rinse the inside with water. It is recommended that you boil the kettle once and discard the water before first use.

## IMPORTANT SAFEGUARDS

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

**WARNING** - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split particularly where it enters the unit.
- To reduce the risk of electric shock, do not immerse or expose the product controls or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Do not let the cord hang over edge of table or bench, or touch hot surfaces, including the stove.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Do not use the appliance for other than its intended use.
- Do not leave the appliance unattended or move it when switched on. Boiling water will scald and may be ejected, if overfilled.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.
- Do not open the lid while the water is boiling.
- This product is intended for normal domestic/household use and similar applications only, such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotel, motels and other residential type environments;
  - bed and breakfast type environments

## READ AND SAVE THESE INSTRUCTIONS

### PARTS AND FEATURES



1. Spout
2. Kettle Body
3. Water Level Gauge
4. Power Base

5. Lid
6. Lid Button
7. Cool touch Handle
8. Power On/Off Switch

### OPERATING INSTRUCTIONS

#### • Before using your kettle

*It is recommended that you boil a full kettle twice without any additives and discard the water before first use. The kettle should always be unplugged when filling or adding water.*

#### • Using your kettle

1. Always remove the kettle from the power base before filling.
2. Lift the lid.
3. Fill the kettle between the MIN and MAX marks on the water level indicator with cold water.
4. Close the lid and place the kettle back on the power base. Make sure the appliance on a flat surface and the lid is securely fitted on the kettle before boiling.
5. Press the button gently to open the lid.
6. Check the Electrical connection:
  - Check whether the electrical voltage that you intend to use is the same as that of the machine. Details are to be found on the rating label (silver sticker) on the base.
  - Only connect the appliance to a property installed 220-240Vac ~50/60Hz safety socket.
7. Plug the power base into the power outlet and switch on at the mains.

8. To start boiling, press the power On/OFF switch to the down position.
9. The power indicator will illuminate and the kettle will start to boil. **NOTE: NEVER REMOVE THE LID DURING BOILING.**
10. When the water has boiled, the kettle will switch off automatically and the power indicator will extinguish. **CAUTION: DO NOT PRESS UP THE LID WHEN POURING.**
11. You can stop the boiling process at any time by pressing the switch to the OFF position.
12. After the kettle has switched off automatically, there may be a short delay before it can be re-boiled. This is usually no more than 20 seconds.
13. This kettle is equipped with a safety cut out; protecting the appliance from damage in case of inappropriate use. Should the appliance be accidentally operated without water or if all the water has evaporated, the safety cut out will automatically switch off the heating element.
14. In such a case, remove the plug from the wall socket immediately and wait 15 minutes for the cut-out to reset before refilling with cold water and boiling.
15. Disconnect the unit from the mains electric supply when not in use.

## **CLEANING AND MAINTENANCE**

1. Unplug from the power outlet, clean the body of the kettle with a damp cloth (to remove stubborn spots, wipe the surface with a cloth moistened in soapy water of a mild non-abrasive cleaner) then dry thoroughly.
2. Do not use solvents or harsh abrasives as these will damage the body of the kettle. Commercially available kettle cleaners are recommended and are available at supermarkets.

**WARNING: Never immerse the kettle, switch area or cord in water, or allow moisture to come into contact with these parts.**

From time to time, depending on the nature of your water supply, lime scale deposits can naturally form and adhere to the heating element. The amount of lime scale deposits largely depends on the water hardness in your area and the frequency in which the kettle is used. Lime scale is not harmful to your health but if poured into your beverage it can give a powdery taste to your drink. The kettle should be de-scaled periodically as indicated below:

1. Fill the kettle up to the max level with a mixture of one part ordinary vinegar and two parts water. Switch the kettle on and wait for it to automatically switch off.
2. Let the water/vinegar mixture remain in the kettle overnight.
3. Discard the mixture the next morning and re-fill the kettle to the max level with clean water and boil again.
4. Discard this boiled water to remove any remaining lime scale and/or vinegar mixture.
5. Rinse the inside of your kettle with clean water. Your kettle is now ready for normal use.

## **SERVICE**

1. Always check full operation as detailed above before returning any unit as faulty.
2. Do not operate the appliance with a damaged cord or plug, or if the unit malfunctions or is damaged in any way. Return the complete appliance to the place of purchase, together with your proof of purchase for in-warranty replacement, or inspection and repair.
3. This appliance contains no internal user serviceable parts.
4. In some products, the replacement of the power cord by the user is not intended. Special tools are required to replace the cord. Return the complete appliance to the place of purchase for in-warranty replacement, or inspection and repair.

## **SPECIFICATIONS**

<b>Model</b>	<b>Brand</b>	<b>Description</b>	<b>Voltage</b>	<b>Frequency</b>	<b>Wattage</b>
MKPK1S	Maxim	1L Stainless Steel Cordless Kettle	220-240Vac	50/60Hz	1850W – 2200W

## **CONFORMITY WITH DRECTIVES**

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## **CUSTOMER SERVICE**

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd

441 Kororoit Creek Road,

Altona, Victoria, 3018

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

## **WARRANTY**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

### **Supplier warranting this product:**

**GAF Control (Sales) Pty Ltd  
441 Kororoit Creek Road, Altona  
Victoria, 3018, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

**Product Model Number: MKPK1S**

**Purchase Date:** \_\_\_\_\_

**Retailer:** \_\_\_\_\_

**Retailer Store Address:** \_\_\_\_\_

**Name of Purchaser:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly**

**Product: Made in China.**

**To view the full range of Maxim Housewares products, please go to our website.**

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

**For additional consumer support – email us at:**

**[gaf@gafcontrol.com.au](mailto:gaf@gafcontrol.com.au)**