


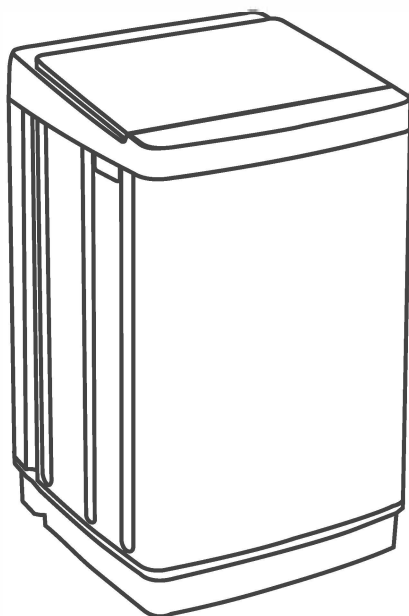

## TOP LOAD WASHING MACHINE

Model: HTLW55  
HTLW8



## INSTRUCTION MANUAL







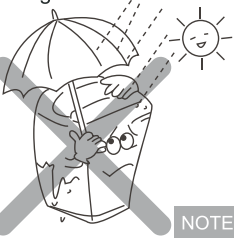
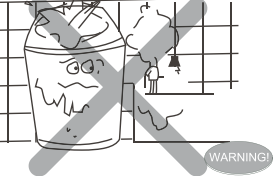

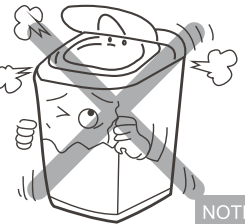
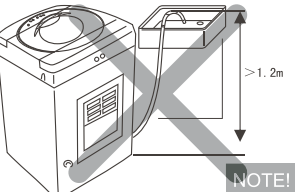

---

Please read instructions carefully before using


# CONTENTS

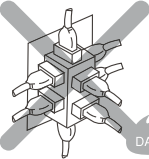1. SAFETY WARNING .....	1
2. PARTS IDENTIFICATION.....	2
3. ACCESSORIES .....	2
4. CONTROL PANEL.....	3
5. INSTALLATION .....	5
6. OPERATION .....	9
7. MAINTENANCE .....	11
8. TROUBLE SHOOTING .....	12
9. ELECTRICAL DIAGRAM .....	13


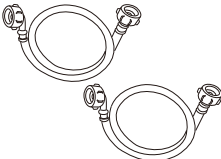

# SAFETY WARNING

<p>■ Do not overload circuits. Do not use an adapter. Do not use an extension cord.</p>  <p>DANGER!</p>	<p>■ Do not only hold the cord while pulling out the plug.</p>  <p>DANGER!</p>	<p>■ Do not let children play with the machine.</p>  <p>DANGER!</p>
<p>■ Do not put hands into the rotating tub.</p>  <p>DANGER!</p>	<p>■ Do not clean the body of washer with volatile solvent such as petrol and methane. Also, do not pour these solvents into the tub for washing or drying purposes.</p>  <p>WARNING!</p>	<p>■ Keep the washing machine away from any heat source.</p>  <p>WARNING!</p>
<p>■ Do not expose washing machine to direct sunlight or rain.</p>  <p>NOTE!</p>	<p>■ Do not place the washing machine in a damp place and do not pour water onto the control panel.</p>  <p>WARNING!</p>	<p>■ Never use water above 65℃</p>  <p>WARNING!</p>
<p>■ Make sure the lid is closed especially during spin.</p>  <p>NOTE!</p>	<p>■ The highest point of the drain hose must be in the height of 0.7m~1.2m above floor level.</p>  <p>NOTE!</p>	<p>■ Don't switch on the power if the water pressure is lower than 0.03Mpa and higher than 0.85MPa.</p>  <p>NOTE!</p>

# PARTS IDENTIFICATION

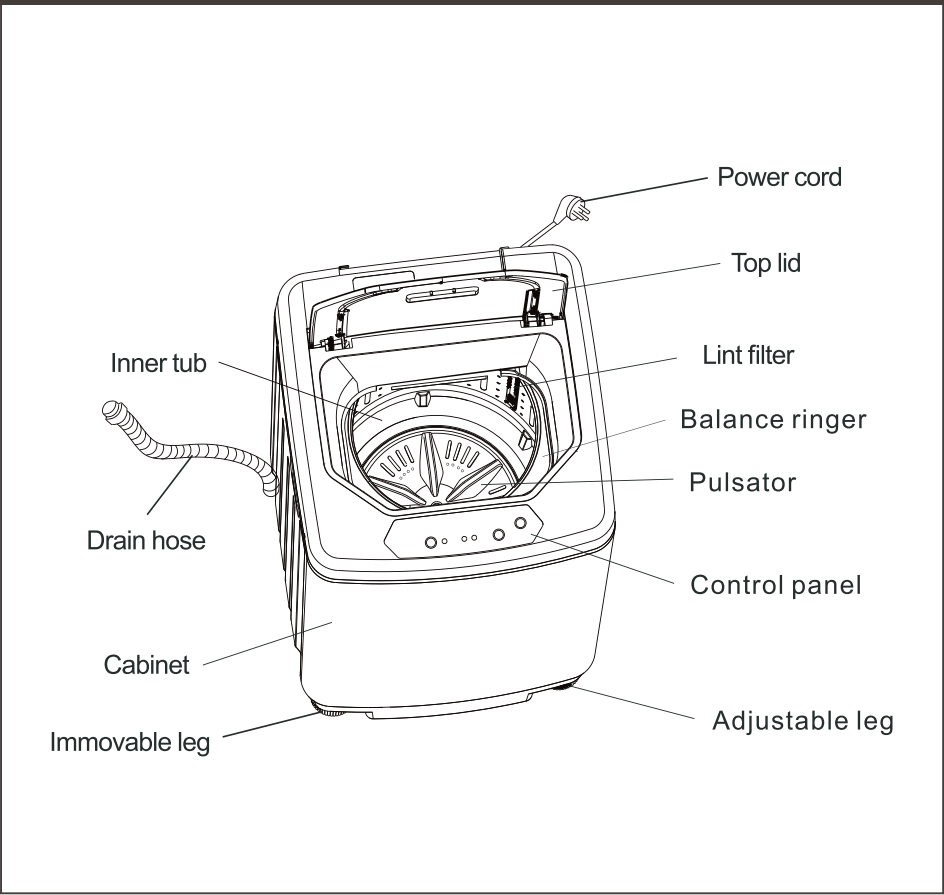


# ACCESSORIES

Accessories		
		 Self-tapping screw
User manual	Water inlet hose assembly Only for model with double screw thread water inlet pipe	Base cover Only for models including base cover

# CONTROL PANEL

Model NO.:HTLW55/HTLW8

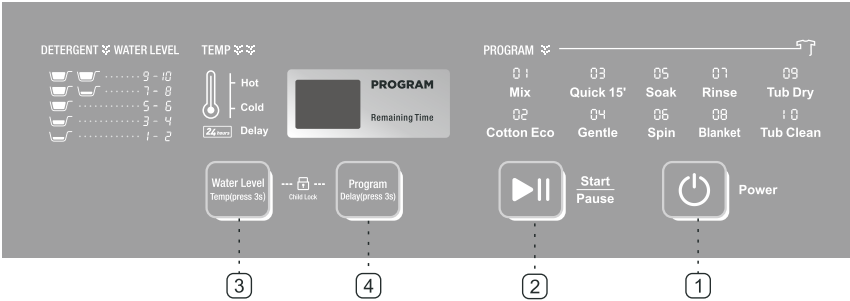

1	Power	<p>Push the “Power” button to switch on the power.</p> <p>Under power-on mode, push it to switch off the power.</p> <p>Push the “power” button to switch on the power, the switch will automatically switch off after 5 minutes.</p>																						
2	Start Pause	<p>After the power is switched on,press it to start the machine .The washing machine will start in accordance with the set operation procedures. After starting up, directly click this button, the machine will run according to the selected program. Press the pause key, To reset the corresponding “progress” and “water level”, press this key again, continue the former program or running according to the new set program.During operation, push it to pause.During pause,push it to restart and go on working.</p>																						
3	Water level/ Temp (press 3s)	<p>The key is a dual function keys for “water level” and “TEMP(press 3 secs)”. When choose “water level” , there are 10 water gears choose according to the quantity of clothes, the display screen shows the water level NO.: lowest - highest - water cycle</p> <p>1-2-3-4-5-6-7-8-9-10 cycle Lowest Highest</p> <p>During the standard program the washing machine will detect the size of the laundry and automatically select the water button and make your selection by pressing the “Water Level” button until desired level is shown (1-10).If there is water inside the tub and the machine cannot detect the laundry load, it will display water level “4”. If there is wet clothes in the tub, it may display water level “8”, you must select suitable water level by yourself.During operation of the wash, or rinse program, you can adjust the water level by pressing the Water Level button.The water level may vary due to the different moisture level of the laundry items.After long press the water level button 3 seconds, you can enter the water inlet mode selection mode after a drip: the digital tube displays "H"; Press the water level button again to switch back to the cold water inlet mode, and "C" is displayed.</p>																						
4	Program/ Delay (press 3s)	<p>The key is a dual function for “Program” and “Delay (press 3 secs)”. The default display screen shows the wash programe NO.: 01 expresses “Standard”</p> <table><tr><td>Wash Programme</td><td>Mix</td><td>Cotton Eco</td><td>Quick 15'</td><td>Gentle</td><td>Soak</td><td>Spin</td><td>Rinse</td><td>Blanket</td><td>Tub Dry</td><td>Tub Clean</td></tr><tr><td>Display</td><td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td></tr></table>	Wash Programme	Mix	Cotton Eco	Quick 15'	Gentle	Soak	Spin	Rinse	Blanket	Tub Dry	Tub Clean	Display	01	02	03	04	05	06	07	08	09	10
Wash Programme	Mix	Cotton Eco	Quick 15'	Gentle	Soak	Spin	Rinse	Blanket	Tub Dry	Tub Clean														
Display	01	02	03	04	05	06	07	08	09	10														

# CONTROL PANEL

<div>4</div> <div>Program/ Delay (press 3s)</div>	<p><b>Child Lock Function</b></p> <p>This is a device to protect children from being hurt, Children should not play with the washer.</p> <p>How to start the Child Lock function :</p> <p>Press the "Power" button to go to an initial washing mode.</p> <p>By pressing "Start/Pause" button, you start washing and in case Child Lock function is needed during the laundry.</p> <p>Press and hold both the "Program" and "Water Level" buttons down simultaneously for 3 seconds. (If the Child Lock is activated, the Child Lock dot sign will appear in display).</p> <p>To release the function of Child Lock :</p> <p>To deactivate the Child Lock function, press and hold both the "Program" and "Water Level" buttons simultaneously for 3 seconds again. (If the Child Lock function is deactivated, the Child Lock dot sign will disappear).</p> <p>Note : When the child lock function is ON all LEDs except for that of the selected Water Level blinks.</p> <p><b>Delayed opening function</b></p> <p>When choose "Delay" (Press 3 seconds) button to select suitable reserve wash program.</p> <p>After connecting the power, first select the programme you need, then select the water level 1-10, and finally press and hold the programme button for 3 seconds to enter the reservation washing mode, determine the reservation washing time and then press the start button, the display will show the remaining start time (in hour) and flashes, and so on to reach the set time, the machine will begin to start.</p> <p>To change the running procedure or cancel the setting, you need to turn off the power and re-select it.</p>
---	---

## Power-off memory

 
When the washing machine is in normal use, when there is a sudden power failure or when the power plug is loose, the computer board can continue the function of the previous work and continue to run when the power is called and when it is re-plugged.

## 24 hours delay start

24 hours delay start stores the selected program upto 24 hours based upon our requirement to run the machine. We get the benefits of this feature in our regular water supply timing . Based on the water supply timing, delay start will be set accordingly and machine will run in that time only. If you have to go to work and you want to wash your clothes during your water supply time, this feature will be very helpful.

## Two water inlet (hot & cold) entry mode

After starting the power button, you can choose the cold or hot water inlet mode under the suspended state. The default water inlet mode is cold water. After long press the water level button for 3 seconds, you can enter the water inlet mode selection mode after a drip: the digital tube displays "H"; Press the water level button again to switch back to the cold water inlet mode, and "C" is displayed. Press the water level button twice, and then switch back to the cold water + hot water inlet mode; And so on.



After 3 seconds not press "Water lever" button ,the "Water level "button function is restored to the water level selection .

★Blue water inlet hose connect the hot water inlet valve , Red water inlet hose connect the cold water inlet valve


# INSTALLATION

## Connection of the drain hose

### Connection of the drain hose

Insert the end of the drain hose into the hook shelf, and hang the drain hose over a drain outlet (bath tub, sink, etc.).

**Note:** The highest point of the drain hose must be in the height of 0.7m~1.2m above floor level, otherwise, the washer can not work normally.

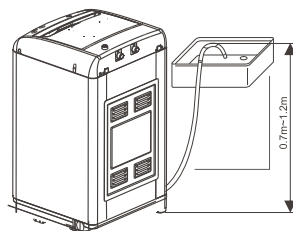

## Water supply requirements

### Water Temperature

#### **Cold :**

Recommended cold water temperature is 10~23.8℃.

#### **Hot :**

Recommended hot water temperature is 50~60℃.

#### **Warm:**

Mixture of hot and cold water. (Warm water temperature is dependent upon the water temperature and the pressure of both the hot and cold water supply lines.)

#### **IMPORTANT:**






Owner should turn off water supply whenever there will be an extended period of non-use or after every use.

### Water Pressure

Do not operate the washer when the water pressure is lower than 0.05MPa or higher than 0.5MPa to avoid damage of the inlet system.



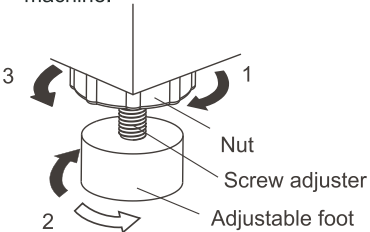


# INSTALLATION
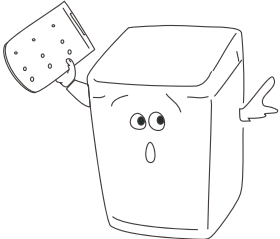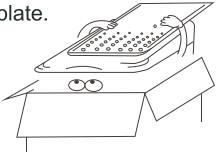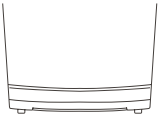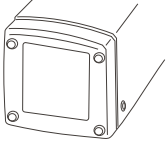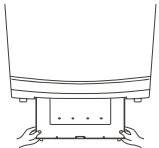
## Insert the noise-proof plate into the washing machine base

	1. Take out the noise-proof plate. 	2. The entrance is in the front of the base. 
	4. Lay down the washing machine, fasten the noise proof. 	3. Insert the noise-proof plate into the base. 

## Install the washing machine

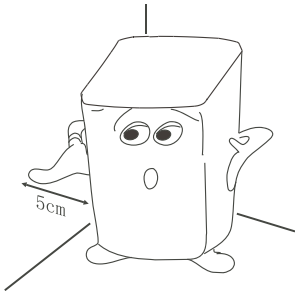Install the washing machine on a firm and level surface, use the level adjustment knob to regulate the adjustable foot until the washing machine is stable.

<p>■ Place the washing machine at least 5cm away from the wall.</p> 		<p>■ Alternation of adjustable foot</p> <p>Use the adjustable foot to level the machine with the floor:</p> <ol style="list-style-type: none"><li>1) Turn the nut clockwise to release the screw adjuster on the foot.</li><li>2) Rotate the foot to raise or lower it until it stands firmly on the ground.</li><li>3) Lock the foot in position by turning the nut anti-clockwise until it comes up against the bottom of the machine.</li></ol> 
		
		




# INSTALLATION

## Faucet:

## Connection of the inlet hose

The faucet have a G3/4" standard screw thread. If not , it is impossible to connect the inlet hose properly.

**NOTE:** water supply faucets should be readily accessible to permit turning them off when washer is not being used.

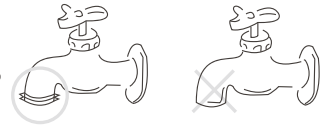

## Installation and connection of the Inlet hose

### Note:

The washing machine is to be connected to the water mains using new hose-sets supplied with the appliance, old hose-sets should not be re-used.

Refer to Section on Water Supply Requirements before connecting water inlet hoses.

### I . About faucet


1. Connect the water inlet hose to the connector by turning the connecting nut.

### . About washing machine

**A: If you just have one water supply line (cold or hot water), connect the inlet hose to the cold water connector. Do not unscrew the lid of hot water connector.**

### IMPORTANT:

**In this situation you can not set wash temperature to WARM OR HOT.**

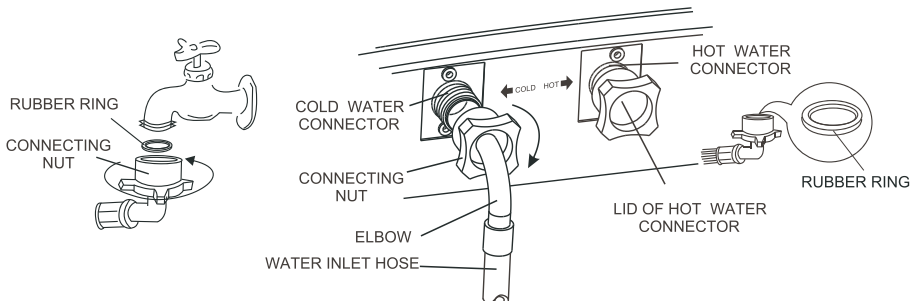


To prevent water leakage, please ensure the connecting nut is tightened securely. If water leakage, check the nut whether it is filled with rubber ring.

**B: If you have both cold and hot water supplied, connect the inlet hose by cold to cold and hot to hot.**

Note: Use Teflon tape when connecting the inlet hoses to the tap connections.

# INSTALLATION


Unscrew the lid of hot water connector, and then connect the another water inlet hoses to the hot water connector by turning the connecting nut.

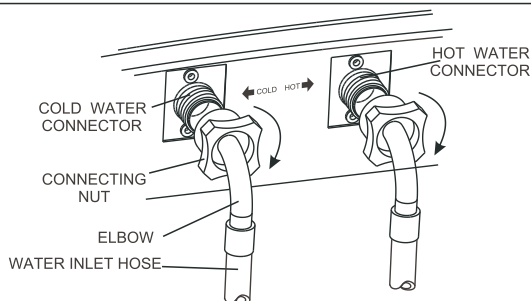

## Dismantling the inlet hose

Dismantling the hose directly may cause water to splash since the water pressure is still high, even after the faucet has been turn off, so please take off the hose according to the following steps:

- 1) Turn off the faucet.
- 2) Turn on the power and keep the machine in operation.
- 3) Turn off the power after approximately 5 seconds.
- 4) Loosen the nuts on both sides of inlet hose.

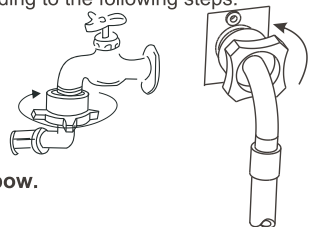


- If the machine is used frequently, it is unnecessary to take off inlet hose to avoid damage to the nut at the elbow.
- Always close the tap when unit is not in use.

### Note:

- Use a three pin socket, where the earth is connected.

### Warning:







- The earth wire of the washing machine is set in the plug, don't try to modify it.
- The socket should have reliable earth wire. If no earth wire in socket, please call the electrician for fixing the earth wire.
- Never try to connect the earth wire of the washing machine together with gas pipe or water pipes, telephone cord or lightning rod.
- Do not use the damaged cord as it could cause electrical leakage and fire.
- If the cord is damaged, call the local Service Company to change it.

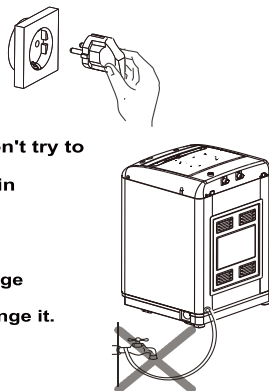

# OPERATION

## Preparation

  ● Before adding clothes to the wash-always empty garment pockets of coins & other materials, as this may void the warranty.
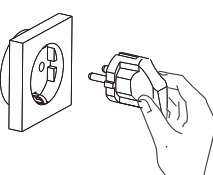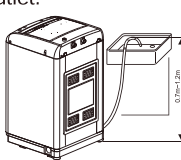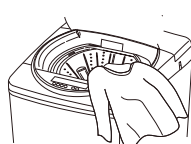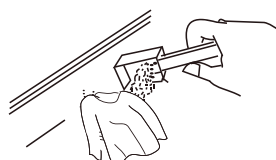
<p>1.Connect the water inlet hose to the water faucet. 2.Turn on the water faucet.</p> 	<p>3.Plug in the power cord.</p> 	<p>4.Insert the end of the drain hose into the hook shelf, and hang the drain hose over a drain outlet.</p> 
<p>5.Put suitable wash load into the inner tub.</p> 	<p>6.Add suitable detergent</p> 	<p>7.Close the lid or the machine will not operate. <b>DO NOT FORCE THE LID TO CLOSE</b> as the soft close operation will be damaged.</p> 

## OPERATION

Step one: Choose program.  
Keys can be freely selected by the program "Mix", "Cotton Eco", "Quick15", "Gentle", "Soak", "Spin", "Rinse", "Blanket", "Tub Dry", "Tub Clean" several automatic procedures.



01	03	05	07	09
Mix	Quick 15'	Soak	Rinse	Tub Dry
02	04	06	08	10
Cotton Eco	Gentle	Spin	Blanket	Tub Clean

### STEP TWO : CHOOSE THE WATER LEVEL.

Press the WATER LEVEL button to choose appropriate water level according to wash quantity and then the corresponding indicator blinks.

The key is a dual function keys for “water level” and “TEMP(press 3 secs)”.  
When selecting the “water level” , there are 10 water gears select according to the quantity of clothes, the display screen shows the water level NO.:  
lowest - highest - water cycle.

1-2-3-4-5-6-7-8-9-10 cycle  
Lowest Highest

STEP THREE : Start the washing machine

Press “START/PAUSE” button, the washing machine will buzz and run automatically. Close the lid, or the washing machine will not operate.

Note:

If you want to change the program when the washing machine is running, you must press the “START/PAUSE” button.


The water level can be changed when the washing machine is running. If you change water level to a higher level, the washing machine will stop running and fill water to match the level you choose and then begin running again automatically.

Default Program

PROGRAM FUNCTION	Mix	Cotton Eco	Quick 15'	Gentle	Soak	Spin	Rinse	Blanket	Tub Dry	Tub Clean
Wash (Min)	18	38	3	11	48			18		
Rinse (Time)	2	2	1	2	2	2	2	2	1	2
Spin (Min)	9	8	5	8	10	10	10	10	30	11
Water Level	7	5	3	7	7	7	7	7		10
PRESET (HOUR)	2-24									
Note: The default water supply for all programs is cold water, except "Cotton Eco" program. "Cotton Eco" program water supply is warm water.										

SPECIFICATIONS

Model	HTLW55	HTLW8
Application water pressure	0.05MPa~0.5MPa	0.05MPa~0.5MPa
Rated power supply	220-240V~/50-60Hz	220-240V~/50-60Hz
Washing capacity	5.5kg	8.0kg
Spinning capacity	5.5kg	8.0kg
Input power of motor	400W	500W
Net weight	22.5kg	27kg
Gross weight	25.5kg	30.5kg
Net dimensions(mm)	520x525x845	560x580x915
Packaged dimensions(mm)	570x580x885	600x610x965

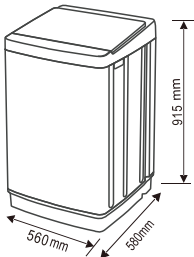

MODEL:HTLW8

NOTE:

The washing machine will provide a cold rinse in all TEMPERATURE setting.

IMPORTANT:


There is not heating element in the washing machine A single hose system does not allow the washing machine to automatically (choose)regulate incoming water temperatures to match those listed on the control panel such WARM or HOT.

# MAINTENANCE


## Clean the filter in the inlet valve

Clean the filter in the inlet valve regularly in order to prevent it from clogging

1.Unplug the power cord first.

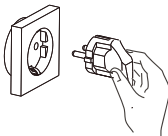

2.Take off the inlet hose and clean the filter with a brush.

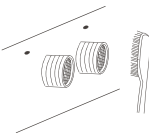

## Clean the lint filter regularly after every wash

1.Please pull out the lint filter according to the direction of arrow



2.Firstly,open the lint filter,and then close it after cleaning and rinsing thoroughly.

 


3.Reinstall the lint filter according to the direction of arrow




## Clean the lint filter in the drain pump (every 10 times of use)

1. Drain the water out of the pump,under which use a container to collect.



 2. Loosen the pump cover




3. Take out the lint filter.



4. Clean the filter.



 5. Restore it and adjust the convex place to align at the pump hole.



6. Tighten the pump cover clockwise.



## Body Maintenance

### Note:

- Clean the surface of the washing machine with a soft cloth regularly.
- After spinning each time, please clean the inner tub to avoid deposit.




# TROUBLE SHOOTING

Fault Category	State	Digital indicator	Remove method
Inflow Timeout	Inflow over 30mins	Digital indicator E0 flashing	Open the cover for one time
Drainage Timeout	Drainage over 10 mins	Digital indicator E1 flashing	
Open cover	Open cover when “drying dehydration process”	Digital indicator E2 flashing	Close the cover
Dehydration is not balanced	3 times dehydration imbalance	Digital indicator E3 flashing	Open the machine cover, artificial place clothing in uniform and then close the computer cover
Water level sensor abnormal	Water level sensor failure, higher than the high water line, below the low water level line, mixing, leaking to reset	Digital indicator E4 flashing	Shutdown and adjust the sensor, gas path is blocked or disconnected
Open the cover when “lock”	After start-up the lock, when machine working, cover is opened	Digital indicator E5 flashing	Shut the door cover for 5 seconds, after 5 seconds press the “process”and “delay”button more than 1.5 seconds, lock function be cancel.
Water recovery prompt signal	Water recovery function means after the rinsing process, suspend signal alarm, water recycling	Digital indicator E6 flashing	Water recycling
Fuzzy weighting abnormal	Fuzzy weighting value is not in the valid range	Digital indicator E8 flashing	Check the fuzzy circuit or belt tension
Motor no action	No motor action during washing or dewatering	Digital indicator F8 flashing	Shutdown washing machine
Computer control abnormal	The motor works abnormally when it should be stopped	Digital indicator F9 flashing	Shutdown washing machine

NOTE: If you open the lid while the machine is running, all operations will be stopped within 3 seconds. To resume operation, close the lid gently. Please turn off the washing machine first if it buzzes, and try to find out and solve the troubles if you have the skills, otherwise call the service personnel.  
Note: Please cut power supply off if there is strange noise, burning smell or smog and inform the service personnel to check.

# ELECTRICAL DIAGRAM

## CIRCUIT DIAGRAM

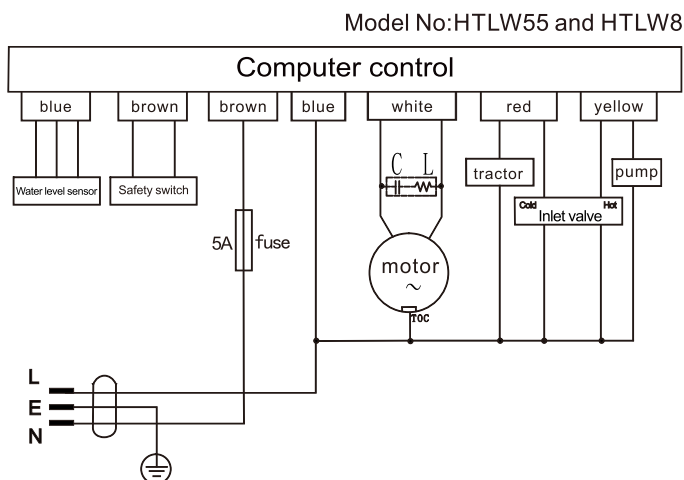

### CAUTION:

- The appliance is not intended for use by young children or infirm persons without supervision;
- Young children should be supervised to ensure that they do not play with the appliance.
- The power supply cord must be unplugged after use.
- Please use low foam powdered laundry detergent.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliances is not intended for use by persons(including children)with reduced physical sensory or mental capabilities, or lack of experience and knowledge , unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The instruction for appliances connected to the water mains by detachable hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The washing machines has ventilation openings in the base,these openings must not obstructed by a carpet.
- The maximum mass of dry cloth which may be used in the appliance is 8 kg.