

MAXIM® MAXIM® MAXIM® MAXIM®



kitchenpro

**Stainless Steel 4 Slice Toaster**

**KPT4S**

**Distributed by**

**MAXIM®**

MAXIM® MAXIM® MAXIM® MAXIM®

## 1 Symbol explanation

### WARNING!

This symbol warns the user against potential health hazards and points out risks of injuries.

### NOTE

This symbol alerts the user to the presence of important operating and servicing instructions.

## 2 Safety instructions

1. Before operating the appliance for the first time, read these instructions carefully. Please store this user manual for future reference.
2. Include this instruction manual when passing on the appliance to a third party.
3. This appliance is intended for household use only and must only be used indoors.
4. Use the appliance only for its intended purpose. Improper use may lead to hazards.
5. The appliance is only meant for toasting bread. Do not put any other ingredients in the appliance, as this may lead to a hazardous situation.
6. No liability for any damage that occurs can be accepted in the event of

improper use or incorrect handling.

7. Always use the appliance on an even, stable and dry surface.
8. To prevent damages and injuries use only original accessories or the ones recommended by the manufacturer.
9. Danger of suffocation! Keep all packaging materials away from children.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not leave the appliance unattended when in use.
13. Protect the appliance against heat, dust, direct sunlight, moisture, dripping and splashing water.
14. Keep the appliance, power cord and plug away from flames or hot areas (e.g. ovens, hot gas or electric burners and other heat-producing appliances/objects).
15. Do not immerse the appliance, power cord or plug in water or any other

liquids.

16. Never touch the appliance, power cord or plug with wet or damp hands.

17. Before switching on, ensure that the voltage on the rating label is the same

as in your home.

18. Always unplug from the mains supply when not in use and before cleaning.

19. Do not operate the appliance if damaged or after the appliance malfunctions.

20. Do not damage the power cord by pinching or by contact with sharp edges.

21. Check the appliance and the power cord regularly for possible damages.

Should there be any signs that the cord is damaged in the slightest degree

do not use the appliance. Do not attempt to repair the appliance yourself.

22. If the power cord is damaged, it must be replaced by a qualified electrician

to avoid hazards or the appliance must be disposed of.

23. This appliance is not intended to be operated by means of an electrical timer or separate remote-control system.

24. Caution hot surface! Care must be taken. The surface are liable to get hot

during use. The temperature of accessible surface may be high when the appliance is operating, particularly in the area of the bread slot opening.

25. Never remove toast slices while the appliance is in operation. Allow the appliance to cool down completely, unplug and carefully remove the bread.

26. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains or under wall cabinets. Please be sure

to keep a sufficient safe distance from flammable materials.

27. Do not use the toaster without the crumb tray in place.

28. The crumb tray should be cleaned regularly. Do not allow crumbs to build

up in the tray. Bread crumbs may catch fire.

29. Do not cover the appliance while in use. It could overheat and catch fire.

30. Risk of fire and electrical shock! Do not put any large slices of bread, metal

foil, or metal tools into the toaster.

31. Never toast bread with toppings or filling in order to prevent the filling from

dripping and igniting.

32. Never attempt to extract jammed toast, or any other item with a metal knife



or any other object, as contact with electrically live components may cause

electrocution.

33. Caution is required on surfaces where heat may cause a problem. Use of an

insulated heat pad is recommended.

34. If the toaster begins to emit smoke, press the Cancel button immediately and


disconnect the plug from mains power outlet.

35. Parts of the appliance become very hot. Do not store or cover the appliance

until it has fully cooled down.

36. Clean the appliance and other accessories after each use. Refer to the Section 6: Care and cleaning.

### 3 Operating elements

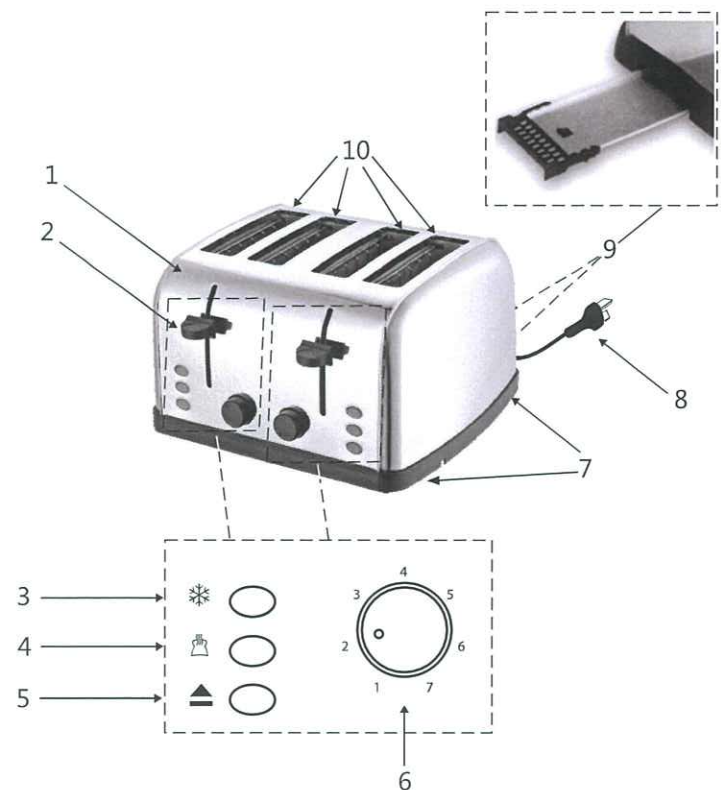

- |                                 |                         |
|---------------------------------|-------------------------|
| 1. Toaster                      | 6. Browning Controller  |
| 2. Toasting and high-lift lever | 7. Non-slip feet        |
| 3. Defrost button               | 8. Power cord with plug |
| 4. Reheat button                | 9. Crumb tray           |
| 5. Cancel/Eject button          | 10. Toasting slots      |

### 3 Before first use

1. Remove all packaging materials and dispose of them in an appropriate way.

Contact your local authorities about collection points or waste separation.

2. Check the package for completeness and possible shipping damage. In

case of shipping damage or incomplete package, return the product to Kmart.

3. Please save the original packaging. Use the packaging to store the appliance

when not in use for an extended period of time.

4. Before first use, operate the toaster at least once without bread slices at the

highest browning setting. This will burn out any possible existing production

residues. A slight odour could occur upon first use. This odour is normal and

should disappear after a short time. Please ensure sufficient room ventilation.

### 4 Operation

#### 5.1 Toasting bread

1. Place the toaster on an even, stable and dry surface.
2. Insert the power plug into a suitable mains supply socket.
3. Place up to four slices of bread into the bread slots. Never toast more than one slice of bread per slot!
4. Set the browning controller to the desired browning setting. Select a low setting for lightly toasted bread and a high setting for a dark browning result (1= lightest / 7= darkest). The browning setting depends on the type of bread and on your personal preference. A few trials may be needed.
5. Press the toasting lever down until it clicks into place. The toasting cycle starts automatically. The operation indicator "Cancel" button will light up.

#### NOTE

- If the toaster is not plugged in the toasting lever will not click into place
- You can use all toasting slots at the same time

6. The toaster turns off when the desired toast colour is achieved and it will automatically raise the toast.

7. The toasted bread is very hot. Be careful when removing the bread from the slots.

8. You can stop the toasting process at any time by pressing the Cancel button.

#### **NOTE**

**High lift: To remove smaller bread slices, lift the toasting lever slightly over its top position.**

9. If bread becomes jammed, remove the plug from the mains supply socket and allow the toaster to cool down completely. Carefully ease the bread out of the toaster. To avoid damage or injuries, do not use a knife or other sharp metal tools and do not touch the internal metal parts of the toaster.

10. Always unplug the appliance if not in use.

### **5.2 Toasting frozen bread**

1. To toast frozen bread, follow the instructions in section 5.1 Toasting bread.
2. Press the toasting lever down until it clicks into place, then press the

Defrost button . The operation indicators "Cancel" and "Defrost" buttons

will light up.

### **5.3 Reheating toast**

1. The toaster allows you to reheat toast without additional toasting. Follow the instructions in section 5.1 Toasting bread.
2. To reheat, place toast into the bread slots and lower the toasting lever until it clicks into place. Then press the Reheat button. The operation indicators "Cancel" and "Reheat" buttons will light up.

## **6 Care and cleaning**

#### **WARNING!**

**Always turn the power off, remove the plug and allow the toaster to cool down completely before cleaning.**

1. Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the synthetic parts of the appliance. Do not use hard brushes or

metal objects.

2. Do not immerse the appliance in water or any other liquids.
3. Wipe the outside of the toaster regularly with a slightly dampened cloth and polish with a soft dry cloth.
4. The crumb tray should be cleaned regularly.

Do not allow bread crumbs to accumulate in the bottom of the toaster.

5. To remove any crumbs from the toaster, slide out the crumb tray, empty and replace it before using the toaster again.

6. Turn toaster upside down and shake lightly to remove bread crumbs stuck inside the toaster.

7. Storage: Wrap the power cord around the cord receptacle at the base of the toaster. Store the toaster in a dry, cool place out of reach of children.

## **7 Disposal**

Do not dispose of this appliance with normal household waste collection. If unsure, contact your local council waste management service for proper disposal facilities available for your area.

When the appliance has reached the end of its service life, make it defective by disconnecting the power plug from the socket and cutting the power cord in two.

## **8 Technical data**

Power supply: 220-240V~50Hz

Power consumption: 1250W-1500W

Subject to technical changes without prior notice!



## WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user or being used for purposes other than the intended use or being tampered with. GAF Control (Sales) Pty Ltd & Maxim Houseware guarantees the product for 12 months from date of purchase refund or replacements at store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

### Supplier guaranteeing this product

**GAF Control (Sales) Pty Ltd & Maxim Housewares**  
**441 Kororoit Creek Road, Altona, 3018, Victoria, Australia.**

## Warranty

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

**Product Model Number:** KPT4S

**Purchase Date:** \_\_\_\_\_

**Retailer:** \_\_\_\_\_

**Retailer Store Address:** \_\_\_\_\_

**Name of Purchaser:** \_\_\_\_\_

**Address :** \_\_\_\_\_

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly.

Product Made In China.

To view the full range of Maxim Housewares products, please go to our website.

[www.maxlmhousewares.com](http://www.maxlmhousewares.com)

For further consumer support- please email us to:  
[gaf@gafcontrol.com.au](mailto:gaf@gafcontrol.com.au)