

# MAXIM®

Instruction Manual

## 4 SLICE SANDWICH GRILL

Model: M4SSG



READ AND SAVE THESE INSTRUCTIONS

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

**NOTE:** The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

### **READ AND SAVE THESE INSTRUCTIONS**

**This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are old than 8 and supervised.**

**Keep the appliance and its cord out of reach of children less than 8 years**

**The appliance is not intended to be operated by means of an external timer or separate remote-control system**

**The temperature of the outer surface may be high when the appliance is working. Please do not touch outer surface by you hand**

### **GENERAL SAFETY INSTRUCTIONS**

1. Read this instruction manual very carefully before operating the appliance for the first time
2. Keep this instruction manual, the packing, and your receipt, if you give or sell the product to a third parties, please make sure that you also hand out this instruction manual.
3. This appliance is household use only

4. Do not use the appliance outdoors, keep it away from sources of heat, direct sunlight, open fire, or high humidity and never operate it with wet hands

Always pull the plug from the power socket when you do not use and clean it

Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances. Make sure the cables are not hanging down and children do not touch to the appliance

Do not immerse the appliance into water or other liquids.

Never use the appliance if it is damaged

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard

Do not try to repair the appliance on your own, always contact our service agent to repaired or changed appliance

This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, Children should be supervised to ensure that they do not play with the appliance

The appliances are not intended to be operated by means of an external timer or separate remote-control system

This appliance is intended to be used in household and similar applications such as: kitchen areas.

**WARNING: This electrical appliance contains a heating function surface, also different than the functional surfaces can develop high temperatures. Since temperatures are differently**

**perceived by different persons, this equipment should be used with CAUTION. The equipment shall be touch only at intended handles and gripping surfaces and use heat protection like gloves or similar. Surfaces other than intended gripping surfaces shall get sufficiently time to the cool down before getting touched**

## **SAFETY INSTRUCTIONS**

Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that the hot steam can disappear.

The temperature of the outer surface may be high when the appliance is working. Please do not touch outer surface by you hand.

To avoid the danger of fire, never leave the appliance unattended.

Before connecting with supplier mains, the heating plates must be in a closed position.

## **OPERATING INSTRUCTIONS**

Uncoil the cable completely.

Check if the heating plates are clean and dust-free. if necessary, wipe them with a damp cloth

Place the appliance on a flat, level surface

Connect the plug into rated voltage and the red lamp will be on. Then turn the temperature knob from "0" to "MAX" for pre-heating cooking surface, and the red lamp will be illuminated at the same time. As soon as the cooking surface has reached the preset temperature (usually it will take around 3 minutes), the green lamp will not be illuminated, and this appliance is ready to cook.

Open the appliance and place your food on the lower plate. Deep-frozen food should be completely defrosted prior to grilling

Close the appliance, the green lamp will be illuminated again. (During using the indicator lamp will on and off due to automatic temperature control)

During the cooking, excess fat will flow through the drain holes into the drip tray

Open the appliance after the green lamp off again. At this time, the food is ok, of course, it can be cooked again according to your taste.

After cooking, open the appliance to remove your food with a wooden or plastic spatula.

After using, pull out the plug and open the upper lid let it get cool.

## **CUSTOMER SERVICE**

---

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

\*This product may vary slightly to the product illustrated due to ongoing product development.