

# MAXIM<sup>®</sup>

## kitchenpro

### **Electric Hot Pot User Manual**

Model Number: MEHP1350



**READ AND SAVE THESE INSTRUCTIONS**

## **BEFORE FIRST USE**

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification

plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## **IMPORTANT SAFEGUARDS**

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operation and save them for future reference.
- Remove and safely discard any packaging material before using the frypan for the first time.
- To eliminate a choking hazard for young children, remove and discard the protective cover that is fitted to the power plug of the appliance.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not place the appliance near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- Keep the appliance a minimum distance of 200mm from walls, curtains, and other heat or steam sensitive areas/materials.
- Do not place on or near a gas burner, electric element or in or near a heated oven.
- Do not use the appliance on a sink or drain board.
- If using plastic utensils whilst cooking, do not leave in the appliance while hot.
- Do not place the hot glass lid under cold water.
- Always have the glass lid positioned correctly on the appliance throughout operation, unless stated in the recipe to have it removed.
- The glass lid has been specially treated to make it stronger, more durable and safer than normal glass, however it is not unbreakable. The glass lid may break or weaken when struck extremely hard, and it could at a later time shatter into many small pieces without apparent cause.

 
- Do not leave the appliance unattended when in use.
- Do not touch hot surfaces. Use the handles for lifting and carrying the appliance.
- Extreme caution must be used when the appliance contains hot oil or other liquid. Do not move the appliance during cooking. Allow the appliance to cool before removing oil or other liquid.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- Always keep the appliance clean.
- Do not place anything on top of the appliance when the lid is in position, when in use and when stored.
- Fully unwind the cord before use.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if the power cord, power plug, temperature control probe or appliance becomes damaged in any way.
- Ensure the local voltage fit to the appliance and the socket must be grounded.
- Make sure the appliance and the plug do not come into contact with water or any other liquids. Should the appliance be dropped into water inadvertently, remove the plug from the electric socket immediately and have the appliance checked by a certified professional. Non-compliance with this may result in peril to life.
- Fill water or soup not more than 70% during operation, spillage from overflow when boiled may cause electric hazard.
- To prevent electric shock, do not immerse the appliance, the plug or the power cord into water or other liquids.
- Never switch on the appliance with an empty pot on top of it which may result in serious damage to the appliance.
- Do not cover the lid during BBQ or the BBQ grill pan is hot. And do not spatter other liquid than cooking oil on the hot BBQ grill pan. And do not touch the grill pan during cooking, since it is hot
- “Flat-topped” Tapered heater must be kept dry at all time. And it is just solely for BBQ grill pan use. Do not try to use it for other purpose.
- Place the hot pot in a dry place. Be careful to protect the heating base against dampness and shock. And remember never to pit the heating base into water for cleaning.
- Do not remove the pot from the heating plate before it cools down. Remove the

pot with force may damage the pot and the heating plate.

- Unplug from the outlet when not in use and before cleaning. Allow it to cool down before putting on or taking off parts, and before cleaning the appliance.
- The appliance should be given ample air circulation on all sides. The heating plate has to face upwards when using.
- Operate the appliance on the flat and dry place. Always keep the appliance dry, especially the heating plate, The appliance may be deformed or damaged when exposed to high heat or used in unstable surroundings(excess water or humidity)
- Make sure the outer surface of the pot and the heating plate is clean and dry before plug-in
- Before cooking, make sure the pot is levelly placed and tightly seated in the middle of the heating plate
- Do not place any object nearby or cover or touch the hot steam vent of the glass lid while cooking.
- Never put the removable stainless steel pot on any other cooking devices.
- Never touch the outer body of the hotpot during operation. Always allow it to cool down before handling.
- Extreme caution is necessary when moving the appliance with the liquid inside.
- Beware of hidden steam under the lid.
- It is normal for smoke or smell to be emitted during first use. Continue using till smoke stops.



## PARTS AND FEATURES

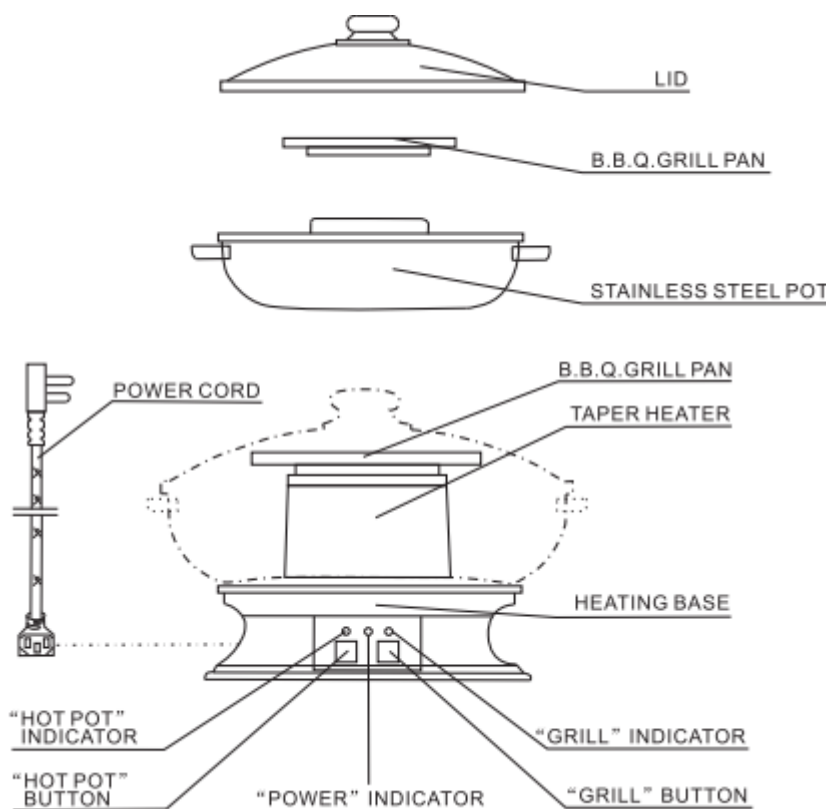

## INSTRUCTIONS FOR USE AND CARE

Before first use wash, rinse and dry your hot pot and lid.

### CLEAN:

Prior to using your new Hot pot, wash with a sponge or dishcloth in hot soapy water. Rinse well and dry. **DO NOT USE STEEL WOOL OR OTHER ABRASIVES TO CLEAN THE GRILL.**

**NOTE: Ensure the inlet connectors are thoroughly dried after washing and before use.**

### CONDITION:

The cooking surface must be conditioned to ensure non-stick cooking. Apply cooking oil, with a cloth or paper towel, to the cooking non-stick surface. Wipe off excess oil. The frypan is now ready for use.

## **USING YOUR Hot pot**

- Put the hotpot with soup or water on the heating and turn slightly to fit the bottom of the pot to the surface of the heating base. Fill only 70% full when cooking to avoid spillage which result in electric hazard.
- Plug the power cord fully into the heating base socket and turn on the power supply. Power indicator (green light)will turn on standby mode.
- Fill the cooking pot with soup or water before placing on the heating plate
- The grill pan must sit on the “flat-topped” tapered heater during hotpot,, to keep “flat-topped” taper heater dry.
- Switch on “LOW” if low temperature is required, “hotpot” will be at half power mode.
- Switch on the power of BBQ for a moment to dry up grill pan before filling cooking oil.
- Switch “Grill” button on, “Grill” indicator will light up. During BBQ,DO NOT COVER WITH LID, otherwise the lid knob temperature will be too hot to handle.
- Turn off “Hotpot” button and “Grill” button after use.

## **CLEANING**

**WARNING: Ensure you have unplugged the appliance and allowed it to completely cool before undertaking any cleaning.**

DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS, OR SCRAPE THE HOT PLATE WITH METAL UNTENSILS. ALL OF THESE METHODS MAY DAMAGE THE NON STICK SURFACE.

DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.

## **STORAGE**

Store the hot pot upright with the lid in position. Take care when storing the power cord , as it needs to be stored where it will not be knocked and able to fall onto the ground, as this can cause damage.

## **CUSTOMER SERVICE**

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd & Maxim Housewares

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

**[www.maximhousewares.com](http://www.maximhousewares.com)**

\*This product may vary slightly to the product illustrated due to ongoing product development.

## **WARRANTY**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user- or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

### **Supplier warranting this product:**

**GAF Control (Sales) Pty Ltd & Maxim Housewares  
P.O. Box 19, Altona North  
Victoria, 3025, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

**Product Model Number: MEHP1350**

**Purchase Date:** \_\_\_\_\_

**Retailer:** \_\_\_\_\_

**Retailer Store Address:** \_\_\_\_\_

**Name of Purchaser:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly**

**Product: Made in China.**

**To view the full range of Maxim Housewares products, please go to our website.**

**[www.maximhousewares.com](http://www.maximhousewares.com) or [www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

**For additional consumer support – email us at:**

**[gaf@gafcontrol.com.au](mailto:gaf@gafcontrol.com.au)**