

PRODUCT USE, CARE AND SERVICE
WARRANTY INSTRUCTIONS

MAXIM®
kitchenpro



Model: MHWD25B

Instant Hot Water Dispenser 2.5 Litres



READ AND SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

Read and follow all the instructions in this "Use and Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY", and the "WARRANTY" statements.

For your convenience, record the complete model number (located on the product identification plate) and the date you received the product, together with your proof of purchase and attached to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

Carefully unpack the unit and remove all packaging materials. Wipe down the outside of the unit and rinse the inside with water. It is recommended that you boil the unit a few times and discard the water before first use.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

 
WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split particularly where it enters the unit.
- To reduce the risk of electric shock, do not immerse or expose the product controls or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Do not let the cord hang over edge of table or bench, or touch hot surfaces, including the stove.
- Do not place the appliance on or near any gas or electric burner or inside heated oven.
- Do not operate the appliance without less water level to avoid damaging the heating elements.
- Do not immerse the unit in any liquid or water.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Do not use the appliance for other than its intended use.
- Do not leave the appliance unattended or move it when switched on. Boiling water will scald and may be ejected, if overfilled.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.
- While the appliance is under working, do not touch or block the steam outlet by hand or other stuff, do not open the water tank lid when unit is in use, in order to avoid the scald by the hot steam or cause any other malfunctions.

- Do not use the appliance to heat anything other than water. Do not fill above the “max” indication. Do not operate it if water is below minimum.
- To avoid being scalded, it is prohibited to use hand or any parts of your body to feel the temperature or steam when the appliance is using.
- Do not open the lid while the water is boiling.
- This product is intended for normal domestic/household use and similar applications only, such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotel, motels and other residential type environments;
 - bed and breakfast type environments

READ AND SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

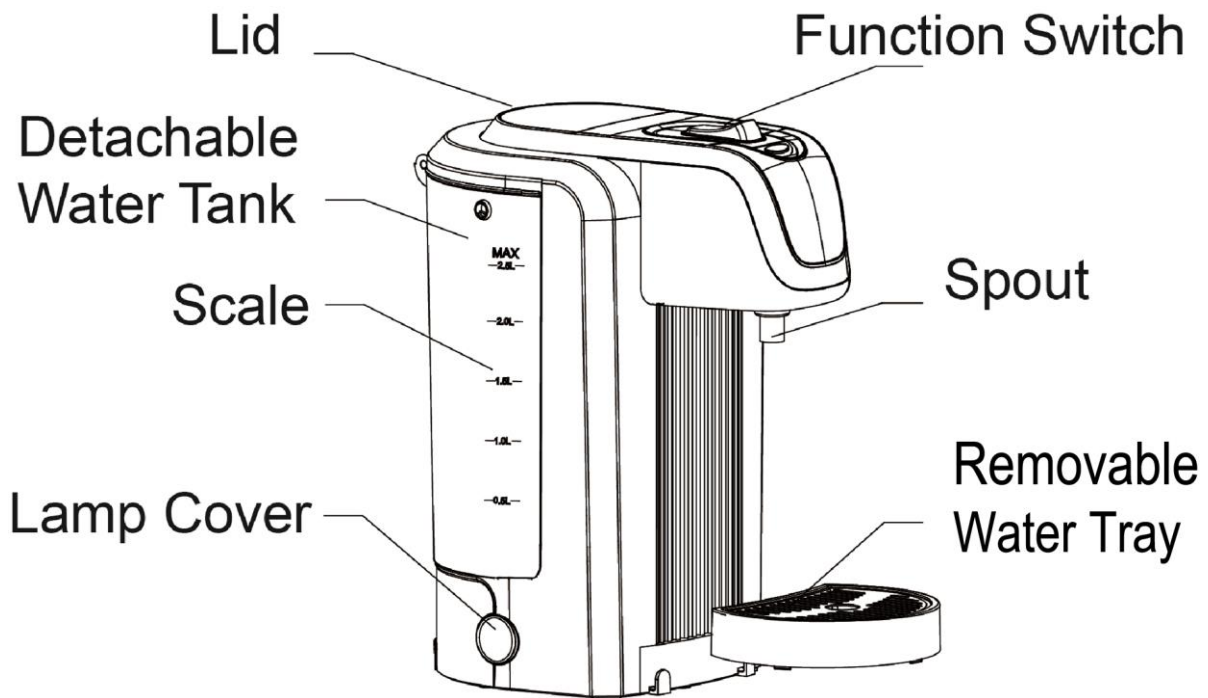

OPERATING INSTRUCTIONS

 
- **Before using your hot water dispenser**

It is recommended that you clean the water tank before using it the first time. Always unplug from the plug socket and allow to cool down before cleaning. The surface of the water tank should be wiped over with the damp cloth and polished with a soft dry cloth. Then fill in the clean water to clean, repeat the same steps for several times.

- **Using your hot water dispenser**

1. Fill in clean water

Detach thoroughly the water tank from the appliance. Open the lid, fill the water tank with the desired amount of clean water, and then close the lid. Then place the water tank in

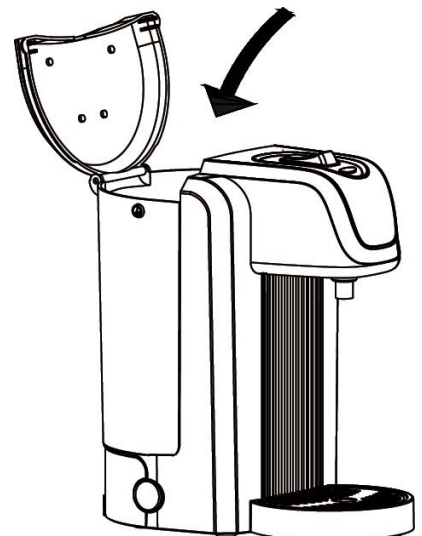

the appliance rightly.

 
Note: the water level must be within the Min and Max level.

2. Boiling the water

Make sure the plug is connected to the proper wall outlet and the indicator lights up and fill in the water with desired amount. Place your cup on the removable water tray, making sure it aligns with the spout. Then press the function switch "ON" position, the green indicator and illuminating light will light up, the heating element begins to work. Then the unit will start to boil the water for about 5-8 seconds, the boiled water will flow out continuously from the water spout. When you obtain the desired boiled water level, press the function switch to OFF position, the indicators will be turned off and the heating elements will stop working. If you want to boil water again, only repeat the above procedure.


REMARKS:

- Do not touch the boiled water and steam in order to protect against the scald by the boiled water and hot steam.
- If the red indicator lights up, it means there is water lacking in the water tank. Must pour cold water in the water tank immediately.
- The appliance has a manual thermostat to recover the heating function for abnormal operation. If the unit has no power, stop working, or isn't boiling the water, you can reset the thermostat by pressing the reset button on the unit.

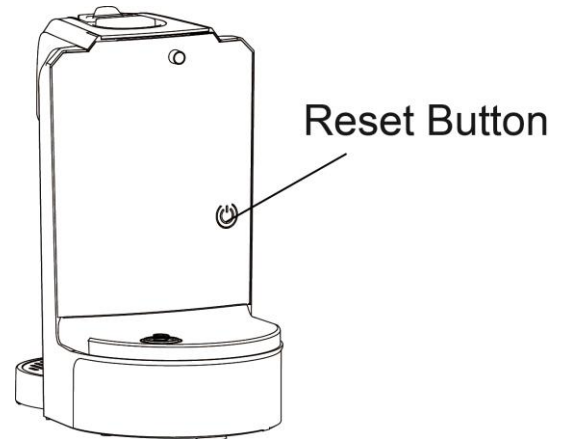

3. Water disposal from the water tray

 When the water tray is full, grasp and stabilize the appliance by one hand and use another hand to lift the water tray up slightly to remove it. Empty the water tray and insert it into the original place with proper force.

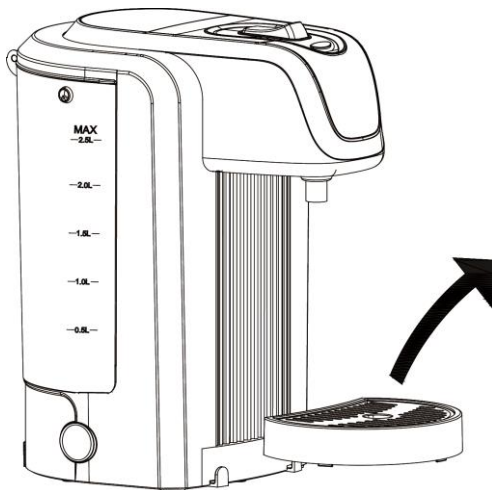

CLEANING AND MAINTENANCE

1. Unplug from the power outlet and allow it to completely cool down before cleaning.
2. Do not immerse the appliance into any liquid to avoid damage.
3. Clean the body of the unit with a damp cloth (to remove stubborn spots, wipe the surface with a cloth moistened in soapy water of a mild non-abrasive cleaner) then dry thoroughly.
4. Do not use solvents or harsh abrasives as these will damage the body of the unit, always use a damp cloth to clean the appliance housing.
5. To maintain its performance, suggest to descale the appliance at least once every month. Please use the toxic free detergent such as citric acid or vinegar, add some

citric acid or vinegar in the water tank, fill in the water till maximum level and operate the appliance about two or three times, the scale will be get rid of completely. After the completion, please pour out all the boiled water and add pure water to operate the appliance once before you drink.

6. Always handle the appliance gently, do not place it near the edge of the table and the counter, to protect against the deform or function damage in case it fall down from the table accidentally.

WARNING: Never immerse the unit, switch area or cord in water, or allow moisture to come into contact with these parts.

STORAGE

If the appliance is not used for a long period of time, unplug and clean it, then put back into the original packaging box to avoid the electrical components are humidified or damage.

SERVICE

1. Always check full operation as detailed above before returning any unit as faulty.
2. Do not operate the appliance with a damaged cord or plug, or if the unit malfunctions or is damaged in any way. Return the complete appliance to the place of purchase, together with your proof of purchase for in-warranty replacement, or inspection and repair.
3. This appliance contains no internal user serviceable parts.
4. In some products, the replacement of the power cord by the user is not intended. Special tools are required to replace the cord. Return the complete appliance to the place of purchase for in-warranty replacement, or inspection and repair.

SPECIFICATIONS

Model	Brand	Description	Voltage	Frequency	Wattage
MHWD25B	Maxim	Hot Water Dispenser 2.5L	220-240Vac	50/60Hz	2000W – 2400W

ENVIRONMENTALLY FRIENDLY DISPOSAL

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CUSTOMER SERVICE

Australian Customer Service
GAF Control (Sales) Pty Ltd
441 Kororoit Creek Road,
Altona, Victoria, 3018

Phone: 1300 659 489
Hours: 9am-5pm (EST) Mon-Fri
www.gafcontrol.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

**GAF Control (Sales) Pty Ltd
441 Kororoit Creek Road, Altona
Victoria, 3018, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: MHWD25B

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim Housewares products, please go to our website.

www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au