


MAXIM®

kitchenpro

MULTI-PURPOSE STEAMER

USER MANUAL

Model No.: MPS100

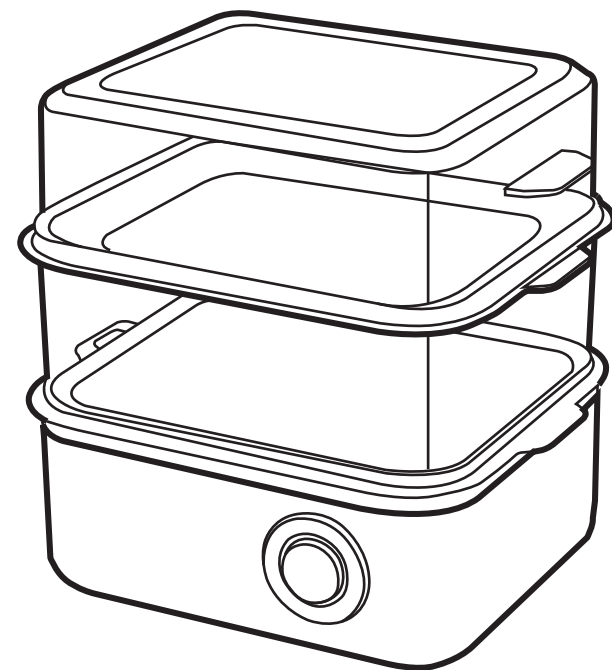


READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY GUARDS

1. Please keep children away when the unit is working.
2. Do not connect the power when the cover is left off, so as to avoid any personal injury caused by the spitting boiling water.
3. Do not use it in your absence.
4. The egg boiler shall be put on a solid platform during use. Do not press too hard so as to avoid any damage to the power switch.
5. The unit shall not be used on the surface or in the vicinity of heatable objects such as carpets and plastics. Do not put items which will be dampened by steam on the top of this unit.
6. Do not add water or pull out the plug when the water is dry-boiled. Please do not touch the heating plate so as to protect yourself from being scaled.
7. Be cautious of the steam from the vent so as to prevent yourself from being scaled.
8. No liquid entry is allowed in the internal egg boiler so as to avoid any danger.
9. Any replacement shall be made by the full-time personnel from the manufacturer or a department which is similar with a maintenance and repair service center, once the power cord is damaged, so as to avoid any danger.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Avoid injuries from the egg pin.
12. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
13. Children should be supervised to ensure that they do not play with the appliance.

PARTS & DESCRIPTION

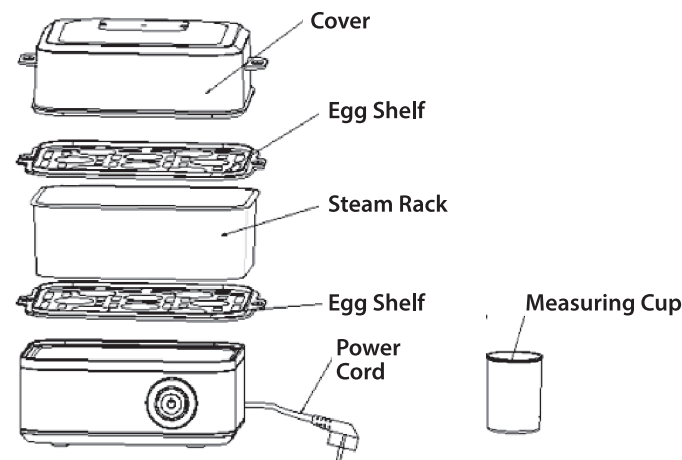

FEATURES

1. Stainless steel flat heating plate, healthy and easy to wash.
2. Fashionable appearance, sophisticated workmanship with easy and fast operation.
3. Safe automatic power turn-off and over-temperature protection functions.
4. Prepares soft/middle/hard eggs - as you prefer.
5. Boiled eggs can be kept fresh, tender and nutritious through boiling.
6. Suitable for steaming different foods such as eggs and buns.
7. The water dry cut off power and light put out automatically.
8. Can cook eggs and other foods.

NOTICE BEFORE USE

1. Unwrap its packages.
2. Check whether the voltage indicated on the rating label is consistent with your voltage used.
3. Please use a ground power.
4. For the first use, please wash or boil it with water twice and pour away the residual water.

HOW TO USE

1. **Steam egg:** Add appropriate amount of water (Please refer to the table below for specific water volume) with a cup according to your preference. Put the eggs on the shelf properly and then put the top cover on. (Remark: It is for your reference only and you can make adjustments accordingly)

	Preference	Water Volume		Time	
		8 Eggs	16 Eggs	8 Eggs	16 Eggs
Medium		35ml	55ml	8 min	13 min
Medium Well		55ml	65ml	11 min	14 min
Well Done		85ml	75ml	15 min	18 min

2. Connect the power, press down the button switch and the indicator lights will show that the egg boiler is working. Please do not press the button switch unless if you want to stop the cooking.



3. The power will be turned off once the water in the egg boiler is dry-boiled and it will indicate the steamed egg is ready when the indicator light will turn off automatically.
4. Pull out the plug to cut off the power after the cooking process.
5. Cooking other foods: add one cup water in the heater plate and operate the same way as steam egg.

Attention:

- In order to avoid cracks on the egg shell, strike several small holes on the big part of the egg with an egg pin at the bottom of the measuring cup before cooking, and then put the small part on the shelf.
- Put the steamed egg into cold water and it will be easier to shell and more delicious to taste.

CLEANING & MAINTENANCE

1. Please pull out the plug from the socket after use.
2. Do not clean it until the power is turned off and the egg boiler is cooled.
3. The shelf and cover can be cleaned with a washing detergent or sponge. Do not clean with a hard steel wire so as to avoid any surface damage.
4. Do not immerse the whole unit in water to wash. The machine surface can be wiped with a wet towel. It is not allowed to be rinsed with water so as to avoid any electric leakage and occurrence of faults.
5. Please clean and wipe the unit and put it into its packages if you want to store it up for a long period of time. Put it in a ventilated and dry place so as to avoid being dampened to cause any problems on its normal use.

FREQUENTLY ASKED QUESTIONS

1. Indicator light of rocker switch does not work:
 - a. Power failure?
 - b. Whether the power cord is plugged in the socket?
 - c. Whether the socket power is on?
 - d. Whether the rocker switch has been pressed yet?
2. Egg is over done or under done:
 - a. Whether the water is too much or not enough (It will appear over done with too much water and under done with insufficient water).

Remarks: If those faults are still unresolved with above-mentioned analysis or any other faults exist, please contact our maintenance and repair service points or dealers. A non-authorized personnel is not allowed to disassemble this product without permission.

SPECIFICATIONS

MODEL	VOLTAGE	POWER	CAPACITY
MPS100	220-240V~50Hz	500W	16PCS EGGS

CUSTOMER SERVICE

Australian Customer Service
GAF Control (Sales) Pty Ltd & Maxim Housewares
P.O Box 19
Altona North Victoria 3025
Phone: 1300 659 489
Hours: 9am-5pm (EST) Mon-Fri
www.gafcontrol.com.au
www.maximhousewares.com
***This product may vary slightly to the product illustrated due to ongoing product development.**

WARRANTY

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

Supplier warranting this product:

GAF Control (Sales) Pty Ltd & Maxim Housewares

P.O. Box 19, Altona North

Victoria, 3025, Australia.

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

Product Model Number: MPS100

Purchase Date: _____

Retailer: _____

Retailer Store Address: _____

Name of Purchaser: _____

Address: _____

Due to the Maxim policy of continual product development; specifications, colours and details of our products as listed or depicted in this user manual or on the product and its carton may differ slightly

Product: Made in China.

To view the full range of Maxim Housewares products, please go to our website.

www.maximhousewares.com or www.gafcontrol.com.au

For additional consumer support – email us at:

gaf@gafcontrol.com.au