

# MAXIM<sup>®</sup>

kitchenpro

## USER MANUAL

### Deep Dish Sandwich Maker

Model Number: SM065



**READ AND SAVE THESE INSTRUCTIONS**

## IMPORTANT SAFEGUARDS

---

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating your new product for the first time and save for future reference.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the plug of this appliance.
- Ensure the unit is properly assembled before use. Follow the instructions provided in this manual.
- Do not place the unit near the edge of a bench or table during operation. Ensure the power cord does not hang over the edge of the bench or table, touch hot surfaces or become knotted.
- Do not place the unit on or near a hot gas or electric burner, or where it could touch a heated oven. Do not use the unit on a sink or drain board.
- Never operate the appliance with wet hands.
- Ensure the unit is placed at least 20cm from walls, curtains and other heat sensitive and flammable materials. Always operate the unit on a flat, even, heat resistant surface.
- This unit is not intended to be operated by means of an external timer or separate remote control system.
- Do not place anything on top of the unit when the lid is closed, when operating or when stored.
- Always pull the plug from the socket, when not use it or when cleaning the appliance. Always pull the plug, not the cable.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- This appliance contains no user serviceable parts. Any maintenance other than cleaning should be performed by a qualified person.

- Do not immerse unit, power plug or power cord in water, or any other liquid.
- Never operate any appliance with a damaged power cord or plug, should the appliance malfunction, or if it has been damaged in any manner.
- Do not leave the appliance unattended whilst it is on.
- Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that the hot steam can disappear.
- During operation, the outer surface will be hot. Please do not touch outer surface by you hand.
- Before connecting with supplier mains, the heating plates must be in a closed position.

## **READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCES**

### **BEFORE FIRST USE**

---

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

**NOTE:** The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

### **FIRST TIME USE**

---

Clean the cooking plates with a damp cloth or sponge. Slightly grease the cooking plates with a little butter or cooking oil.

**NOTE:** When using the sandwich maker for the first time, a small fine smoke haze may appear. This is normal because of the initial heating of the internal components.

Plug in the sandwich maker and the plates will heat up until the green ready light to cook pilot light goes off. The sandwich maker is now ready for use.

## MAKING TOASTED SANDWICHES

---

1. Before first use, wipe the surfaces of the plates with a damp cloth and dry with a cloth or paper towel. Smear the platen with butter, margarine or cooking oil.
2. Plug the power cord into a power outlet. The RED indicator represents power "ON" and the unit will heat up cooking plates when RED light is ON.
3. Close the Sandwich Maker and prepare filling while the unit is heating.
4. When the Sandwich Maker is ready; after about 3 minutes, "ready-to-cook" GREEN light will illuminate.
5. Fully open the Sandwich Maker. Place a slice of bread in the bottom half with the buttered side against the plates.
6. Fill the sandwich, pressing the bread into the plates. Do not overfill.
7. Place on the top slice with the buttered side up and carefully close the two parts of the Sandwich Maker. Do not force shut.

**CAUTION:** Steam will be ejected from between the platens whilst doing this and care must be taken to ensure that fingers do not come into contact with steam or hot metal plates.

8. Lock the two halves with the clip whilst cooking is taking place.

**NOTE:** During toasting the GREEN light will cycle on and off while the thermostat keeps the Sandwich Maker at the correct cooking temperature.

9. Your sandwich will be toasted in 2 - 3 minutes, or longer to suit your taste.
10. Open the Sandwich Maker and remove the sandwich using plastic or wooden spatula. Never use metal utensils as these may damage the non-stick coating.
11. Close the lid to preserve the heat until ready to toast the next sandwich.
12. Prepare further sandwiches if required whilst one is cooking.
13. After use, remove the plug from the power outlet and allow cooling.

## HINTS FOR THE BEST RESULTS

---

- Always preheat before use. Plug cord into power outlet while preparing the fillings.
- For soft or liquid sandwich fillings use medium sliced bread, white or brown. If small amounts of filling use toasting bread
- Flavoured butters may also be used.
- Suggested garnishes for sandwiches, lettuce, parsley, mint, cress, stuffed olives, onion, tomato, etc.
- A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crisper (especially with fruit fillings).

## CARE & CLEANING

---

1. Before commencing any cleaning, turn the power off at the outlet and remove the power plug.
2. Allow the unit to completely cool down first before moving and cleaning.
3. Always clean your unit after each and every use. This prevents the buildup of foods that have been baked on.
4. Wipe the cooking plates with a kitchen paper, absorbent paper toweling or soft damp cloth. As the cooking plates are non-stick, avoid the use of any abrasive cleaners as it will damage the plates. If this fails to remove all residues, soften them with a little oil.
5. Should any filling be difficult to remove, pour a little cooking oil onto the plates, and allow standing for about 5 minutes. Wipe off when the filling has softened.
6. Wipe the exterior with a soft damp cloth, do not use any abrasive cleaners. Ensure that no moisture, oil or filling enters the cooling slots.
7. Once the unit has cooled completely, store it either flat or upright. Keeping it in its original box is recommended.



**WARNING:** Do not immerse any part of the unit in water or any other liquid.

**NOTE:** If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## SPECIFICATIONS

---

Model	Brand	Description	Voltage	Frequency	Wattage
SM065	Maxim Kitchenpro	Deep Dish Sandwich Maker	220-240Vac	50Hz	700W

## CUSTOMER SERVICE

---

### **Australian Customer Service**

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

[www.gafcontrol.com.au](http://www.gafcontrol.com.au)

\*This product may vary slightly to the product illustrated due to ongoing product development.

## **WARRANTY**

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The above applies subject to the item not being accidentally dropped by the user-or being used for purposes other than the intended use - or being tampered with. Maxim Housewares guarantees the product for 12 months from date of purchase. Refunds or replacements at retail store level are under the guidance of the stores rules/regulations. In the event of requiring assistance, the retailer from whom you purchased the product should be your first port of call.

### **Supplier warranting this product:**

**GAF Control (Sales) Pty Ltd**

**P.O. Box 19, Altona North**

**Victoria, 3025, Australia.**

12 months warranty from date of purchase. 90 days warranty from date of purchase if used commercially. If your retailer has not validated your guarantee, then retain your purchase receipt. The guarantee does not cover accidental breakage or damage of your product or if it has been tampered with.

**Product Model Number: SM065**

**Purchase Date:** \_\_\_\_\_

**Retailer:** \_\_\_\_\_

**Retailer Store Address:** \_\_\_\_\_

**Name of Purchaser:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Due to the Maxim policy of continual product development; specifications, colours and details of our products may differ slightly from what is in, or depicted in this user manual or on the product and its carton.**

**Product: Made in China.**

**To view the full range of Maxim Housewares products, please go to our website.**

**[www.gafcontrol.com.au](http://www.gafcontrol.com.au)**

**For additional consumer support – email us at:**

**[gaf@gafcontrol.com.au](mailto:gaf@gafcontrol.com.au)**