## HAIR DRYER USER MANUAL

(Model No.THD20)



#### **SPECIAL FEATURE:**

- 1. Unique design with complete function.
- 2. Long life motor and high quality switch.
- 3. Safety with filter and overheating protection.
- 4. Professional air concentrator.
- 5. Hang-up hook.

#### **WARNING:**

- 1. Do not use this appliance near water, do not use the appliance with wet hands.
- 2. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- 3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 4. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- 5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

#### **HOW TO USE YOUR HAIRDRYER**

- 1. Always ensure the switch is set to OFF position before plugging the unit into the power outlet.
- 2. Use the high setting for drying hair, and use low setting for styling.
- 3. If the hair dryer stop for any reason, turn it off at once and let it cool down.
- 4. Switch control

0=OFF Position

1=LOW: low warm temperature.

2=MIDDLE: middle hot temperature

3=HIGH: high hot temperature

Cool shot: press cold function button with above operation, you will get comfortable cool wind.

- 5. The concentrator can be used on or without.
- 6. Switch off when finish using, and then remove the plug from the socket.

#### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Never connect the dryer to incorrect voltage.
- 2. If the supply cord is damaged, it must be replaced by the manufacturer or its

service agent or similarly qualified person in order to avoid hazard.

- 3. Make sure that the air outlet and the grill free when using.
- 4. The dryer is protected against overheating .It drops automatically when overheating and starts again after a short time of cooling. When the dryer stops automatically and you don't need to use it again, so as to safety switch off and remove the plug from the socket.
- 5. Do not put the air outlet too close to your hair. Please switch off the dryer for lengthy breaks in the drying process and disconnect it after use.
- 6. Keep the dryer out of reach of children.
- 7. Do not immerse the dryer in water or use in dampness.

### **MAINTAIN**

**IMPORTANT:** Always ensure that hair dryer is disconnected from the mains supply before cleaning.

Use a damp cloth for cleaning and wipe dry. This will help preserve the original finish of your hair dryer.

Abrasive cleansers should not be used.

**WARNING:** Never immerse the hair dryer in water and always ensure that plug is kept dry.

After a while of use, you should take the inlet apart and clean it .Operate method: turn the inlet toward to opposite clock-wise direction, after cleaning it, turn toward to clockwise direction and fix it upon the hair dryer.

Frequently clean our any hair or fluff that becomes stuck in the inlet filter.

To clean may result in Overheating.

### The list of the marking symbol

V	Volt	Hz	Hertz
W	Watt	~	Alternating current
			Do not use this appliance
	Class II appliance		near bathtubs, showers,
	symbol		basins or other vessels
			containing water.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# **Specifications:**

220-240V~ 50/60Hz 1600--2000W