

# Tiffany

## 1.7L Electric Cordless Kettle

### User Manual

Model Number: TTK17



**READ AND SAVE THESE INSTRUCTIONS**

## IMPORTANT

---

Read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## IMPORTANT SAFEGUARDS

---

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT


WARNING!: - to reduce the risk of fire, electrical shock or injury to persons or property:

- Carefully read all instructions before operating the Tiffany kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle.
- To eliminate a choking hazard for young children, remove and discard the protective cover fitted to the power plug.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Do not place the kettle on or near a hot gas or electric burner/element or where it could touch a heated oven.
- Do not operate the appliance without any water in it to avoid damaging the heat elements
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water or other liquids.
- Do not operate the kettle on a sink or drain board.
- To protect against electric shock or personal injury, do not immerse kettle base, power base, power cord, or power plug in water or allow moisture to come into contact with these parts.
- While the water is boiling, or just after the water has been boiled, avoid contact with steam from the spout as it will scald.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Keep a minimum distance of 20cm.
- Do not place anything on top of the lid.
- Use caution when pouring water from the kettle; do not pour the water too quickly.
- Be careful when refilling a hot kettle.
- This kettle is not intended to be operated by means of an external timer or separate remote control system.
- Close supervision is necessary when any appliance is used by or near children.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- The kettle must be used only with the power base supplied.
- Extreme caution must be used when moving an appliance containing hot water.

- The kettle is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The use of accessory attachments, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Switch off and unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool completely before disassembling parts, and before cleaning the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Always ensure the lid is closed and do not lift it while the water is boiling, as scalding may occur.
- Do not fill the kettle past the MAX fill line.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance has no user serviceable parts. Any maintenance other than cleaning should be performed by a qualified person.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

## FEATURES

---

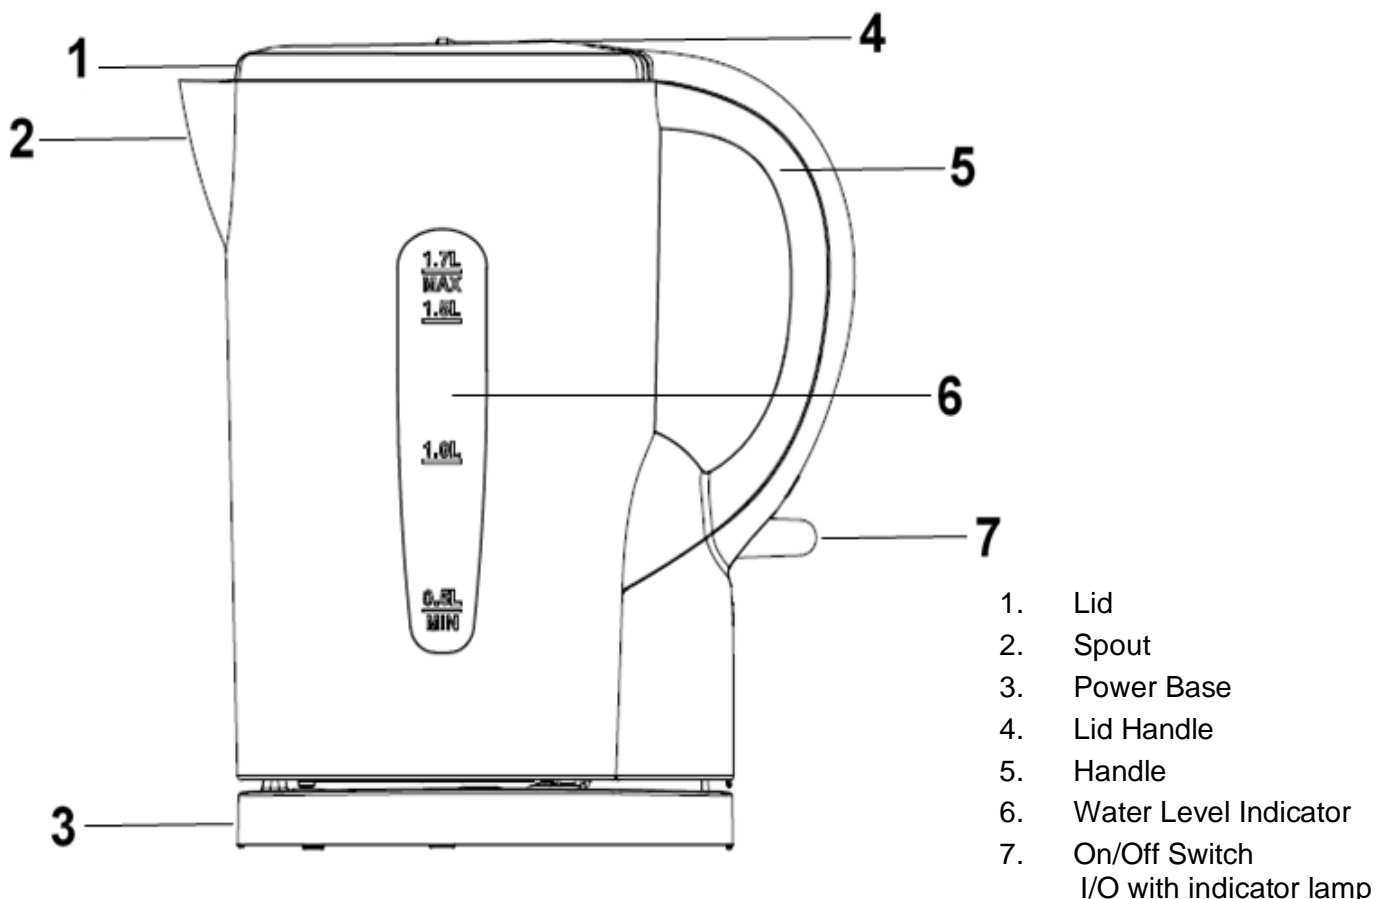

## BEFORE FIRST USE

---

Carefully remove your kettle from the box;

Fill to 'Max', boil, discard the water and then rinse. Do this three times, to remove any dust, residues etc from the kettle.

Wipe the external surface with a soft damp cloth.

## POSITIONING

---

- Put the power base on a stable, dry, level surface.
- The underside of the base is fitted with a cord storage feature. Unwind the length of cord required to reach the power outlet.
- Ensure the cord does not overhang, and cannot be caught or tripped over.

## FILLING

---

**CAUTION: If the kettle has just boiled, it will be full of steam. Keep hands clear, as steam may escape from the kettle when opening the lid.**

- Remove the kettle from the power base.
- Lift the lid.
- Fill the kettle with at least 2 cups of water, but do not fill above the 'Max' line.
- Replace the lid and place the kettle back on the power base. Make sure the lid is securely closed before boiling.

**NOTE: The water level should be between the MIN and MAX fill line.**

## SWITCHING ON

---

**CAUTION: Keep clear, as steam may escape from the spout when boiling.**

**NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.**

- Position the kettle on the power base.
- Plug the kettle into a power outlet and switch on.
- Press the On/Off switch, the kettle will begin to boil.

## BOIL-DRY PROTECTION

---

Using the kettle with insufficient water will shorten the life span of the element.

Should you accidentally switch on an empty kettle, the safety boil-dry cut-out will switch the kettle off. If this occurs, allow the kettle to cool down completely before filling with water.

## CARE & CLEANING

---

- Always disconnect the kettle from the power outlet and allow the kettle to cool completely before cleaning.
- Wipe the outside of the kettle with a damp cloth. You may use a little mild detergent to remove stubborn marks.
- Keep all connectors and sockets dry.
- Do not immerse the kettle or power base in water or any other liquid.
- Do not use harsh or abrasive cleaning agents or solvents.

### Cleaning the filter:

- The filter is located inside the kettle behind the spout.
- Open the lid and gently slide the filter out of the kettle.
- Rinse the filter in warm water and gently remove any scale with a soft brush.
- To replace the filter, slide it down into the slot until it clicks into place.

### Descaling:

- Lime scale may be white, coloured, even rusty looking.
- To receive the best performance from your kettle, descale it regularly.
- Add 25g of citric acid to the kettle and then fill to the 'Max' water line with water. Boil the kettle and leave it to stand for 15 minutes.
- A commercial descaler suitable for plastic products (most kettles have plastic parts) may be used. Follow the instructions provided with the descaler.
- After de-scaling, rinse several times, fill, boil and discard the water, to remove any chemical residue.

## SPECIFICATIONS

---

Model	Description	Voltage	Frequency	Wattage
TTK17	1.7L ELECTRIC CORDLESS KETTLE	220-240V~	50Hz	1850-2200W

## CUSTOMER SERVICE

---

### Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

[www.gafcontrol.com.au](http://www.gafcontrol.com.au)

\*This product may vary slightly to the product illustrated due to ongoing product development.