

# Tiffany

Instruction Manual

## 2 Slice Sandwich Maker

Model: T4SSM



**READ AND SAVE THESE INSTRUCTIONS**

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain if warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

---

## **BEFORE FIRST USE**

1. Read this manual thoroughly before using and save it for future reference.
2. Check that all accessories are complete, and the unit is not damaged.

## **IMPORTANT SAFEGUARDS**

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**


PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

WARNING! - to reduce the risk of fire, electrical shock or injury to persons or property:


### **WARNING!**

- Please read this Instruction Manual carefully before use.
- Keep these instructions; the guarantee certificate; the sales receipt; and if possible, the gift box with the inner packaging.
- Remove the mains plug from the mains supply whenever the SANDWICH MAKER is not in use.
- Under no circumstances must the SANDWICH MAKER be placed in water or other liquids.
- Test the SANDWICH MAKER and the cable regularly for damage. If there is damage of any kind, the SANDWICH MAKER should not be used.
- In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician or take the SANDWICH MAKER to an authorised service facility.
- Keep these instructions in a safe place for future reference.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

For indoor household use only.

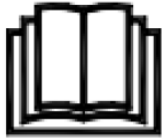

## KNOW YOUR SANDWICH MAKER

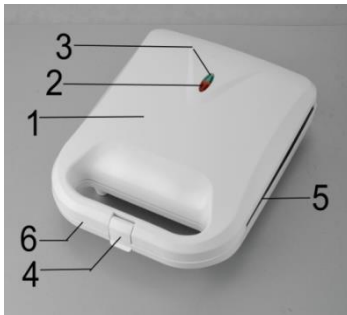

- |                                |                                     |
|--------------------------------|-------------------------------------|
| 1. Lacquered Phenolic Exterior | 4. Clip to Fasten Handles           |
| 2. Indicator Lights (Red)      | 5. Non-Stick Coated Toasting Plates |
| 3. Indicator Lights (Green)    | 6. Handles                          |

## USING THE SANDWICH MAKER

Before using the SANDWICH MAKER for the first time, peel off any adhesive labels.

Pour a teaspoon of vegetable oil onto the Non-Stick Coated Toasting Plates. Spread over using an absorbent kitchen towel and wipe off any excess oil.

The SANDWICH MAKER may give off a slight odour and smoky haze when used for the first time. This is normal.

## CONNECTING TO THE MAINS SUPPLY / PREHEATING

Connect the mains plug to the mains supply, the Red and Green Indicator Lights illuminates immediately. As soon as the Green Indicator Light go off (after about 4-5 minutes), the preheating time is complete, and toasting can commence.

## **TOASTING**

Prepare the Sandwich as directed in the recipe and place the bread, buttered side down, on The Bottom Non-Stick Toasting Cooking Plate for Sandwich making.

Lower the Top Non-Stick Coated Toasting Plate and use the Clip to fasten the Handles.

Toast for approx. 3 to 6 minutes or until golden brown.

Adjust the time to suit an individual taste.

It is normal for the Indicator Lights to switch on and off during use.

## **HINTS FOR GOOD RESULTS**

For best results, use medium sliced bread with or without crusts. Remember to increase the cooking time slightly for thick sliced bread and to reduce slightly for the thin sliced bread.

Brown bread can also be used but the toasting time may differ.

Toast sliced bread that fits the SANDWICH MAKER or cut the bread to fit. (Any leftover pieces can be made into breadcrumbs).

Use only butter or ordinary margarine when preparing toasted sandwiches. Synthetic or low-fat spreads are unsuitable as they overheat at a lower temperature, forming dark brown deposits that can cause the toasted sandwich to stick to the Non-Stick Coated Toasting Plates.

Unlike conventional sandwiches, the bread is buttered on the outside. Take care not to use too much filling otherwise it will leak from the toasted sandwiches.

Avoid using delicate salad fillings which will soften when toasted such as lettuce and cucumber. Salad items such as tomatoes and onions give good results.

## **CARE AND CLEANING**

**Remove the mains plug from the mains supply.**

**NOTE: NEVER IMMERSE THE SANDWICH MAKER IN WATER.**

Allow to cool with the Top Non-Stick Coated Toasting Plate open.

Wipe the Non-Stick Coated Toasting Plates with a cloth rinsed in hot water and washing-up liquid.

Never use hard abrasive powders, wire wool or hard abrasive scourers. Sponge scourers sold for use on non-stick pans, called non-stick sponge scourers, can safely be used.

Wipe dry with a clean cloth and an absorbent kitchen towel.

## Appendix

Technical Specification :

Working Voltage: AC 220-240V

Frequency: 50-60Hz

Heating Tube Power: 1500W

## RECYCLING

---

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.



## CUSTOMER SERVICE

---

### Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

[www.gafcontrol.com.au](http://www.gafcontrol.com.au)

\*This product may vary slightly to the product illustrated due to ongoing product development.